


**SIEMENS**

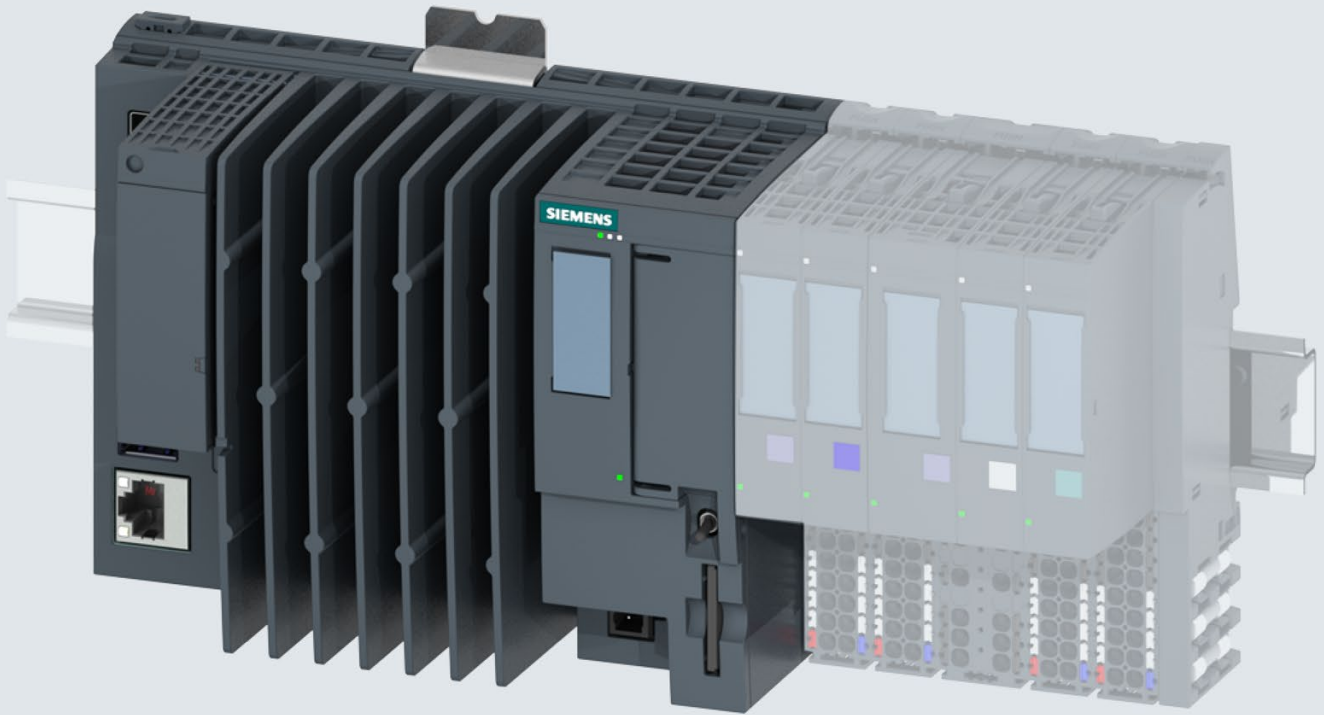

Manual

**SIMATIC**

**ET 200SP Open Controller**

CPU 1515SP PC2 (F/T/TF)

Edition

09/2018

[support.industry.siemens.com](https://support.industry.siemens.com)

# SIEMENS

## SIMATIC

### ET 200SP Open Controller CPU 1515SP PC2 (F/T/TF)




#### Operating Instructions

<u>Introduction</u>	<b>1</b>
<u>Safety information</u>	<b>2</b>
<u>Areas of application</u>	<b>3</b>
<u>Product overview</u>	<b>4</b>
<u>Application planning</u>	<b>5</b>
<u>Installation</u>	<b>6</b>
<u>Wiring</u>	<b>7</b>
<u>Commissioning</u>	<b>8</b>
<u>Interrupt, error and system messages</u>	<b>9</b>
<u>Functions</u>	<b>10</b>
<u>Maintenance</u>	<b>11</b>
<u>Technical specifications</u>	<b>12</b>
<u>Dimension drawings</u>	<b>13</b>
<u>Spare parts/accessories</u>	<b>14</b>
<u>Appendix</u>	<b>A</b>
<u>List of abbreviations</u>	<b>B</b>

## Legal information

### Warning notice system

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to property damage have no safety alert symbol. These notices shown below are graded according to the degree of danger.

 <b>DANGER</b>
indicates that death or severe personal injury <b>will</b> result if proper precautions are not taken.
 <b>WARNING</b>
indicates that death or severe personal injury <b>may</b> result if proper precautions are not taken.
 <b>CAUTION</b>
indicates that minor personal injury can result if proper precautions are not taken.
<b>NOTICE</b>
indicates that property damage can result if proper precautions are not taken.


If more than one degree of danger is present, the warning notice representing the highest degree of danger will be used. A notice warning of injury to persons with a safety alert symbol may also include a warning relating to property damage.

### Qualified Personnel

The product/system described in this documentation may be operated only by **personnel qualified** for the specific task in accordance with the relevant documentation, in particular its warning notices and safety instructions. Qualified personnel are those who, based on their training and experience, are capable of identifying risks and avoiding potential hazards when working with these products/systems.

### Proper use of Siemens products

Note the following:

 <b>WARNING</b>
Siemens products may only be used for the applications described in the catalog and in the relevant technical documentation. If products and components from other manufacturers are used, these must be recommended or approved by Siemens. Proper transport, storage, installation, assembly, commissioning, operation and maintenance are required to ensure that the products operate safely and without any problems. The permissible ambient conditions must be complied with. The information in the relevant documentation must be observed.

### Trademarks

All names identified by ® are registered trademarks of Siemens AG. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

### Disclaimer of Liability

We have reviewed the contents of this publication to ensure consistency with the hardware and software described. Since variance cannot be precluded entirely, we cannot guarantee full consistency. However, the information in this publication is reviewed regularly and any necessary corrections are included in subsequent editions.

# Table of contents

<b>1</b>	<b>Introduction</b> .....	<b>6</b>
1.1	Documentation on CPU 1515SP PC2 .....	8
1.2	Information about third-party software updates .....	12
1.3	Notes on protecting administrator accounts .....	12
<b>2</b>	<b>Safety information</b> .....	<b>13</b>
2.1	Security information .....	13
2.2	General safety instructions .....	14
2.3	Notes on use .....	16
<b>3</b>	<b>Areas of application</b> .....	<b>17</b>
3.1	Areas of application of fail-safe CPUs .....	17
3.2	Areas of application of technology CPUs .....	17
<b>4</b>	<b>Product overview</b> .....	<b>18</b>
4.1	Field of application .....	18
4.2	Characteristics .....	19
4.3	Sample configuration .....	20
4.4	Components.....	22
4.5	Operator controls and connection elements.....	24
4.6	Scope of delivery .....	27
<b>5</b>	<b>Application planning</b> .....	<b>28</b>
5.1	Basics.....	28
5.2	Unpacking the device.....	29
5.3	Identification data.....	30
5.4	Installation location .....	31
5.5	Hardware configuration.....	33
<b>6</b>	<b>Installation</b> .....	<b>34</b>
6.1	Installing the device .....	34
<b>7</b>	<b>Wiring</b> .....	<b>36</b>
7.1	Notes on connection .....	36
7.2	Terminal and block diagram .....	37
7.3	Electrical configuration.....	38
7.4	Connecting devices to networks .....	40

7.5	Securing cables.....	41
<b>8</b>	<b>Commissioning .....</b>	<b>42</b>
8.1	Notes on commissioning.....	42
8.2	Basic commissioning procedure .....	43
8.2.1	Requirements.....	43
8.2.2	Preparing commissioning.....	43
8.2.3	Commissioning procedure .....	43
8.3	Initial commissioning an open controller.....	45
8.3.1	Creating the configuration of the Open Controller .....	45
8.3.2	Setting the IP address.....	46
8.3.3	Changing the properties of the S7-1500 Software Controller .....	46
8.3.4	Establishing the HMI connection.....	47
8.3.5	Downloading a project to the target system.....	47
8.3.6	Transferring license keys .....	48
8.3.7	Switching the Open Controller on/off .....	50
<b>9</b>	<b>Interrupt, error and system messages .....</b>	<b>51</b>
9.1	Status and error display .....	51
<b>10</b>	<b>Functions.....</b>	<b>54</b>
10.1	Monitoring functions.....	54
10.1.1	Requirements.....	54
10.1.2	Temperature monitoring.....	55
10.1.3	Monitoring drives.....	55
10.1.4	Operating hours counter .....	55
10.2	Retentive memory NVRAM.....	55
10.3	BIOS setup.....	56
10.4	Power options .....	56
10.5	"Unified Write Filter (UWF)" write filter.....	57
<b>11</b>	<b>Maintenance.....</b>	<b>58</b>
11.1	Backing up and restoring data .....	58
11.2	Partitions in the delivery state .....	59
11.3	Restoring the delivery state .....	60
11.4	Updating software .....	62
11.5	Windows 10 IoT Enterprise (64-bit) .....	62
11.6	Sending the device to customer service .....	63
11.7	Removing and inserting the CFast card .....	64
11.8	Recycling and disposal .....	65
<b>12</b>	<b>Technical specifications .....</b>	<b>66</b>
12.1	Standards and approvals .....	66
12.2	Electromagnetic compatibility .....	71
12.3	Shipping and storage conditions.....	73

12.4	Mechanical and climatic ambient conditions .....	74
12.5	Information on insulation, protection class, degree of protection and rated voltage .....	76
12.6	Use of the ET 200SP in zone 2 potentially explosive atmospheres .....	77
12.7	Module data .....	78
12.7.1	Technical specifications of CPU 1515SP PC2 - basic device .....	78
12.7.2	Technical specifications CPU 1515SP PC2 .....	81
12.7.3	Technical specifications of CPU 1515SP PC2 + HMI 128PT .....	85
12.7.4	Technical specifications of CPU 1515SP PC2 + HMI 512PT .....	89
12.7.5	Technical specifications of CPU 1515SP PC2 + HMI 2048PT .....	93
12.7.6	Technical specifications of CPU 1515SP PC2 F .....	97
12.7.7	Technical specifications of CPU 1515SP PC2 F + HMI 128PT.....	101
12.7.8	Technical specifications of CPU 1515SP PC2 F + HMI 512PT.....	105
12.7.9	Technical specifications of CPU 1515SP PC2 F + HMI 2018PT.....	109
12.7.10	Technical specifications of CPU 1515SP PC2 T .....	113
12.7.11	Technical specifications of CPU 1515SP PC2 TF .....	117
12.7.12	S7-1500 Software Controller CPU 1505SP (F/T/TF).....	120
<b>13</b>	<b>Dimension drawings.....</b>	<b>121</b>
13.1	CPU 1515SP PC2.....	121
<b>14</b>	<b>Spare parts/accessories.....</b>	<b>123</b>
14.1	Accessories/spare parts.....	123
<b>A</b>	<b>Appendix.....</b>	<b>124</b>
A.1	Siemens Industry Online Support.....	124
A.2	Industry Mall.....	124
A.3	Troubleshooting .....	125
<b>B</b>	<b>List of abbreviations .....</b>	<b>126</b>
B.1	Abbreviations .....	126
	<b>Glossary .....</b>	<b>128</b>
	<b>Index.....</b>	<b>131</b>

# Introduction

## Purpose of the documentation

These operating instructions supplement the system manual ET 200SP distributed I/O system. Functions that generally relate to the system are described in this manual.

The information provided in these operating instructions and in the system/function manuals supports you in commissioning the CPU 1515SP PC2.

## Basic knowledge required

The system must be operated and used by qualified staff only.  
The following knowledge is required:

- Installation guideline for SIMATIC ET 200SP
- Totally Integrated Automation Portal, in particular:
  - Hardware configuration with *hardware and network editor*
  - Communication between CPUs
- PC based automation with an S7-1500 software controller and with WinCC Runtime Advanced
- Basic knowledge of fail-safe automation systems
- Basic knowledge of PC technology
- Windows 10 IoT Enterprise operating system (64-bit)

## Conventions

STEP 7: In this documentation, "STEP 7" is used as a synonym for all versions of the configuration and programming software "STEP 7 (TIA Portal)".

"CPU1515SP PC2 T" means that the respective section applies **only** to the "CPU 1515SP PC2 T".

"CPU1515SP PC2 F" means that the respective section applies **only** to the "CPU 1515SP PC2 F".

"CPU1515SP PC2 TF" means that the respective section applies **only** to the "CPU 1515SP PC2 TF".

"CPU 1515SP PC2" also includes "CPU1 515SP PC2 F", "CPU 1515SP PC2 T" and "CPU 1515SP PC2 TF".

Please also observe notes marked as follows:

---

### Note

A note contains important information on the product described in the documentation, on the handling of the product or on the section of the documentation to which particular attention should be paid.

---

## Scope of validity of the documentation

This documentation is valid for the following products:

ET 200SP Open Controller	Article number
Standard CPU	
• CPU 1515SP PC2 basic device	6ES7677-2DB40-0AA0
• CPU 1515SP PC2	6ES7677-2DB42-0GB0
• CPU 1515SP PC2 + HMI 128PT	6ES7677-2DB42-0GK0
• CPU 1515SP PC2 + HMI 512PT	6ES7677-2DB42-0GL0
• CPU 1515SP PC2 + HMI 2048PT	6ES7677-2DB42-0GM0
Fail-safe CPUs	
• CPU 1515SP PC2 F	6ES7677-2SB42-0GB0
• CPU 1515SP PC2 F + HMI 128PT	6ES7677-2SB42-0GK0
• CPU 1515SP PC2 F + HMI 512PT	6ES7677-2SB42-0GL0
• CPU 1515SP PC2 F + HMI 2048PT	6ES7677-2SB42-0GM0
Technology CPUs	
• CPU 1515SP PC2 T	6ES7677-2VB42-0GB0
Fail-safe technology CPUs	
• CPU 1515SP PC2 TF	6ES7677-2WB42-0GB0




## 1.1 Documentation on CPU 1515SP PC2

The following additional documentation is required to use the CPU 1515SP PC2:

- Operating instructions CPU 1505SP (F/T/TF), CPU 1507S (F) Version 2.5 (<http://support.automation.siemens.com/WW/view/en/109740725>)
- STEP 7 and WinCC Engineering V15 system manual (<https://support.industry.siemens.com/cs/ww/en/view/109755202>)
- ET 200SP distributed I/O system manual (<http://support.automation.siemens.com/WW/view/en/58649293>)
- ET 200SP server module manual (<http://support.automation.siemens.com/WW/view/en/63257531>)
- SIMATIC Safety - Configuring and Programming (<http://support.automation.siemens.com/WW/view/en/54110126>)
- SIMATIC S7-1200/S7-1500 F-CPUs (<http://support.automation.siemens.com/WW/view/en/109478599>)

The documentation for the SIMATIC ET 200SP distributed I/O system is arranged into three areas.

This arrangement enables you to access the specific content you require.

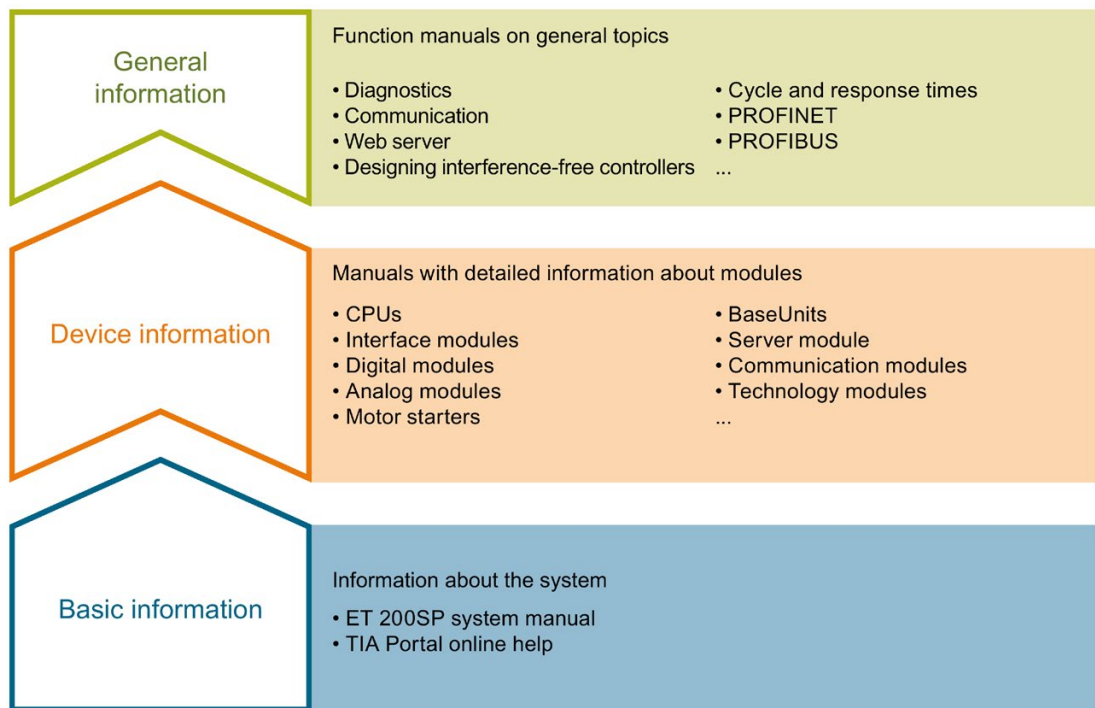

### Basic information

The system manual describes in detail the configuration, installation, wiring and commissioning of the SIMATIC ET 200SP distributed I/O system. The STEP 7 online help supports you in the configuration and programming.

### Device information

Product manuals contain a compact description of the module-specific information, such as properties, wiring diagrams, characteristics and technical specifications.

### General information

The function manuals contain detailed descriptions on general topics regarding the SIMATIC ET 200SP distributed I/O system, e.g. diagnostics, communication, Web server, motion control and OPC UA.

You can download the documentation free of charge from the Internet (<http://w3.siemens.com/mcims/industrial-automation-systems-simatic/en/manual-overview/tech-doc-et200/Pages/Default.aspx>).

Changes and supplements to the manuals are documented in a Product Information.

You can download the product information free of charge from the Internet (<https://support.industry.siemens.com/cs/us/en/view/73021864>).

## Manual Collection ET 200SP

The Manual Collection contains the complete documentation on the SIMATIC ET 200SP distributed I/O system gathered together in one file.

You can find the Manual Collection on the Internet (<http://support.automation.siemens.com/WW/view/en/84133942>).

## "mySupport"

With "mySupport", your personal workspace, you make the most of your Industry Online Support.

In "mySupport" you can store filters, favorites and tags, request CAx data and put together your personal library in the Documentation area. Furthermore, your data is automatically filled into support requests and you always have an overview of your current requests.

You need to register once to use the full functionality of "mySupport".

You can find "mySupport" in the Internet (<https://support.industry.siemens.com/My/ww/en>).

## "mySupport" - Documentation

In the Documentation area of "mySupport", you have the possibility to combine complete manuals or parts of them to make your own manual.

You can export the manual in PDF format or in an editable format.

You can find "mySupport" - Documentation in the Internet (<http://support.industry.siemens.com/My/ww/en/documentation>).

## "mySupport" - CAx Data

In the CAx Data area of "mySupport", you can have access the latest product data for your CAx or CAe system.

You configure your own download package with a few clicks.

In doing so you can select:

- Product images, 2D dimension drawings, 3D models, internal circuit diagrams, EPLAN macro files
- Manuals, characteristics, operating manuals, certificates
- Product master data

You can find "mySupport" - CAx Data in the Internet (<http://support.industry.siemens.com/my/ww/en/CAxOnline>).

## Application examples

The application examples support you with various tools and examples for solving your automation tasks. Solutions are shown in interplay with multiple components in the system - separated from the focus in individual products.

You can find the application examples on the Internet (<https://support.industry.siemens.com/sc/ww/en/sc/2054>).

## TIA Selection Tool

With the TIA Selection Tool, you can select, configure and order devices for Totally Integrated Automation (TIA).

This tool is the successor of the SIMATIC Selection Tool and combines the known configurators for automation technology into one tool.

With the TIA Selection Tool, you can generate a complete order list from your product selection or product configuration.

You can find the TIA Selection Tool on the Internet (<http://w3.siemens.com/mcms/topics/en/simatic/tia-selection-tool>).

## SIMATIC Automation Tool

You can use the SIMATIC Automation Tool to run commissioning and maintenance activities simultaneously on various SIMATIC S7 stations as a bulk operation independently of the TIA Portal.

The SIMATIC Automation Tool provides a multitude of functions:

- Scanning of a PROFINET/Ethernet network and identification of all connected CPUs
- Address assignment (IP, subnet, gateway) and station name (PROFINET device) to a CPU
- Transfer of the data and the programming device/PC time converted to UTC time to the module
- Program download to CPU
- Operating mode switchover RUN/STOP
- Localization of the CPU by means of LED flashing
- Reading out CPU error information
- Reading the CPU diagnostic buffer
- Reset to factory settings
- Updating the firmware of the CPU and connected modules

You can find the SIMATIC Automation Tool on the Internet (<https://support.industry.siemens.com/cs/ww/en/view/98161300>).

## PRONETA

With SIEMENS PRONETA (PROFINET network analysis), you analyze the plant network during commissioning. PRONETA features two core functions:

- The topology overview independently scans PROFINET and all connected components.
- The IO check is a fast test of the wiring and the module configuration of a system.

You can find SIEMENS PRONETA on the Internet (<https://support.industry.siemens.com/cs/ww/en/view/67460624>).

## SINETPLAN

SINETPLAN, the Siemens Network Planner, supports you in planning automation systems and networks based on PROFINET. The tool facilitates professional and predictive dimensioning of your PROFINET installation as early as in the planning stage. In addition, SINETPLAN supports you during network optimization and helps you to exploit network resources optimally and to plan reserves. This helps to prevent problems in commissioning or failures during productive operation even in advance of a planned operation. This increases the availability of the production plant and helps improve operational safety.

The advantages at a glance

- Network optimization thanks to port-specific calculation of the network load
- Increased production availability thanks to online scan and verification of existing systems
- Transparency before commissioning through importing and simulation of existing STEP 7 projects
- Efficiency through securing existing investments in the long term and optimal exploitation of resources

You can find SINETPLAN on the Internet.

## 1.2 Information about third-party software updates

This product contains third-party software. Siemens accepts liability with respect to updates/patches for the third-party software only when these are distributed by Siemens in the context of a Software Update Service contract or officially approved by Siemens. Otherwise, updates/patches are installed at the user's own risk. You can find more information about our software update service offer under <http://w3.siemens.com/mcms/topics/en/simatic/licenses/software-update-service/Pages/Default.aspx>.

## 1.3 Notes on protecting administrator accounts

A user with administrator rights has extensive access and manipulation possibilities.

Therefore, make sure that the administrator account is adequately protected to prevent unauthorized changes. To do this, set secure passwords and use a standard user account for regular operation. Other measures, such as the use of security policies, should be applied as required.

# Safety information

## 2.1 Security information

Siemens provides products and solutions with industrial security functions that support the secure operation of plants, systems, machines and networks.

In order to protect plants, systems, machines and networks against cyber threats, it is necessary to implement – and continuously maintain – a holistic, state-of-the-art industrial security concept. Siemens' products and solutions constitute one element of such a concept.


Customers are responsible for preventing unauthorized access to their plants, systems, machines and networks. Such systems, machines and components should only be connected to an enterprise network or the internet if and to the extent such a connection is necessary and only when appropriate security measures (e.g. firewalls and/or network segmentation) are in place.

For additional information on industrial security measures that may be implemented, please visit (<https://www.siemens.com/industrialsecurity>).

Siemens' products and solutions undergo continuous development to make them more secure. Siemens strongly recommends that product updates are applied as soon as they are available and that the latest product versions are used. Use of product versions that are no longer supported, and failure to apply the latest updates may increase customers' exposure to cyber threats.

To stay informed about product updates, subscribe to the Siemens Industrial Security RSS Feed under (<https://www.siemens.com/industrialsecurity>).

## 2.2 General safety instructions

 <b>WARNING</b>
<b>Life-endangering voltage when control cabinet is open</b> If the device is installed in a control cabinet, areas or components can be under life-endangering voltage when the control cabinet is open. Contact with these areas or components may lead to death through electric shock. Switch off the power before opening the control cabinet.


If the device is operated in a machine in accordance with the machinery directive, the provisions of the guideline 2006/42/EC apply.

### Safe operation of a plant

<b>NOTICE</b>
<b>Protective measures</b> To ensure safe operation of a plant, you have to take suitable IT security measures, for example, network segmentation. Seal the cover to protect the CFast card with the operating system of the CPU 1515SP PC2 from unauthorized access. For more information on Industrial Security, refer to the Internet ( <a href="http://www.siemens.com/industrialsecurity">http://www.siemens.com/industrialsecurity</a> ).

If you have questions about whether it is permissible to install the device in the planned environment, please contact your service representative.

### Repairs

 <b>WARNING</b>
<b>Damage caused by opening the device</b> Unauthorized opening of and improper repairs to the device may result in substantial damage to equipment or endanger the user. Only authorized personnel are permitted to repair the device.

You can find more information on the repair in the section Sending device in for repair (Page 63).

## ESD guidelines

Modules containing electrostatic sensitive devices (ESDs) can be identified by the following label:



Strictly follow the guidelines mentioned below when handling modules which are sensitive to ESD:

- Before working with modules with ESD, you need to ensure that you are free of electrostatic charge (e.g. by touching a grounded object).
- All devices and tools must be free of static charge.
- Always pull the mains connector and disconnect the battery before installing or removing modules which are sensitive to ESD.
- Handle modules fitted with ESDs only by their edges.
- Do not touch any connector pins or conductors on modules containing ESDs.



## 2.3 Notes on use

### WARNING

#### Hazards at an unprotected machine or plant

According to the results of a risk analysis, hazards can occur at an unprotected machine. The hazards may lead to personal injury.

According to the risk analysis, the risk of injury to persons can be countered with the following measures:

- Additional protective equipment at the machine or plant. In this case, the programming, parameter assignment and wiring of the I/O used, in particular, must be performed in accordance with the safety criteria (SIL, PL or Cat.) ascertained by means of an appropriate risk analysis.
- Use of the device for its intended purpose, which can be established by performing a functional test on the plant. This allows errors in programming, parameter assignment and wiring to be detected.
- Documentation of the test results which can be entered, if required, into the relevant safety certificates.

### NOTICE

#### Ambient conditions

Ambient conditions for which the device is not suitable can lead to faults or damage the device.

Note the following:

- Only operate the device in enclosed areas. If you do not comply with this instruction, the warranty becomes void.
- Only operate the device in accordance with the ambient conditions given in the technical specifications.
- Protect the device from dust, moisture and heat.
- Do not expose the device to direct sunlight or other strong sources of light.
- The device must not be used in places with more difficult operating conditions through corrosive vapors or gases without taking additional protective measures, for example, supply of clean air.

## Areas of application

### 3.1 Areas of application of fail-safe CPUs

#### Areas of application

F-CPU's are mainly designed for personal and machine protection. In addition to the safety program, you can also program standard applications. You can operate the F-CPU's in safety mode or in standard mode.

#### Reference

Information on the use of F-CPU's in safety mode is available in the programming and operating manual SIMATIC Safety - Configuring and Programming (<http://support.automation.siemens.com/WW/view/en/54110126>).

You can find information on using the CPU 1505SP (F) Software Controller in the associated manual (<https://support.industry.siemens.com/cs/ww/en/view/109740725>) and in the F-product information (<https://support.industry.siemens.com/cs/ww/en/view/109478599>).

### 3.2 Areas of application of technology CPU's

#### Areas of application

Areas of application of T-CPU's are motion control applications such as gearing and camming as well as control of kinematics. Due to the supported technology functions, the S7-1500T CPU's are suitable for controlling packaging machines, converting applications, assembly automation, etc.

You can operate the TF-CPU's in safety mode or in standard mode.

#### Reference

You can find information on using the T-CPU's in the function manual SIMATIC S7-1500T Motion Control (<http://support.automation.siemens.com/WW/view/en/109749263>).

You can find information on using the T-CPU's in the function manual SIMATIC S7-1500T kinematics functions (<http://support.automation.siemens.com/WW/view/en/109749264>).

You can find information on using the F-CPU's and TF-CPU's in safety mode in the product information for SIMATIC S7-1200/S7-1500 F-CPU's (<http://support.automation.siemens.com/WW/view/en/109478599>).

## Product overview

### 4.1 Field of application

#### Article number

The article number depends on the pre-installed S7-1500 Software Controller and HMI Runtime.

You can find an overview of the article numbers in the section Scope of validity of the documentation (Page 6).

#### View of the module

The following figure shows the CPU 1515SP PC2:

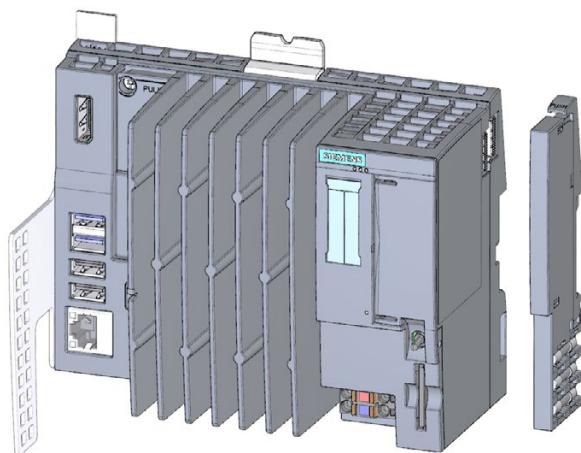


Figure 4-1 CPU 1515SP PC2 with supplied accessories

## 4.2 Characteristics

The CPU 1515SP PC2 is a PC-based automation device in the design of the ET 200SP. It is used for control and visualization purposes. The supplied IPC DiagBase software provides basic diagnostics functions and supports you in handling the BIOS.

### General characteristics

- A removable CFast card with the following pre-installations is used as storage medium:
  - Windows 10 IoT Enterprise operating system (64-bit)
  - S7-1500 Software Controller CPU 1505SP, CPU 1505SP F, CPU 1505SP T, CPU 1505SP TF
  - Optionally with HMI: WinCC Runtime Advanced as of V15
- Interfaces:
  - An interface for the exchangeable ET 200SP BusAdapters for connection of PROFINET IO (2 ports) Accessories/spare parts (Page 123)
  - An interface for connecting devices using Industrial Ethernet (Gigabit Ethernet)
  - 4 interfaces for USB devices (2 x USB 3.0 and 2 x USB 2.0)
  - A DisplayPort interface (DPP) for a monitor
  - A sealable slot for the CFast card
  - A slot for an SD/MMC card as additional optional drive
- Supply voltage 1L+ 24 V DC (SELV/PELV). The connection plug is included in the scope of delivery.
- The CPU 1515SP PC2 is suitable for use in industrial environments:
  - Compact design
  - Fan-less operation
  - High robustness
- The CPU 1515SP PC2 complies with IP 20 degree of protection and is intended for installation in a control cabinet.

### Additional information

You can find more information on the system versions and ordering options in the section Scope of validity of the documentation (Page 6).

## 4.3 Sample configuration

### Configuration

The CPU 1515SP PC2 is mounted on a mounting rail according to EN 60715. A modular system is formed with ET 200SP modules in the central rack. You can also expand the CPU 1515SP PC2 with fail-safe I/O modules.


You can use the CPU 1515SP PC2 as PROFINET IO controller. The PROFINET IO devices are connected via the ports of the X1 PN(LAN) interface using a SIMATIC BusAdapter.

Devices can be connected via Industrial Ethernet using the integrated interface X2 PN/IE(LAN).

The connection to PROFIBUS can be made using the DP master module.

## Sample configuration

The following figure shows a sample configuration with the CPU 1515SP PC2:

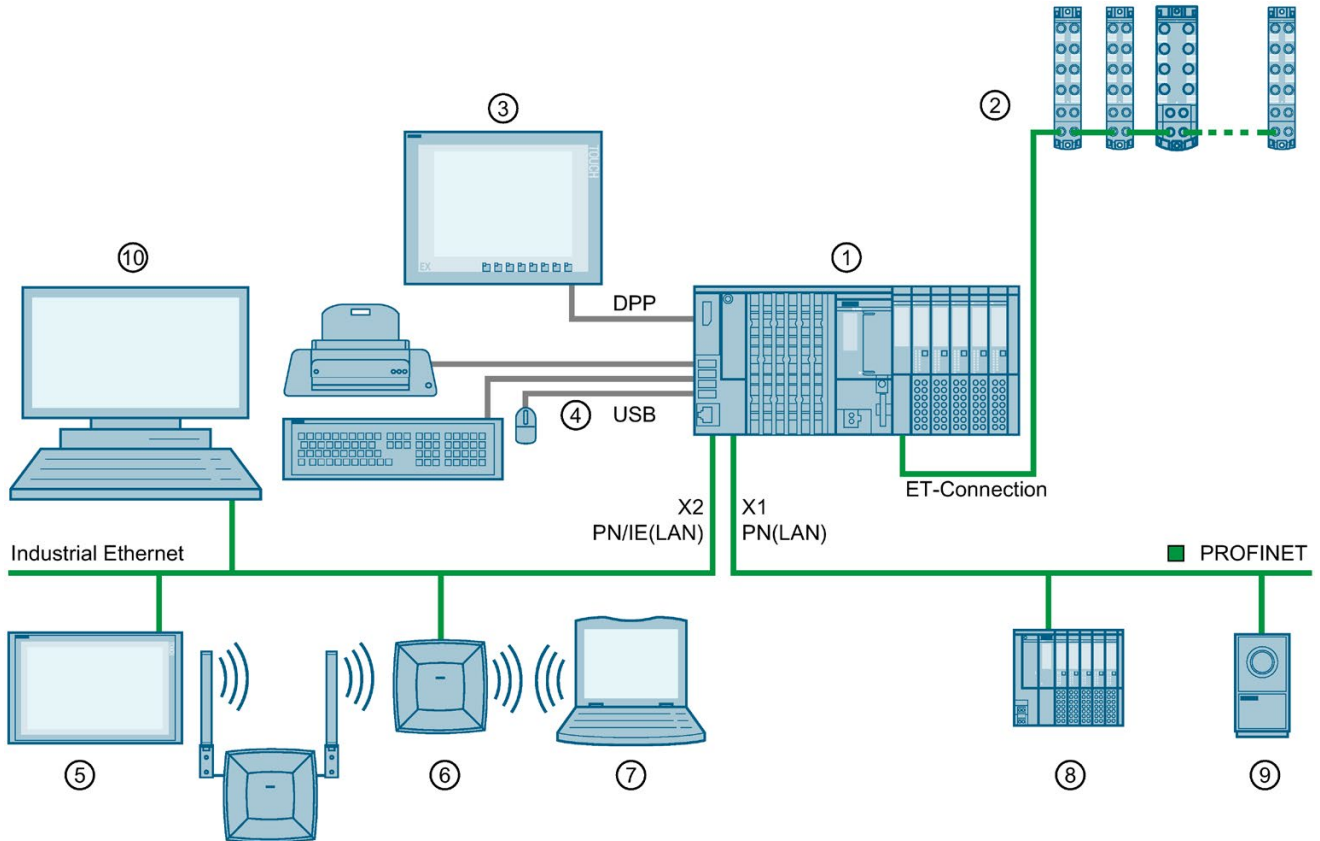

- ① CPU 1515SP PC2, I/O modules, server module, BusAdapter
- ② ET 200AL modules with ET-Connection
- ③ Flat Panel - Wide Screen Display
- ④ USB devices: Keyboard, mouse, printer ...
- ⑤ Industrial Thin Client ITC
- ⑥ SCALANCE W786
- ⑦ Field PG
- ⑧ PROFINET IO device
- ⑨ Camera
- ⑩ PC/Programming device

Figure 4-2 Configuration example with the CPU 1515SP PC2

## Reference

You can find more information about configuring the ET 200AL modules in the system manual ET 200AL distributed I/O system


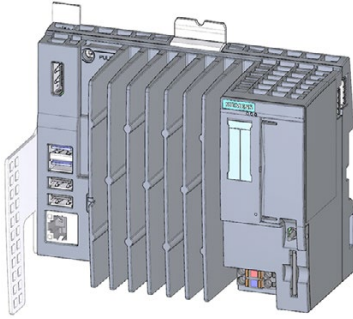
(<https://support.industry.siemens.com/cs/ww/en/view/89254965>).




## 4.4 Components

### Components of the CPU 1515SP PC2

The following table provides an overview of the components of the CPU 1515SP PC2:

Table 4- 1 Components of the CPU 1515SP PC2

Component	Function	Figure
Mounting rail in accordance with EN 60715	The mounting rail is the rack for the CPU 1515SP PC2.	
CPU 1515SP PC2	CPU with strain relief and white reference labels	

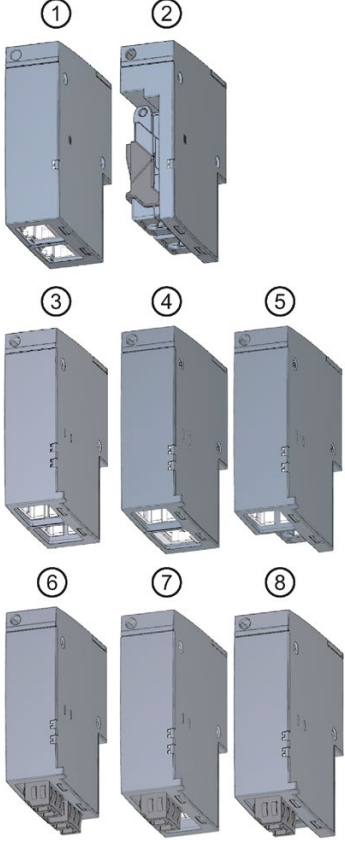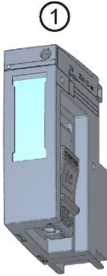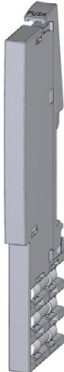
Component	Function	Figure
<p>BusAdapter</p>	<p>The BusAdapter allows free selection of the connection technology for PROFINET IO.</p> <p>The following versions are available for CPU 1515SP PC2:</p> <ul style="list-style-type: none"> <li>• For standard RJ45 connector (BA 2×RJ45) ①</li> <li>• For direct connection of the bus cable (BA 2×FC) ②</li> <li>• For POF/PCF fiber-optic cable (BA 2×SCRJ) ③</li> <li>• As media converter for POF/PCF fiber-optic cable ↔ standard RJ45 connector (BA SCRJ/RJ45) ④</li> <li>• As media converter for POF/PCF fiber-optic cable ↔ direct connection of the bus cable (BA SCRJ/FC) ⑤</li> <li>• For glass fiber-optic cable (BA 2×LC) ⑥</li> <li>• As media converter for glass fiber-optic cable ↔ standard RJ45 connector (BA LC/RJ45) ⑦</li> <li>• As media converter for glass fiber-optic cable ↔ direct connection of the bus cable (BA LC/FC) ⑧</li> </ul>	
	<p>For mixed configuration with an ET 200AL , you require the BusAdapter BA-Send 1xFC ① (plugged into the BaseUnit BU-Send). Connect the bus cable for ET-Connection to the BusAdapter BA-Send 1xFC.</p>	
<p>Server module</p>	<p>The server module completes the configuration of the CPU 1515SP PC2 with I/O modules. The server module is included in the CPU's scope of delivery.</p>	



## 4.5 Operator controls and connection elements

### View of the module

The following figure shows the operator controls and connection elements of the CPU 1515SP PC2:

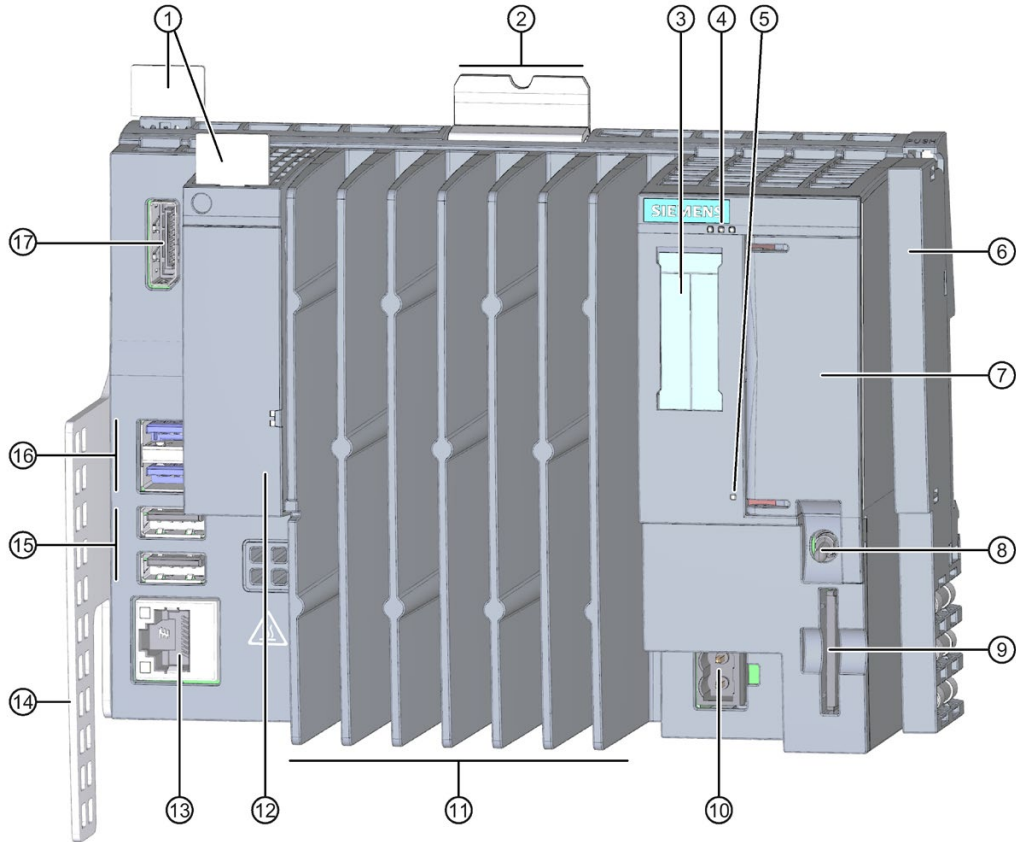

- ① Reference identification labels
- ② Mounting rail release
- ③ Labeling strips
- ④ LEDs for the current operating state and diagnostic status of the CPU 1505SP
- ⑤ Power LED
- ⑥ Server module
- ⑦ **X50:** Slot for the CFast card (flash memory), sealable
- ⑧ Mode selector
- ⑨ **X51:** Slot for an optional SD/MMC card
- ⑩ **X80:** Connector for 24 V DC supply voltage
- ⑪ Cooling fins
- ⑫ **X1 PROFINET (LAN):** Slot for BusAdapter for connection of PROFINET IO; Status display for PROFINET
- ⑬ **X2 PN/IE(LAN):** GbE Ethernet connection with integrated display
- ⑭ Strain relief
- ⑮ **X62, X63:** 2 x USB 2.0 ports
- ⑯ **X60, X61:** 2 x USB 3.0 ports
- ⑰ **X70:** DisplayPort interface (DPP)

Figure 4-3 View of the CPU 1515SP PC2

## Slot for CFast card

The operating system, Runtime software and project are installed on the supplied SIMATIC CFast card. The CFast card is the only mass storage device of the CPU 1515SP PC2.

---

### Note

#### Unauthorized access

Seal the cover of the slot to protect the CFast card with the operating system of the CPU 1515SP PC2 from unauthorized access and manipulation.

---

## Slot for SD/MMC card

You can use a SIMATIC SD or MMC card as additional storage drive. This drive can be used to store data via Windows, for example a backup, but not the operating system, the Runtime software or the project.

Permitted SD cards: SDHC up to 32 GB, SDXC up to 2 TB.

## USB connections

- 2 x USB 3.0 with  $I_{\max} = 1$  A per interface
- 2 x USB 2.0 with  $I_{\max} = 0.5$  A per interface

## MAC addresses

The MAC address consists of a 3-byte manufacturer ID and a 3-byte device ID (consecutive number).

Each device is already assigned four MAC addresses in the factory. The front of the CPU 1515SP PC2 is lasered with the MAC address 1 and 4. With the MAC addresses 2 and 3, the consecutive numbers are incremented. If, for example, the first MAC address is 08-00-06-6B-80-C0, the second MAC address is 08-00-06-6B-80-C1.

Table 4- 2 Assignment of the MAC addresses

	Assignment
<b>MAC address 1</b>	X2 PN/IE(LAN) <ul style="list-style-type: none"> <li>• Visible in STEP 7 for accessible devices</li> <li>• Lasered on the front of the CPU (start of the number range)</li> </ul>
<b>MAC address 2</b>	X1 PROFINET (LAN) <ul style="list-style-type: none"> <li>• Visible in STEP 7 for accessible devices</li> </ul>
<b>MAC address 3</b>	Port X1 P1 (required for LLDP, for example)
<b>MAC address 4</b>	Port X1 P2 R (required for LLDP, for example) <ul style="list-style-type: none"> <li>• Lasered on the front of the CPU (end of the number range)</li> </ul>

### Connector for supply voltage

The CPU 1515SP PC2 is equipped with a 2-pin connection terminal for the power supply.

The connection plug for the supply voltage is plugged in when the CPU is shipped from the factory.

### Mode selector

Use the mode selector to set the CPU operating mode.

Table 4-3 Mode selector positions

Position	Meaning	Description
RUN	Operating mode RUN <sup>1</sup>	The CPU is processing the user program.
STOP	Operating mode STOP <sup>1</sup>	The CPU is not processing the user program. The outputs are set to a "safe" state.
MRES	Memory reset	<b>For active S7-1500 software controller<sup>2</sup> only:</b> CPU memory reset

<sup>1</sup> RUN and STOP indicate the **selected** operating state. The RUN and STOP LEDs indicate the **actual** operating mode of the CPU 1515SP PC2.

<sup>2</sup> See manual S7-1500 Software Controller CPU 1505SP (F), CPU 1507S (F) Version 2

## 4.6 Scope of delivery

---

### Note

The device always comes with the **CPU 1515SP PC2** label with article number 6ES7677-2DB40-0AA0, regardless of the order options.

---

The following components are included in the scope of delivery of the CPUs:

- CPU 1515SP PC2 basic device
- Strain relief with fixing screws
- Server module
- CFast card with the following pre-installations:
  - Windows 10 IOT Enterprise operating system (64-bit)
  - S7-1500 Software Controller CPU 1505SP
  - Optional **only** for CPU 1515SP PC2/CPU 1515SP PC2 F: WinCC RT Advanced as of V15
- Restore USB stick for image restore
- Windows-Certificate of Authenticity (CoA)
- Certificate of License (CoL)
- **Only** for CPU 1515SP PC2 (F) with HMI and CPU 1515SP PC2 T/ TF: USB stick with SIMATIC license keys
- Product information

# Application planning

## 5.1 Basics

### Introduction

The CPU 1515SP PC2 is open equipment. This means you may only set up the CPU in enclosures, cabinets or electrical equipment rooms and in a dry environment (IP20 degree of protection). The housings, cabinets and electrical operating rooms must guarantee protection against electric shock and spread of fire. The requirements regarding mechanical strength must also be observed. The housings, cabinets, and electrical operating rooms must not be accessible without a key or tool. Access may only be possible for instructed or authorized personnel.

### Installation location

Install the CPU 1515SP PC2 in a suitable enclosure/control cabinet with at least IP54 degree of protection according to EN 60529 and take into consideration the ambient conditions for operating the devices.

### Installation position

You can install the ET 200SP distributed I/O system in any position. The preferred mounting position is horizontal mounting on a vertical wall.

Depending on the mounting position, restrictions on ambient temperature and maximum configuration apply to the CPU 1515SP PC2.

#### NOTICE

##### Damage to the modules

Modules can be damaged if exposed to ambient temperatures higher than permitted.

The following ambient temperatures must not be exceeded during operation:

- Horizontal mounting
  - 60 °C for an installation with up to 32 I/O modules.
  - 55 °C for an installation with up to 64 I/O modules.
- Vertical mounting
  - 50 °C for an installation with up to 32 I/O modules.

Additional information can be found in the section Mechanical and climatic environmental conditions (Page 74).

## 5.2 Unpacking the device

### When unpacking

When unpacking, make sure to check the following:

- Check packaging and contents for visible damage from transport. Damaged or incomplete devices should never be commissioned.
- Check the delivery for correctness and completeness.  
Please inform your Siemens contact partner should you notice any irregularities.
- Keep the supplied documentation and licenses. They belong to the device and are the proof that you have purchased the software preinstalled on the CFast card.  
Documentation and licenses are required for initial commissioning and for any questions that arise.
- Keep the original packaging in case the device needs to be transported again.
- Note the identification data (Page 30) of the device.

#### NOTICE

##### Damage to the device during transport and storage

If a device is transported or stored without packaging, it is unprotected from shocks, vibrations, pressure and moisture. Damaged packaging indicates that environmental conditions have already had a significant impact on the device.

The device might be damaged.

Do not dispose of the original packaging. Pack the device for transport and storage.

#### NOTICE

##### Damage to the device caused by condensation

If the device was exposed to low temperatures or extreme variations in temperature during transport, this may cause moisture to build up on or in the device (condensation). Please note the specified mechanical and climatic ambient conditions (Page 74).

Moisture can cause short-circuits in the electrical circuits and damage the device.

Proceed as follows to avoid damage:

- Store the device in dry conditions.
- Make sure it adapts to room temperature before commissioning.
- Do not expose the device to direct heat radiation from a heater.
- If condensation has developed, wait until the device is completely dry before you switch it on.

 **WARNING**

**Electric shock and fire hazard from damaged device**

A damaged device can carry dangerous voltage and trigger a fire in the machine or plant. A damaged device has unpredictable properties and states.

Death or severe injury could occur.

Make sure that the damaged device is not installed and commissioned accidentally. Label the damaged device correspondingly and keep it locked up. Have the device repaired without delay.

## 5.3 Identification data

The identification data can be used to clearly identify the device when a repair is necessary.

Note the following data:

- Printed on the nameplate of the device, please find the following information:
  - Article number
  - Serial number
  - The first and the last MAC address
- Depending on the scope of delivery, the "Certificate-of-License" is provided as proof of license. This document is valid for the following product:
  - S7-1500 Software Controller CPU 1505SP
  - S7-1500 Software Controller CPU 1505SP F/T/TF
  - WinCC Runtime Advanced V15
- The "Microsoft Windows Product Key" can be found on the "Certificate of Authenticity" label.

## 5.4 Installation location

### Introduction

Install the CPU 1515SP PC2 in a suitable housing/control cabinet with sufficient mechanical strength, fire protection and at least IP54 degree of protection according to EN 60529, and take into consideration the ambient conditions for operating the devices.

### Mounting rail

You must ground the mounting rail separately in the control cabinet. Exception: If you install the rail on grounded, zinc-plated mounting plates, there is no need to ground the rail separately.

---

#### Note

If the ET 200SP distributed I/O system is exposed to vibration and shock loads, both ends of the ET 200SP system assembly must be mechanically fixed to the mounting rail (e.g using 8WA1010-1PH01 ground terminals). This measure prevents the ET 200SP from shifting to the side.

---

#### Note

If the ET 200SP distributed I/O system is exposed to high vibration and shock load, we recommend that you screw the mounting rail to the mounting surface at intervals of approx. 200 mm.

---

Suitable surface finishes are:

- Steel strip in accordance with Appendix A of EN 60715 or
- Tinned steel strip. We recommend the use of the mounting rails in section (Page 123).

---

#### Note

##### Mounting rails of other manufacturers

If you use mounting rails from other manufacturers, ensure that they have the properties required for your climatic and mechanical ambient conditions.

---



### Minimum clearances

Make sure to maintain the following minimum clearances when installing the CPU 1515SP PC2.

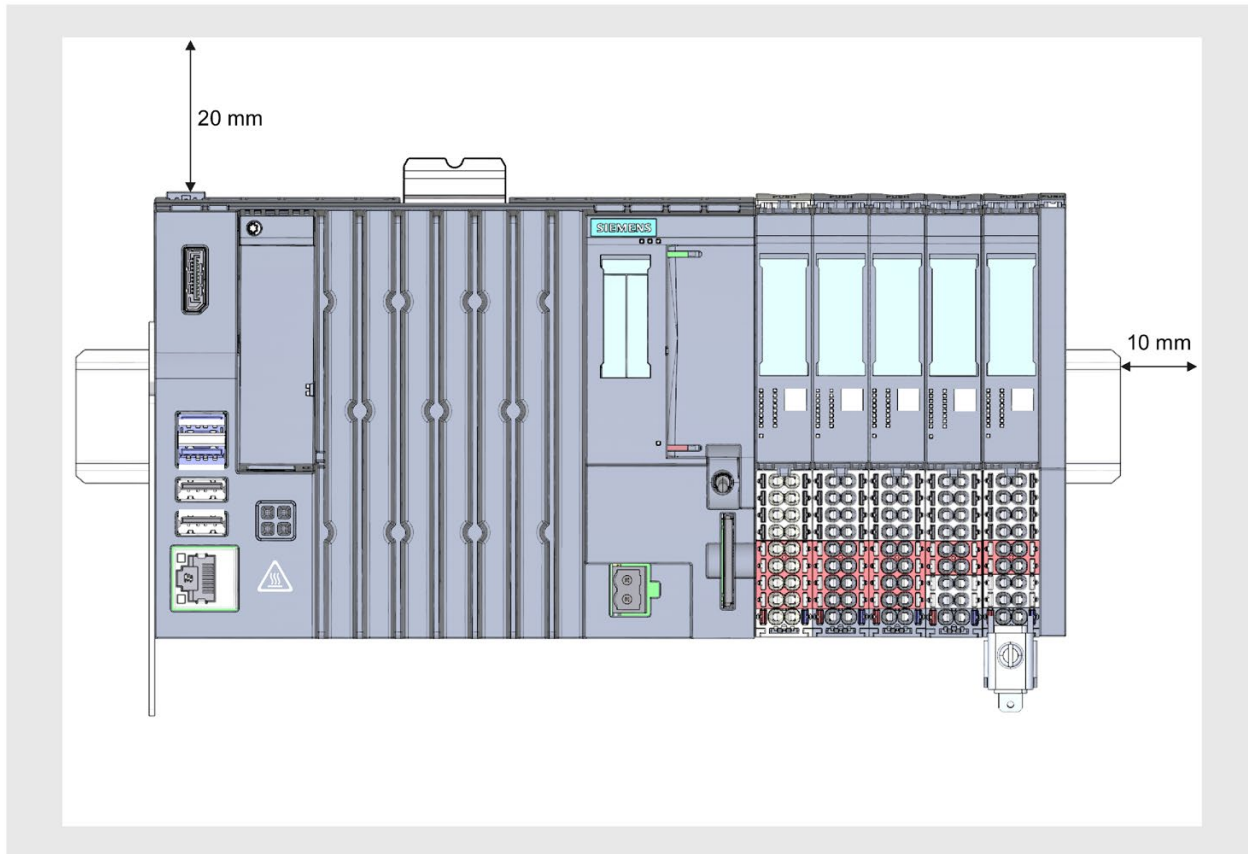


Figure 5-1 Minimum clearances

### Installation rules

- After the CPU 1515SP PC2, there is a BaseUnit BU..D with incoming supply voltage L+ (light-colored terminal box).
- This is followed by BaseUnits BU..B (with dark-colored terminal box).
- The respective corresponding I/O modules can be connected to the BaseUnits. Suitable combinations of BaseUnits and I/O modules can be found in the ET 200SP System Manual (<http://support.automation.siemens.com/WW/view/en/84133942>).
- The server module completes the installation.

---

### Note

Install the CPU 1515SP PC2 only with disconnected supply voltage.

---

## 5.5 Hardware configuration

As soon as one of the following rules applies, the maximum configuration has been reached.

### Maximum mechanical configuration

Backplane bus length: Maximum 1 m mounting width (without CPU 1515SP PC2, including server module)

### Electrical maximum configuration

The number of operable I/O modules of a potential group is limited by the

- Power consumption of the I/O modules
- Power consumption of the components supplied via these I/O modules

The maximum current-carrying capability of the terminals on the BaseUnit L+/ground is 10 A.

### USB load

When using the CPU 1515SP PC2 with the maximum configuration, the USB load must also be considered:

- Horizontal mounting
  - Ambient temperature of 0 to 60 °C with maximum 32 I/O modules **and** 4 x low-current (500 mA) USB load
  - Ambient temperature of 0 to 55 °C with maximum 64 I/O modules **and** 2 x high-current (900 mA) + 2 x low-current (500 mA) USB load
- Vertical mounting
  - Ambient temperature of 0 to 50 °C with maximum 32 I/O modules **and** 4 x low-current (500 mA) USB load

### Address space

The address space is predefined. However, you can adjust the address space in the user program.

# Installation

## 6.1 Installing the device

### Requirements

The mounting rail is fitted.

### Required tools

3 to 3.5 mm screwdriver (only to fix the strain relief and dismantle the BusAdapter)

### Fixing strain relief

Fix the strain relief to the top and bottom of the left-hand side of the CPU 1515SP PC2 with the supplied screws.

### Installing the CPU 1515SP PC2

1. Install the CPU on the mounting rail.
2. Swivel the CPU back until you hear the mounting rail release click into place
3. To check that the CPU has correctly clicked into place, pull on the underside of the enclosure.

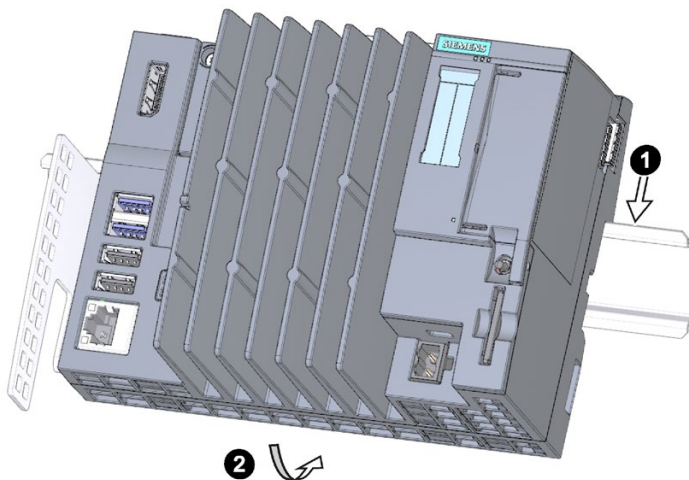


Figure 6-1 Installing the CPU 1515SP PC2

## Uninstalling the CPU 1515SP PC2

The BaseUnits with the I/O modules are located to the right of the CPU 1515SP PC2:

1. Switch off the supply voltage on the CPU.
2. Press the mounting rail release button on the first BaseUnit and, at the same time, move the CPU parallel to the left until it comes off the rest of the module group.

Note: The mounting rail release button is located above the CPU.

3. While pressing the mounting rail release button on the CPU, swivel the CPU out of the mounting rail.

---

### **Note**

It is not necessary to remove the BusAdapter from the CPU 1515SP PC2.

---

## 7.1 Notes on connection

---

### Note

#### Rules and regulations for operation

Observe the information contained in the *Wiring* section in the system manual ET 200SP distributed I/O system (<http://support.automation.siemens.com/WW/view/en/84133942>) and in the function manual *Designing interference-free controllers function manual* (<http://support.automation.siemens.com/WW/view/en/59193566>).

---

### NOTICE

#### Risk of hazardous system states

If you remove and insert I/O devices with the supply voltage switched on, this can result in hazardous system states.

Injury to persons and damage to the machine or plant could result.


Therefore, I/O devices can only be inserted and removed when the supply voltage is switched off.

Only connect I/O devices which are suitable for use in industrial environments according to EN 61000-6-2 / IEC 61000-6-2.

## 7.2 Terminal and block diagram

### Block diagram

The following figure shows the block diagram for the CPU 1515SP PC2.

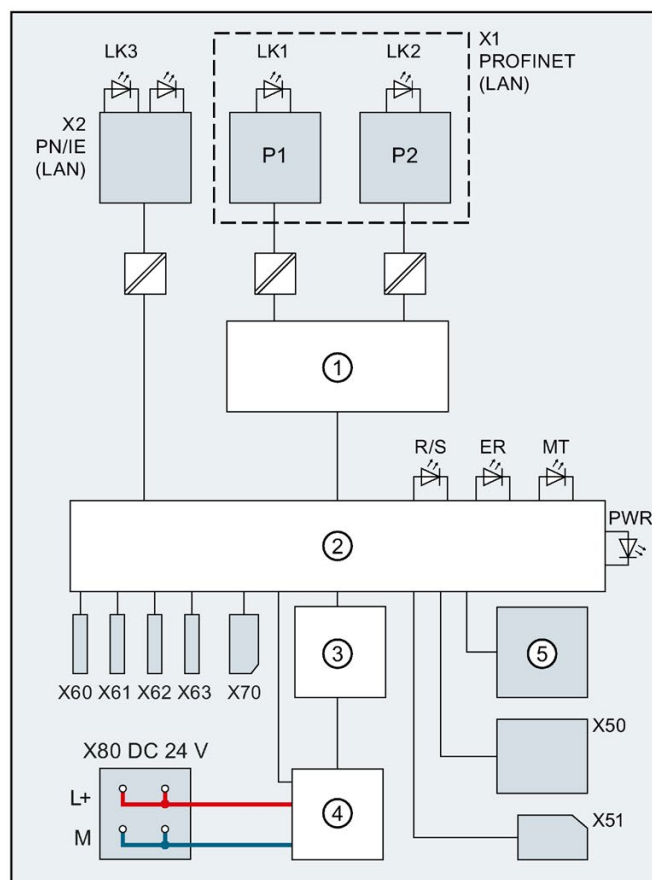

①	Switch	X1 PN(LAN)	PROFINET interface X1
②	Electronics	P1	PROFINET interface X1 Port 1
③	Backplane bus interface	P2	PROFINET interface X1 Port 2
④	Internal supply voltage	L+	24 V DC supply voltage
⑤	Mode selector	M	Ground
X50	CFAST card	LK1, LK2	LED Link TX/RX
X51	SD/MMC card	LK3	LED Link
X60, X61	USB 3.0 interfaces, max. 0.9 A	R/S	RUN/STOP LED (yellow/green)
X62, X63	USB 2.0 interfaces, max. 0.5 A	ER	ERROR LED (red)
X70	DPP interface	MT	MAINT LED (yellow)
X80 24 V DC	Infeed of supply voltage	PWR	POWER LED (yellow/green)
X2 PN/IE(LAN)	Ethernet interface X2		

Figure 7-1 Block diagram for the CPU 1515SP PC2

## 7.3 Electrical configuration

### Non-isolated configuration

---


**Note**

Unlike the ET 200SP distributed I/O system, the CPU 1515SP PC2 can only be operated with a non-isolated configuration.

---

The following figure shows the overall configuration of a CPU 1515SP PC2 with power supply from a TN-S system. The power supply supplies the CPU 1515SP PC2 and the load circuit for the 24 V DC modules.

For the CPU 1515SP PC2, there is a fixed connection between the ground infeed terminal and the contact springs to the mounting rail. You must ground the mounting rail separately in the control cabinet.

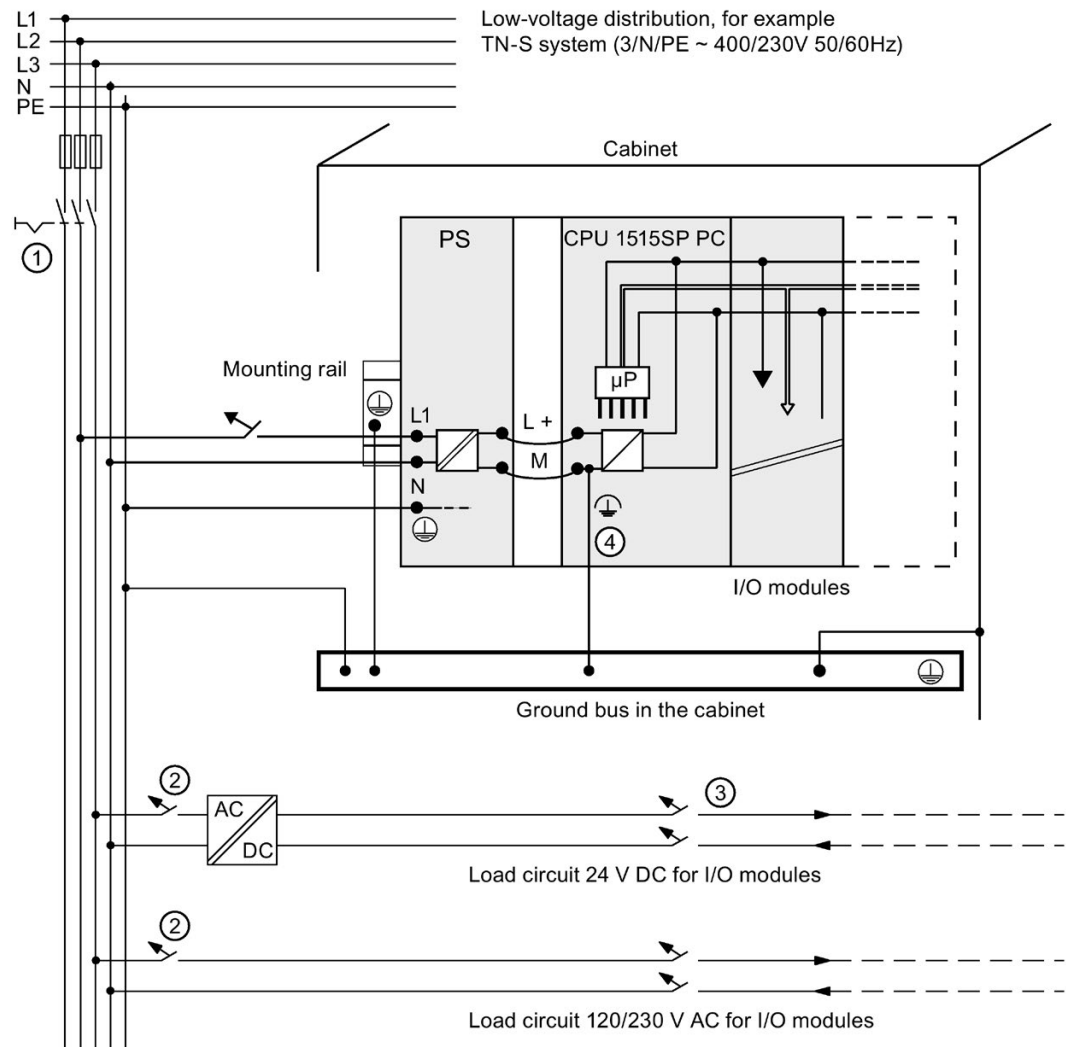

- ① Master switch
- ② Short-circuit and overload protection
- ③ Load current supply (galvanic isolation)
- ④ This connection is established automatically with the CPU 1515SP PC2.

The represented layout of the power connections does not correspond to the actual layout; it was chosen for demonstration purposes only.

Figure 7-2 Connecting the load voltage reference potential



## 7.4 Connecting devices to networks

The following options are available for integrating devices into existing or planned system environments and networks.

### Ethernet

You can use the integrated Ethernet interface X2 PN/IE(LAN) (10/100/1000 Mbps) for communication and data exchange with automation devices, for example, SIMATIC S7. Only ASCII characters are permitted in the name of the X2 PN/IE(LAN) interface in the TIA Portal, e.g. PROFINET\_2.

You need suitable software to do this: STEP 7, WinCC, SIMATIC NET.

---

#### Note

Use a Category 5e Ethernet cable (Cat-5e cable) for operation with 1000 Mbps.

---

### PROFINET

PROFINET operation is possible via the X1 PN(LAN) interface and the approved BusAdapter.

### PROFIBUS

The connection to PROFIBUS can be made using the DP master module.

## 7.5 Securing cables

The strain relief for connecting cables prevents the USB cables and PROFINET connectors detaching from the CPU 1515SP PC2. The strain relief is included in the scope of delivery.

### **! WARNING**

#### **Flying sparks due to loose cables**

Risk of explosion in hazardous areas.

USB cables and PROFINET connectors may detach from the device in the case of strong oscillation and high vibrating loads.

Attach these cables to the strain relief of the device using cable ties.

### Requirements

- The strain relief is fixed to the CPU.
- The CPU is installed.


### Procedure

Secure the USB and PROFINET cables to the strain relief using cable ties.



Figure 7-3 Secured cables

## 8.1 Notes on commissioning

 <b>WARNING</b>
<b>Improper commissioning in hazardous areas</b> Device failure or risk of explosion in hazardous areas. <ul style="list-style-type: none"><li>• Do not commission the device unless it is fully mounted and connected according to the specifications in the section Wiring (Page 36).</li><li>• Before commissioning, please consider the effects on other devices in the plant.</li></ul>

<b>NOTICE</b>
<b>Condensation in the device</b> Damage to the device due to condensation if the temperature between transport or storage and the installation point differs. Before commissioning the device, leave it to stand until it is dry.

<b>NOTICE</b>
<b>Data loss</b> Data loss may occur if write filters are used incorrectly. Therefore, note the information on write filters. The following configurable write filter is available under Windows 10: <ul style="list-style-type: none"><li>• Unified Write Filter (UWF) (Page 57)</li></ul>

## 8.2 Basic commissioning procedure

Step	Execution	Section
1	Requirements	8.2.1 (Page 43)
2	Preparing commissioning	8.2.2 (Page 43)
3	Commissioning procedure	8.2.3 (Page 43)

### 8.2.1 Requirements

The following requirements must be met before you commission the Open Controller for the first time:

- The CPU 1515SP PC2 is mounted.
- The supplied CFast card is inserted.
- No data carriers are connected via USB.

### 8.2.2 Preparing commissioning

#### Procedure

When the requirements are met, proceed as follows with the commissioning:

1. Connect a monitor using a DisplayPort cable.
2. Connect a keyboard and a mouse to the CPU via USB.

#### Result

The Open Controller is prepared for commissioning.

### 8.2.3 Commissioning procedure

When you start up your CPU 1515SP PC2 for the first time, basic settings and the administrator password are queried. The device is then automatically set up for the operating system that is installed on the CFast card. Restart the device after the operating system has been set up.

---

#### Note

The initial commissioning is not possible with a Multitouch panel, as the Multitouch driver is only available after the installation of the operating system.

---

## Procedure

When the requirements (Page 43) are met and the preparations for commissioning (Page 43) are complete, proceed as follows with the commissioning:

1. Connect the power supply.
  - The PWR LED lights up yellow first, then green.
  - The device carries out the hardware initialization.
2. Wait until the Siemens logo disappears from the screen.
3. Follow the instructions on the screen to configure the device:
  - Set <Language>, <Country/region>, <App language>, <Keyboard layout>, <Time zone for>
  - Accept license conditions
  - Setting the account
4. Finally, you will be prompted to restart the device.

<b>NOTICE</b>
<b>Faulty installation</b>
If you change the device during the installation, the installation will be disrupted and the operating system will not be installed correctly. The operational reliability of the device and the plant is endangered.
Do <b>not</b> switch off the device during the entire installation process.

## Information on users/user groups in Windows

A user "Operator" with standard user rights is already created on the Windows system.

The user is in a user group "SIEMENS TIA Engineer". This grants the user the rights to use the installed SIMATIC software products.

To use the CPU 1515SP PC2 directly, the Windows "Autologon" function is enabled for the "Operator" user. No password is preset.

---

### Note

When you assign a password, change the entry for the "Autologon" function accordingly using the Windows user administration.

---

**Result**

- The Windows 10 IOT Enterprise operating system (64-bit) is installed.
- The "Operator" user is logged on automatically.
- The software controller and WinCC Runtime Advanced, if required, are ready for use.
- For administrative purposes, the "Operator" user can be logged off and the administrator created during commissioning can be logged on.
- The operating system's start screen is displayed after each startup.

**8.3 Initial commissioning an open controller**

Step	Execution	Section
1	Creating the configuration of the Open Controller	8.3.1 (Page 45)
2	Setting the IP address	8.3.2 (Page 46)
3	Changing the properties of the Software Controller	8.3.3 (Page 46)
4	Establishing the HMI connection	8.3.4 (Page 47)
5	Downloading a project to the target system	8.3.5 (Page 47)
6	Transferring the license key	8.3.6 (Page 48)
7	Switching the Open Controller on/off	8.3.7 (Page 50)

**8.3.1 Creating the configuration of the Open Controller****Requirements**

The following requirements must be met before you can create the configuration of the Open Controller:

- TIA Portal V15 + HSP 0269 **or** TIA Portal  $\geq$  V15 SP1 must be installed.
- You have started the TIA Portal and created a new project.

### Creating the configuration

To create the configuration in the TIA Portal, follow these steps:

1. Double-click "Add new device" in the project tree.
2. Select "PC systems > SIMATIC S7 Open Controller > ET 200SP Open Controller >".
3. Select the required device.
4. Select the desired version and click "OK".  
The configured Open Controller is displayed in the device view.
5. The following interfaces can be seen in the Open Controller:
  - Onboard interface X2 (GB Ethernet Windows interface) that is assigned directly to the PC station (1 port)
  - Exchangeable BusAdapter that is assigned directly to the Software Controller (2 ports)
6. The following preconfigured components can be seen in the device view:
  - **CPU 1515SP PC2 / CPU 1515SP PC2 F/T/TF**: CPU 1505SP (F/T/TF) Software Controller
  - **CPU 1515SP PC2 + HMI / CPU 1515SP PC2 F + HMI**: CPU 1505SP (F) Software Controller and WinCC Runtime Advanced
7. Insert the server module from the hardware catalog.  
The server module forms the termination of the CPU with the I/O modules. If no server module is configured, the server module is added automatically during compiling.

### 8.3.2 Setting the IP address

Set the IP address as follows:

- BusAdapter [X1]: The configured IP address becomes effective on the Open Controller after a download. To go online via the [X1] interface, the configured address must match the [X1] address entered in the panel of the software controller.
- Onboard interface [X2]: The configured IP address should be identical to the Windows IP address of the Open Controller.

### 8.3.3 Changing the properties of the S7-1500 Software Controller

Information on the property of the CPU is available in the Inspector window under "Properties". You can change these properties if required.

### 8.3.4 Establishing the HMI connection

#### Procedure

The WinCC RT software is integrated in the SIMATIC HMI devices (e.g. Basic/Comfort/Mobile Panel) and permits data exchange over HMI connections.

No HMI connection exists between the WinCC RT Advanced software and the S7-1500 Software Controller at the time of the configuration.

To establish a HMI connection between the WinCC RT Advanced software on the S7-1500 Software Controller, proceed as follows:

1. In the network view, switch to "Connections".
2. Click on WinCC RT Advanced.
3. Draw a line from the WinCC RT Advanced software to the S7-1500 Software Controller (e.g. CPU 1505SP) while keeping the mouse button pressed.

A network connection is established between the two devices.

#### Reference

You can find additional information on configuring an HMI connection in the TIA Portal online help or in the STEP 7 and WinCC Engineering V15 (<https://support.industry.siemens.com/cs/ww/en/view/109755202>) system manual.

### 8.3.5 Downloading a project to the target system

#### Key statement

To set up your automation system, you need to download the project data you generated offline to the connected devices. This project data is generated, for example when configuring hardware, networks, and connections or when programming the user program or when creating recipes. The first time you download, the entire project data is downloaded. During later download operations, only changes are downloaded.

Proceed as follows to download the configuration:

1. Select the complete PC system in the device view.
2. Right-click on the PC system.
3. Select the option you require in the "Download to device" menu command.

---

#### Note

Note that the options available to you always depend on the selected device.

---



4. Select the interfaces with which you want to establish the online connection to the device. You have the option of showing all compatible devices by selecting the corresponding option and clicking the "Start search" command.

---

**Note**

The first TIA Portal download **must** be via the "X2" interface.

Only ASCII characters are permitted in the name of the X2 PN/IE(LAN) interface in the TIA Portal, e.g. PROFINET\_2.

---

5. Download and compile the project.

The hardware configuration and the first download are now completed.

## Reference

Additional information on the possible options for downloading is available in the online help of the TIA Portal.

### 8.3.6 Transferring license keys

#### Licensing the software

For the following products, you need to transfer the product-specific license key with the *Automation License Manager (ALM)* before commissioning:

- WinCC RT Advanced incl. PowerTag
- CPU 1505SP T/TF

---

**Note**

**No** license key is required to operate the S7-1500 Software Controller CPU 1505SP (F) V2.x.

---

#### Requirements

- Initial commissioning was successfully completed.
- Windows 10 IoT Enterprise (64-bit) has been started.
- The extended write filter **UWF must be deactivated** on the CPU 1515SP PC2.

### Transferring license keys with local configuration

The *Automation License Manager* is pre-installed on the CPU 1515SP PC2.

Open the software using the icon on the desktop or a menu command.

1. In the Windows start bar, select **Start > Siemens Automation > Automation License Manager**.
2. Follow the instructions of the *Automation License Manager*.

### Transferring license keys via programming device/PC

The *Automation License Manager* is pre-installed on a programming device/PC with STEP 7 and the CPU 1515SP PC2.

1. Connect the CPU 1515SP PC2 to a programming device/PC.
2. Connect the supplied USB stick to the programming device/PC.
3. Select the menu command **Start > Siemens Automation > Automation License Manager**.
4. Select the menu command **Edit > Connect computer** and enter the IP address of the CPU 1515SP PC2.
5. If the option "Forbid license keys transfer from local computer" is disabled on the source computer, drag the license keys from the USB stick to the system partition C: of the CPU 1515SP PC2.

### Backing up license keys for restore and repair

---

#### Note

#### Loss of license keys

A SIMATIC license key cannot be copied or duplicated. No more license key copies exist on the USB stick once you have dragged the license keys from the USB stick to your CPU 1515SP PC2.

Secure your purchased license keys **before** restoring the delivery state (Restore) or in the case of repair. To do this, move the license keys to a USB stick and keep this stick in a safe place.

---

If an error occurs on your license keys on the CPU 1515SP PC2, please contact your Siemens representative. Make sure to have the "Certificate of License" (CoL) to hand.

### Reference

For additional information on licenses, refer to the *Automation License Manager* manual. You can find the manual on the CPU 1515SP PC2 under **Start > All Programs > Siemens Automation > Documentation** and on the Internet (<http://support.automation.siemens.com/WW/view/en/56956174>).

You can find more information on the UWF write filter in the section: Protective function for data carriers (Page 57).

### 8.3.7 Switching the Open Controller on/off

#### Requirements

Initial commissioning was successfully completed.

#### Switching on the CPU 1515SP PC2

Proceed as follows to switch on the CPU 1515SP PC2:

1. Switch on the power supply of the CPU.  
The Boot Manager GRUB2DOS starts.
2. Select the mode in which the CPU 1515SP PC2 should start:
  - Default: with the Windows operating system and the S7-1500 software controller
  - Only with the Windows operating system (e.g. with updates)

#### Switching off the CPU 1515SP PC2

Proceed as follows to switch off the CPU 1515SP PC2:

1. Use the Windows function **Start > Power > Shut down** to switch off.  
The PWR LED changes from green to yellow.  
The Windows function shuts down the Windows operating system and the S7-1500 software controller.


If the device will not be used for a longer period after the shutdown, de-energize the device.

# Interrupt, error and system messages

## 9.1 Status and error display

### LED display

The following figure shows the LED displays of the CPU 1515SP PC2.

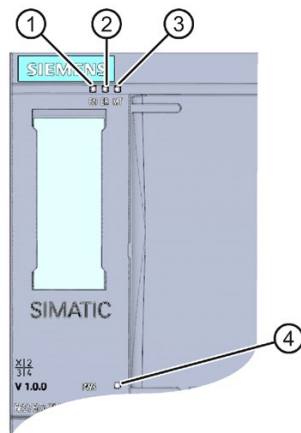

- ① RUN/STOP LED (yellow/green LED)
- ② ERROR LED (red LED)
- ③ MAINT LED (yellow LED)
- ④ POWER LED (yellow/green LED)



















Figure 9-1 LEDs of the CPU 1515SP PC2



















**Meaning of the LED displays with active S7-1500 Software Controller**

The CPU 1515SP PC2 has three LEDs to indicate the current operating state and diagnostics status.

The following table shows the meaning of the color combinations of the LED displays in connection with the S7-1500 Software Controller.




Table 9- 1 Meaning of the LED displays

RUN/STOP LED	ERROR LED	MAINT LED	Meaning
 LED off	 LED off	 LED off	POWER OFF Starting of the CPU 1515 SP PC2 in "Windows only" mode No power supply. Software Controller of the CPU 1515SP PC2: <ul style="list-style-type: none"> <li>is not downloaded</li> <li>is in the operating state Power OFF</li> </ul> Use of the hardware LEDs was disabled (configuration via TIA Portal).
 LED off	 LED flashes red	 LED off	An error has occurred.
 LED green	 LED off	 LED off	Software Controller of the CPU 1515SP PC2 is in RUN mode.
 LED green	 LED flashes red	 LED off	A diagnostics event is pending.
 LED green	 LED off	 LED lights up yellow	Maintenance demanded for the plant. The affected hardware must be exchanged within a short period.
 LED green	 LED off	 LED flashes yellow	Maintenance required for the plant. You must exchange the affected hardware within a foreseeable period.
			Firmware update successfully completed

RUN/STOP LED	ERROR LED	MAINT LED	Meaning
 LED lights up yellow	 LED off	 LED off	Software controller of the CPU is in the operating state STOP.
 LED lights up yellow	 LED flashes red	 LED flashes yellow	The user program is causing an error.
 LED flashes yellow	 LED off	 LED off	CPU is performing internal activities during STOP, e.g. ramp-up after STOP. Loading the user program
 LED flashes yellow/green	 LED off	 LED off	Startup (transition from STOP → RUN)
 LED flashes yellow/green	 LED flashes red	 LED flashes yellow	Startup (CPU booting) Test of LEDs during startup, inserting a module. LED flashing test
 LED flashes green	 LED flashes red	 LED flashes red	CPU defective

## POWER LED

Table 9- 2 POWER LED

POWER LED	Meaning
 LED off	No supply voltage or supply voltage too low
 LED lights up yellow	Supply voltage present; running through BIOS phase; operating system is shut down
 LED green	Supply voltage present; Booting or operation of the operating system

# Functions

## 10.1 Monitoring functions

### 10.1.1 Requirements

#### Introduction

The CPU 1515SP PC2 has monitoring functions that you can use with the corresponding monitoring software.

The following display, monitoring and control functions are available:

- Temperature monitoring
- Monitoring of drives with S.M.A.R.T. functionality
- Operating hours counter (information on the total runtime)
- HW LED status display (RUN/STOP, ERROR, MAINT)

#### Monitoring software

- **SIMATIC IPC DiagBase**

The SIMATIC DiagBase software is included in the scope of delivery of the CPU 1515SP PC2.

Use the DiagBase Management Explorer application to obtain a clearer overview for monitoring. The DiagBase Alarm Manager notifies you of individual alarms.

---

**Note**

For additional information, refer to the online help for the SIMATIC IPC DiagBase software.

---

- **SIMATIC IPC DiagMonitor**

The SIMATIC DiagMonitor software is provided on a CD. You can find the order number of the license in the section Accessories/Spare parts (Page 123).

Potential system failures are detected and reported in good time with the diagnostics and alerting software. The software is also used for remote diagnostics.

The software contains:

- The software for the stations to be monitored
- A library for creating your own applications

### 10.1.2 Temperature monitoring

Three temperature sensors monitor the temperature at different locations of the CPU 1515SP PC2:

- Processor temperature
- Temperature in the vicinity of the RAM ICs/blocks
- Temperature of the basic module

If one of the temperature values exceeds the set temperature threshold, the temperature monitoring triggers a temperature error. The temperature error activates the IPC DiagBase and/or IPC DiagMonitor software.

The temperature error remains stored until the temperatures fall below the temperature threshold again and it is reset using one of the following measures:

- Acknowledgment of the error message by the monitoring software
- Restart of the device

### 10.1.3 Monitoring drives

The **S.M.A.R.T. function** is a monitoring function of storage media. With this function, different parameters are queried in order to detect possible defects at an early stage. This information is shown to the user with corresponding software.

### 10.1.4 Operating hours counter

You can use an operating hours counter for a variety of applications:

- For calculating the operating time of the CPU
- For calculating the operating time of controlled equipment

You can find more information about the operating hours counter in the "Operating hours counter" group in the "Diagnostics" folder of the Online and Diagnostics view in the TIA Portal.

## 10.2 Retentive memory NVRAM

Retentive memory is non-volatile memory for saving a limited quantity of data in the event of power failure.

The data defined as retentive is stored in retentive memory. This data is retained beyond a power-off or power failure.

A corresponding function is implemented in the S7-1500 software controller to allow NVRAM to be used there. This saves up to 410 KB of data in non-volatile data memory in the case of power failure. This function can be set on the engineering station in the TIA Portal.



## 10.3 BIOS setup

### BIOS setup

The boot order can be set using the BIOS Setup.

### Changing the device configuration

The device configuration is preset for working with the supplied software.

Only change the set values if you have made technical changes to your device.

## 10.4 Power options

A power plan with the name SIMATIC S7 is set as default on the CPU 1515SP PC2. This ensures that the CPU does not deviate from its maximum clock rate in order not to endanger the real-time capability of the software controller.

## 10.5 "Unified Write Filter (UWF)" write filter

### General information on the UWF write filter

The Unified Write Filter (UWF) is a configurable write filter which provides the CFast cards with a write protection.

External removable media such as USB sticks and other flash drives that are recognized as removable media by the operating system are not supported.

#### NOTICE

##### Data loss on CFast cards

The number of write cycles on CFast cards is limited due to technical reasons.

To prevent data loss, the CFast card must therefore be provided with special protection.

Use the UWF write filter to extend the service life of the CFast card and to avoid a possible failure of the CPU 1515SP PC2.

#### Note

Write protection is deactivated in the delivery state!

Note that the work memory is reduced when UWF is activated.

#### NOTICE

##### Risk of data loss when UWF is activated

If UWF is activated, all changes made to data carriers which are write protected by the UWF after the boot operation may be lost when the device is shut down.

Proceed as follows to prevent this situation:

- Make changes to data carriers only when write protection is disabled.

### Reference

You can find additional information on the UWF write filter on the Internet in the online help for Microsoft® Windows® 10.

## Maintenance

### 11.1 Backing up and restoring data

#### Introduction

The operating system and the Runtime software are located on the supplied restore USB stick. You can use the USB stick to restore the delivery state of the CPU 1515SP PC2.

If you use functions from the Restore menu, you must acknowledge a security message. For the functions, 72 hours are available in each case. If the functions are not completed within this time period, CPU 1515SP PC2 is automatically restarted without a further prompt.

If you want to back up your projects, save them to the D: partition of the CFast card.

#### SIMATIC IPC Image & Partition Creator

You can also create your own image of your CFast card. This contains the operating system, the Runtime software and the complete project loaded from the TIA Portal.

We recommend the SIMATIC IPC Image & Partition Creator ( $\geq$  V3.5) software tool to back up data under Windows. It provides for easy backup and fast restore of the contents of the CFAST card and of individual partitions (images).

---

#### Note

Data can only be backed up to a network drive with the SIMATIC IPC Image & Partition Creator software using the X2 PN/IE(LAN) interface.

---

You can procure the SIMATIC IPC Image & Partition Creator:

- Via the Siemens online ordering system.
- Pre-installed on the SIMATIC IPC Service USB flash drives.

For additional information, please refer to the corresponding product documentation.

#### SIMATIC IPC Service USB flash drive

You can use the SIMATIC IPC Service USB flash drives for data backup and restore.

You obtain these through the Siemens online ordering system.

## 11.2 Partitions in the delivery state

### Partitioning the CFast card

The following partitions are set up on the CFast card by default:

Partition	Name	30 GB CFast card	File system
C:	SYSTEM	19.5 GB	NTFS
D:	DATA	8 GB	NTFS
-	-	0.4 GB	RAW
-	WinCCMB	0.04 GB	NTFS

#### Note

##### Partitions under Windows 10 IoT Enterprise (64-bit)

The partitions need to be set again if they are faulty or if the partitioning is to be changed.

#### NOTICE

##### CPU volume for S7-1500 Software Controller (0.4 GB RAW)

Do not change the CPU volume for software controllers.

This is the only way to ensure that the software controller continues to operate without error.

## 11.3 Restoring the delivery state

### Introduction

The entire image of your operating system and your Runtime software are located on the supplied restore USB stick. You can use the SIMATIC restore menu to restore the delivery state of the CPU 1515SP PC2.

---

#### Note

##### Restoring existing system partition

If your projects are stored on partition D: you can use the "Restore existing system partition" option to restore partition C: with the operating system and the Runtime software, without your project data being affected.

---

#### Note

##### Using Multitouch panels

The restoration of the original software is not possible with a Multitouch panel, because the Multitouch driver is not available until after the installation of the operating system.

### Requirements

To restore the original software of the CPU 1515SP PC2, the following is required:

- the supplied CFast card
- the supplied restore USB stick

<b>NOTICE</b>
<b>Data loss</b> During restoration of the system to delivery state, the CFast card is completely erased and re-formatted, and is then loaded with the original software. All subsequently modified or added data, programs, license keys and partitions on the CFast card will be lost. Back up the data of the CPU 1515SP PC2 after you have assigned parameters to the module and if you have made changes to the configuration.

<b>NOTICE</b>
<b>Loss of license keys</b> Back up the license keys before the restore by dragging these to your USB stick via <i>Automation License Manager</i> . After the restart of the CPU 1515SP PC2, transfer the license keys back to the device via the <i>Automation License Manager</i> .

## Restoring the delivery state of the CPU 1515SP PC2 with restore USB stick

### Before the restore

1. Connect a monitor and a keyboard to the CPU.
2. Switch off the power supply of the CPU.
3. Remove all USB drives from the CPU.
4. Connect the restore USB stick to a USB port.
5. Switch on the power supply of the CPU.
  - The CPU is started.
6. Press <Esc> to start the Boot Manager.
7. Select the list entry for the USB stick in the Boot Manager.
8. After the prompt, confirm the start by pressing any key.
  - The loading process is displayed (Windows logo).
  - The SIMATIC Restore menu opens.
    - Select a language.
    - Select "CPU 1515SP PC2 (F/T/TF)" or "CPU 1515SP PC2 (F) + HMI".
    - Select the option "Completely restore system drive".
      - The original software is restored on Partition C:, Partition D: is deleted.

### After the restore

1. Exit the Restore menu.
2. Remove the restore USB stick.
3. Proceed as described in Initial commissioning.

### Further procedure

- Re-connect any other required USB devices.
- Transfer the license keys.

## 11.4 Updating software

---

### Note

When you update software (such as Windows, drivers, BIOS, etc.), always start the CPU 1515SP PC2 in the GRUB menu in Windows mode.

---

Information on updating software for the respective product can be found on the Internet (<https://support.industry.siemens.com/cs/ww/en>).

### HMI devices

During the installation, make sure that you always use the latest drivers for the HMI devices used (SIMATIC Flat Panels).

Before you install a new driver version, you must uninstall the old driver version in order to ensure proper operation.

You can download the current driver software from SIMATIC Product Support.

## 11.5 Windows 10 IoT Enterprise (64-bit)

The Windows 10 IoT Enterprise operating system (64-bit) is pre-installed on the CPU 1515SP PC2.

### Windows language packs

English and German are available as the basic language for the installation of the Windows operating system.

After initial commissioning of the CPU 1515SP PC2, additional operating system languages can be installed. Note that you need administrator rights to install language packages.

The following language packs are contained on the restore USB stick under \Packages\x64\LanguagePack:

- Traditional Chinese
- Simplified Chinese
- German
- English
- French
- Italian
- Spanish

### Installing languages

Use the Windows function "Start > Settings > Speech Recognition, Region, Date > Languages" to install a language pack.

## Updates

You can install additional updates at a later time. You can find current information on the operating system at Windows (<http://www.windows.com>).

---

### Note

In the delivery state, partitions are set up on drive C: and D: on the CFast card with free memory. See section Partitions in the delivery state (Page 59).

Make sure that sufficient free memory space is available on your CFast card for the installation of updates.

---

## 11.6 Sending the device to customer service

### Before sending

Before you send in the CPU 1515SP PC2 for repair:

- Create a backup of your data.
- Back up your SIMATIC license keys on a USB stick.
- Remove your SD/MMC cards.
- Remove your **CFast card**.

### Sending in the device

- Pack the device in its original packaging.
- Enclose identification data (Page 30).
- Send to your Siemens contact partner.



## 11.7 Removing and inserting the CFast card

### Introduction

The CPU 1515SP PC2 has a slot for a CFast card. On this card, you will find the operating system, your Runtime software and, after configuration, the project.

Seal the cover for the CFast card to protect the system against unauthorized access.

You must remove the CFast card before you send in the CPU, for example, for repair.

### Requirements

- The CPU 1515SP PC2 is disconnected from the power supply.

### Procedure – Removing the CFast card

1. Remove the seal.
2. Open the cover, using a screwdriver if necessary.
3. Press onto the CFast card.  
The card is pressed out of the slot.
4. Pull the card out of the slot.  
To do this, grip the rib on the underside of the memory card.

### Procedure – Inserting the CFast card

1. Open the cover of the slot, using a screwdriver if necessary.
2. Insert the CFast card into the slot.
3. Press the CFast card into the slot until it clicks into place.  
The CFast card is properly inserted if the cover can be closed without any resistance.
4. Close the cover.

<b>NOTICE</b>
<b>Unauthorized access</b>
Seal the cover to protect the CFast card with the operating system of the CPU 1515SP PC2 from unauthorized access.

## 11.8 Recycling and disposal



---

For ecologically sustainable recycling and disposal of your old device, contact a certificated disposal service for electronic scrap or dispose of the device in accordance with the regulations in your country.

## Technical specifications

### 12.1 Standards and approvals

#### Introduction

The general technical specifications cover the following:

- The standards and test values that the CPU 1515SP PC2 complies with and fulfills.
- The test criteria according to which the CPU 1515SP PC2 was tested.

#### Currently valid markings and approvals

---

**Note****Information for CPU 1515SP PC2**

The currently valid markings and approvals are printed on the CPU 1515SP PC2.

---

#### Safety information

** WARNING****Risk of personal injury and damage to property.**

In hazardous areas, there is a risk of injury or damage if you disconnect any connectors while the CPU 1515SP PC2 is in operation.


Always de-energize the CPU 1515SP PC2 operated in such areas before you disconnect the connectors.


** WARNING****Flying sparks due to loose cables**

Risk of explosion in hazardous areas.

USB cables and PROFINET connectors may detach from the device in the case of strong oscillation and high vibrating loads.

Attach these cables to the strain relief of the device using cable ties.

 <b>WARNING</b>
<b>Explosion hazard</b> If you replace components, compliance with Class I, DIV. 2 can become invalid.

 <b>WARNING</b>
<b>Area of application</b> This device is only suitable for use in Class I, Div. 2, Group A, B, C, D, or in non-hazardous areas.

### CE marking



The CPU 1515SP PC2 meets the requirements and safety objectives of the following guidelines and complies with the harmonized European standards (EN) for programmable logic controllers published in the official journals of the European Community:

- 2014/30/EU "Electromagnetic Compatibility" (EMC Directive)
- 2014/34/EU "Equipment and protective systems intended for use in potentially explosive atmospheres" (Explosion Protection Directive)
- 2011/65/EU "Restriction of the use of certain hazardous substances in electrical and electronic equipment" (RoHS Directive)
- 2006/42/EC "Machinery Directive" for fail-safe modules

The conformity declaration certificates are available for the responsible authorities and are kept at the following address:

Siemens AG  
Digital Factory  
Factory Automation  
DF FA AS SYS  
P.O. Box 1963  
D-92209 Amberg, Germany

They are also available for download on the Siemens Industry Online Support (<https://support.industry.siemens.com/cs/ww/en/>) web pages, keyword "Declaration of Conformity".

### cULus approval



Underwriters Laboratories Inc., complying with

- UL 508 (Industrial Control Equipment)
- CSA C22.2 No. 142 (Process Control Equipment)

OR

### cULus HAZ. LOC. approval



Underwriters Laboratories Inc., complying with

- UL 508 (Industrial Control Equipment)
- CSA C22.2 No. 142 (Process Control Equipment)
- ANSI/ISA 12.12.01
- CSA C22.2 No. 213 (Hazardous Location)

APPROVED for use in  
Class I, Division 2, Group A, B, C, D Tx;  
Class I, Zone 2, Group IIC Tx

Installation Instructions for cULus haz.loc.

- WARNING - Explosion Hazard - Do not disconnect while circuit is live unless area is known to be non-hazardous.
- WARNING - Explosion Hazard - Substitution of components may impair suitability for Class I, Division 2 or Zone 2.
- This equipment is suitable for use in Class I, Division 2, Groups A, B, C, D; Class I, Zone 2, Group IIC; or non-hazardous locations.

WARNING: EXPOSURE TO SOME CHEMICALS MAY DEGRADE THE SEALING PROPERTIES OF MATERIALS USED IN THE RELAY.

### FM approval



Factory Mutual Research (FM) according to  
Approval Standard Class Number 3611, 3600, 3810

(ANSI/ISA 82.02.01)

CSA C22.2 No. 213

CSA C22.2 No. 61010-1

APPROVED for use in Class I, Division 2, Group A, B, C, D Tx;  
Class I, Zone 2, Group IIC Tx

Installation Instructions for FM

- WARNING - Explosion Hazard - Do not disconnect while circuit is live unless area is known to be non-hazardous.
- WARNING - Explosion Hazard - Substitution of components may impair suitability for Class I, Division 2 or Zone 2.
- This equipment is suitable for use in Class I, Division 2, Groups A, B, C, D; Class I, Zone 2, Group IIC; or non-hazardous locations.

WARNING: EXPOSURE TO SOME CHEMICALS MAY DEGRADE THE SEALING PROPERTIES OF MATERIALS USED IN THE RELAYS.

OR

### ATEX approval



In accordance with EN 60079-15 (Electrical apparatus for potentially explosive atmospheres; Type of protection "n") and EN 60079-0 (Electrical apparatus for potentially explosive gas atmospheres - Part 0: General Requirements)



II 3 G Ex nA IIC Tx Gc  
DEKRA 12ATEX0038X

OR

### IECEx approval



According to IEC 60079-15 (Explosive atmospheres - Part 15: Equipment protection by type of protection "n") and IEC 60079-0 (Explosive atmospheres - Part 0: Equipment - General requirements)



Ex nA IIC Tx Gc  
IECEx DEK 13.0011X

### RCM (C-Tick) Declaration of conformity for Australia/New Zealand



CPU 1515SP PC2 meets the requirements of the standard EN 61000-6-4:2007 + A1:2011.

### Korea Certificate KCC-REM-S49-ET200SP



Note that this device corresponds to limit class A in terms of the emission of radio frequency interference. This device can be used in all areas, except residential areas.

이 기기는 업무용(A급) 전자파 적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며 가정 외의 지역에서 사용하는 것을 목적으로 합니다.

### IEC 61131

The CPU 1515SP PC2 with the S7-1500 Software Controller CPU 1505SP (F/T/TF) fulfills the requirements and criteria of the IEC 61131-2 standard (programmable logic controllers, Part 2: Equipment requirements and tests).

### PROFINET standard

CPU 1515SP PC2 is based on standard IEC 61158 Type 10.

### PROFIBUS standard

CPU 1515SP PC2 is based on standard IEC 61158 Type 3.

## IO-Link standard

CPU 1515SP PC2 is based on standard IEC 61131-9.

## Use in industrial environments

CPU 1515SP PC2 is designed for use in industrial environments. It meets the following standards for this type of use:

- Requirements on interference emission EN 61000-6-4: 2007 + A1: 2011
- Requirements on immunity EN 61000-6-2: 2005

### Use in mixed areas

Under certain circumstances, you can use the CPU 1515SP PC2 in a mixed area. A mixed area is used for residential purposes and for commercial operations that do not significantly impact on residents.

If you want to use the CPU 1515SP PC2 in mixed areas, you must ensure that its radio frequency interference emission complies with the limit classes of the EN 61000-6-3 generic standard. Suitable measures for observing these limits for use in a mixed area are, for example:

- Installation of the CPU 1515SP PC2 in grounded control cabinets
- Use of noise filters in the supply cables

An individual acceptance test is also required.

### Use in residential areas

---

#### Note

#### **CPU 1515SP PC2 not intended for use in residential areas**

CPU 1515SP PC2 is not intended for use in residential areas. Using the CPU 1515SP PC2 in residential areas can affect radio and television reception.

---

## Reference

The certificates for the markings and approvals can be found on the Internet under Service&Support (<http://www.siemens.com/automation/service&support>).

## 12.2 Electromagnetic compatibility

### Definition

Electromagnetic compatibility (EMC) is the ability of an electrical installation to function satisfactorily in its electromagnetic environment without interfering with that environment.

The CPU 1515SP PC2 meets the requirements of the EMC legislation for the European single market, among other requirements. The prerequisite for this is that the CPU 1515SP PC2 complies with the specifications and guidelines relating to electrical configuration.

### EMC according to NE 21

The CPU 1515SP PC2 meets the EMC specifications of NAMUR guideline NE 21.

### Pulse-shaped disturbance

The following table shows the electromagnetic compatibility of the CPU 1515SP PC2 with regard to pulse-shaped disturbances.

Table 12- 1 Pulse-shaped disturbance

Pulse-shaped disturbance	Test voltage	corresponds to degree of severity
Electrostatic discharge according to IEC 61000-4-2.	Air discharge: $\pm 8$ kV	3
	Contact discharge $\pm 4$ kV	3
Burst pulses (high-speed transient disturbance) according to IEC 61000-4-4.	$\pm 2$ kV (power supply lines)	3
	$\pm 2$ kV (signal lines > 30 m)	3
	$\pm 1$ kV (signal lines < 30 m)	
High-energy single pulse (surge) according to IEC 61000-4-5 External protective circuit required (see function manual Designing interference-free controllers ( <a href="http://support.automation.siemens.com/WW/view/en/59193566">http://support.automation.siemens.com/WW/view/en/59193566</a> ))		3
• asymmetric coupling	$\pm 2$ kV (power supply lines) DC with protective elements $\pm 2$ kV (signal/data line only > 30 m), with protective elements	
• symmetric coupling	$\pm 1$ kV (power supply lines) DC with protective elements $\pm 1$ kV (signal/data line only > 30 m), with protective elements	



### Sinusoidal disturbance

The following table shows the electromagnetic compatibility of the CPU 1515SP PC2 with regard to sinusoidal disturbances.

- RF radiation

Table 12- 2 Sinusoidal disturbance variables with RF radiation

RF radiation according to IEC 61000-4-3/NAMUR 21 Electromagnetic RF field, amplitude-modulated		corresponds to degree of severity
80 to 1000 MHz; 1.0 to 2.0 GHz	2.0 GHz to 6.0 GHz	3
10 V/m	3 V/m	
80% AM (1 kHz)		

- RF coupling

Table 12- 3 Sinusoidal disturbance variables with RF coupling

RF coupling according to IEC 61000-4-6	corresponds to degree of severity
(10 kHz) 150 kHz to 80 MHz	3
10 V <sub>rms</sub> unmodulated	
80% AM (1 kHz)	
150 Ω source impedance	

### Emission of radio interference

Interference emission of electromagnetic fields in accordance with IEC61000-6-4 (measured at a distance of 10 m).

Table 12- 4 Interference emission of electromagnetic fields

Frequency	Emitted interference
30 MHz to 230 MHz	< 40 dB (μV/m)Q
230 MHz to 1000 MHz	< 47 dB (μV/m)Q

Emission of interference via AC supply voltage in accordance with EN 55016.

Table 12- 5 Interference emission via the AC power supply

Frequency	Emitted interference
0.15 to 0.5 MHz	<79 dB (μV) Q
	<66 dB (μV) M
0.5 to 30 MHz	<73 dB (μV) Q
	<60 dB (μV) M

## 12.3 Shipping and storage conditions

### Introduction

The CPU 1515SP PC2 exceeds the requirements of IEC 61131-2 in terms of shipping and storage conditions. The following information applies to modules that are shipped and/or stored in their original packaging.

Table 12- 6 Shipping and storage conditions for modules

Type of condition	Permissible range
Free fall (in shipping package)	≤1 m
Temperature	From -40 °C to +70 °C
Barometric pressure	from 1140 hPa to 660 hPa (corresponds to an altitude of -1000 m to 3500 m)
Relative humidity	5% to 95%, without condensation
Sinusoidal vibrations according to IEC 60068-2-6	5 - 8.4 Hz: 3.5 mm 8.4 - 500 Hz: 9.8 m/s <sup>2</sup>
Shock according to IEC 60068-2-27	250 m/s <sup>2</sup> , 6 ms, 1000 shocks

## 12.4 Mechanical and climatic ambient conditions

---

### Note

#### Restrictions

In contrast to the ambient conditions for the ET 200SP distributed I/O system, the following restrictions apply to the CPU 1515SP PC2:

- Mechanical ambient conditions:
    - 2 g constant acceleration when using the BusAdapter BA 2×FC
  - Ambient temperature:
    - 0 to 60 °C for horizontal installation with maximum 32 I/O modules
    - 0 to 55 °C for horizontal installation with maximum 64 I/O modules
    - 0 to 50 °C for vertical installation with maximum 32 I/O modules
- 

### Operating conditions

The CPU 1515SP PC2 is suitable for use in weather-proof, fixed locations. The operating conditions are based on the requirements of DIN IEC 60721-3-3:

- Class 3M3 (mechanical requirements)
- Class 3K3 (climatic requirements)

### Mechanical ambient conditions

The table below shows the mechanical ambient conditions in the form of sinusoidal oscillations.

Table 12-7 Mechanical ambient conditions

Frequency band	CPU 1515SP PC2
$5 \leq f \leq 8.4 \text{ Hz}$	3.5 mm amplitude
$8.4 \leq f \leq 150 \text{ Hz}$	1 g constant acceleration
$10 \leq f \leq 60 \text{ Hz}$	0.35 mm amplitude
$60 \leq f \leq 1000 \text{ Hz}$	<ul style="list-style-type: none"> <li>• 1 g constant acceleration (with BusAdapter BA 2×RJ45)</li> <li>• 2 g constant acceleration (with BusAdapter BA 2×FC)</li> </ul>

### Test of mechanical ambient conditions

The table below provides important information with respect to the type and scope of the test of ambient mechanical conditions.

Table 12- 8 Test of mechanical ambient conditions

Condition tested	Test Standard	Comment
Vibration	Vibration test according to IEC 60068-2-6 (sine)	Type of oscillation: Frequency sweeps with a rate of change of 1 octave/minute. BA 2×RJ45 <ul style="list-style-type: none"> <li>• 5 Hz ≤ f ≤ 8.4 Hz, 3.5 mm constant amplitude</li> <li>• 8.4 Hz ≤ f ≤ 150 Hz, 1 g constant acceleration</li> </ul> BA 2×FC <ul style="list-style-type: none"> <li>• 10 Hz ≤ f ≤ 60 Hz, 0.35 mm constant amplitude</li> <li>• 60 Hz ≤ f ≤ 1000 Hz, 2 g constant acceleration</li> </ul> Duration of vibration: 10 frequency sweeps per axis in each of 3 vertically aligned axes
Shock	Shock, tested according to IEC 60068-2-27	Type of shock: Half-sine Shock intensity: 150 m/s <sup>2</sup> peak value, 11 ms duration Direction of shock: 3 shocks in each direction (+/-) at each of 3 vertically aligned axes

### Climatic ambient conditions

You can use the CPU 1515SP PC2 under the following climatic ambient conditions:

Table 12- 9 Climatic ambient conditions

Ambient conditions	Permissible range	Comments
Temperature:	• from 0 to 60 °C	For configuration with 32 I/O modules
Horizontal mounting position:	• from 0 to 55 °C	For configuration with 64 I/O modules
Vertical installation:	• 0 to 50 °C	For configuration with 32 I/O modules
Permitted temperature change	10 K/h	-
Relative humidity	from 10 to 95%	Without condensation
Barometric pressure	From 1140 to 795 hPa	Corresponds to an altitude of -1000 m to 2000 m
Concentration of pollutants	ANSI/ISA-71.04 severity level G1; G2; G3	-

## 12.5 Information on insulation, protection class, degree of protection and rated voltage

### Insulation

The insulation is designed according to the requirements of EN 61131-2: 2007.

---

#### Note

In the case of modules with 24 V DC (SELV/PELV) supply voltage, galvanic isolations are tested with 707 V DC (type test).

---

---

#### Note

The ground/minus pole of the 24 V DC power supply is connected via the device with functional ground (FE).

---

### Pollution degree / overvoltage category according to IEC 61131

- Pollution degree 2
- Overvoltage category: II

### Protection class in accordance with IEC 61131-2:2007

The distributed I/O system ET 200SP fulfills protection class I and includes parts of protection class II and III. The CPU 1515SP PC2 is a part of protection class III.

The grounding of the mounting rail must meet the requirements for functional earth FE.

The installation location (e.g. enclosure, control cabinet) must have a protective conductor connection that meets the standard to maintain protection class I.

### Degree of protection IP20

Degree of protection IP20 according to IEC 60529, i.e.:

- Protection against contact with standard probe
- Protection against foreign objects with diameters in excess of 12.5 mm
- No protection against water

### Rated voltage for operation

The CPU 1515SP PC2 works with the rated voltage and corresponding tolerances listed in the following table.

Table 12- 10 Rated voltage for operation

Rated voltage	Tolerance range
24 V DC	19.2 to 28.8 V DC <sup>1</sup>

<sup>1</sup> Static value: Creation as functional extra-low voltage with safe electrical isolation in accordance with IEC 60364-4-41

## 12.6 Use of the ET 200SP in zone 2 potentially explosive atmospheres

See product information Use of subassemblies/modules in a Zone 2 Hazardous Area (<http://support.automation.siemens.com/WW/view/en/19692172>).

## 12.7 Module data

### 12.7.1 Technical specifications of CPU 1515SP PC2 - basic device

#### Technical specifications

The following table shows the technical specifications as of 08/2018. You will find a data sheet including daily updated technical specifications on the Internet (<https://support.industry.siemens.com/cs/ww/en/pv/6ES7677-2DB40-0AA0/td>).

<b>Article number</b>	<b>6ES7677-2DB40-0AA0</b>
<b>General information</b>	
Product type designation	CPU 1515SP PC2
HW functional status	FS01
Firmware version	V2.5
<b>Engineering with</b>	
<ul style="list-style-type: none"> <li>STEP 7 TIA Portal configurable/integrated as of version</li> </ul>	V15 with HSP 255
<b>Installed software</b>	
<ul style="list-style-type: none"> <li>Visualization</li> <li>Control</li> </ul>	No No
<b>Control elements</b>	
Mode selector switch	1
<b>Supply voltage</b>	
Type of supply voltage	24 V DC
permissible range, lower limit (DC)	19.2 V
permissible range, upper limit (DC)	28.8 V
Reverse polarity protection	Yes
<b>Mains buffering</b>	
<ul style="list-style-type: none"> <li>Mains/voltage failure stored energy time</li> </ul>	5 ms
<b>Input current</b>	
Current consumption (rated value)	1.8 A; Full processor load, incl. ET 200SP modules and using USB
Current consumption (in no-load operation), typ.	0.5 A
$I^2t$	0.426 A <sup>2</sup> ·s; with starting current inrush
<b>Power</b>	
Active power input, max.	43 W; incl. ET 200SP modules and using USB
Infeed power to the backplane bus	8.75 W
<b>Power loss</b>	
Power loss, typ.	16 W

<b>Article number</b>	<b>6ES7677-2DB40-0AA0</b>
<b>Memory</b>	
Type of memory	DDR3L
Main memory	8 GB RAM
CFast memory card	No
SIMATIC memory card required	No
<b>Hardware configuration</b>	
Integrated power supply	Yes
<b>Number of DP masters</b>	
• Via CM	1
<b>Rack</b>	
• Modules per rack, max.	64; CPU + 64 modules + server module (mounting width max. 1 m)
<b>Time of day</b>	
<b>Clock</b>	
• Type	Hardware clock
• Backup time	6 wk; At 40 °C ambient temperature, typically
• Deviation per day, max.	10 s; Typ.: 2 s
<b>Interfaces</b>	
Number of industrial Ethernet interfaces	2
Number of PROFINET interfaces	1
Number of PROFIBUS interfaces	1; Via CM DP module
Number of RS 485 interfaces	1; Via CM DP module
Number of USB interfaces	4; 2x USB 2.0, 2x USB 3.0 on front side
<b>Video interfaces</b>	
• Graphics interface	1x DisplayPort
<b>1. Interface</b>	
<b>Interface types</b>	
• Number of ports	2
• integrated switch	Yes
• RJ 45 (Ethernet)	Yes; Via BusAdapter BA 2x RJ45
– Transmission rate, max.	100 Mbit/s
– Industrial Ethernet status LED	Yes
<b>2. Interface</b>	
<b>Interface types</b>	
• Number of ports	1
• RJ 45 (Ethernet)	Yes; Integrated
– Transmission rate, max.	1 000 Mbit/s
– Industrial Ethernet status LED	No



<b>Article number</b>	<b>6ES7677-2DB40-0AA0</b>
<b>Ambient conditions</b>	
<b>Ambient temperature during operation</b>	
<ul style="list-style-type: none"> <li>• min. 0 °C</li> <li>• max. Up to 60 °C with max. 32 ET 200SP modules and 3x 100 mA USB load; up to 55 °C with max. 64 ET 200SP modules and 2x max. 500 mA and 1x max. 100 mA USB load</li> <li>• horizontal installation, min. 0 °C</li> <li>• horizontal installation, max. 60 °C</li> <li>• vertical installation, min. 0 °C</li> <li>• vertical installation, max. 50 °C; With max. 32 ET 200SP modules and 3x 100 mA USB load</li> </ul>	
<b>Ambient temperature during storage/transportation</b>	
<ul style="list-style-type: none"> <li>• min. -40 °C</li> <li>• max. 70 °C</li> </ul>	
<b>Peripherals/Options</b>	
Peripherals	
<ul style="list-style-type: none"> <li>• SD card</li> </ul>	Optionally for additional mass storage
<b>Dimensions</b>	
Width	160 mm
Height	117 mm
Depth	75 mm
<b>Weights</b>	
Weight, approx.	0.83 kg

## 12.7.2 Technical specifications CPU 1515SP PC2

### Technical specifications

The following table shows the technical specifications as of 08/2018. You will find a data sheet including daily updated technical specifications on the Internet (<https://support.industry.siemens.com/cs/ww/en/pv/6ES7677-2DB42-0GB0/td>).

Article number	6ES7677-2DB42-0GB0
<b>General information</b>	
Product type designation	CPU 1515SP PC2
HW functional status	FS01
Firmware version	V2.5
<b>Engineering with</b>	
<ul style="list-style-type: none"> <li>STEP 7 TIA Portal configurable/integrated as of version</li> </ul>	V15 with HSP 269
<b>Installed software</b>	
<ul style="list-style-type: none"> <li>Visualization</li> </ul>	No
<ul style="list-style-type: none"> <li>Control</li> </ul>	S7-1500 Software Controller CPU 1505SP
<b>Control elements</b>	
Mode selector switch	1
<b>Supply voltage</b>	
Type of supply voltage	24 V DC
permissible range, lower limit (DC)	19.2 V
permissible range, upper limit (DC)	28.8 V
Reverse polarity protection	Yes
<b>Mains buffering</b>	
<ul style="list-style-type: none"> <li>Mains/voltage failure stored energy time</li> </ul>	5 ms
<b>Input current</b>	
Current consumption (rated value)	1.8 A; Full processor load, incl. ET 200SP modules and using USB
Current consumption (in no-load operation), typ.	0.5 A
$I^2t$	0.426 A <sup>2</sup> ·s; with starting current inrush
<b>Power</b>	
Active power input, max.	43 W; incl. ET 200SP modules and using USB
Infeed power to the backplane bus	8.75 W
<b>Power loss</b>	
Power loss, typ.	16 W
<b>Processor</b>	
Processor type	Intel Atom E3940, 1.6 GHz, 4 cores

<b>Article number</b>	<b>6ES7677-2DB42-0GB0</b>
<b>Memory</b>	
Type of memory	DDR3L
Main memory	8 GB RAM
CFast memory card	Yes; 30 GB flash memory
SIMATIC memory card required	No
Flash Disk	30 GB
<b>Work memory</b>	
<ul style="list-style-type: none"> <li>integrated (for program)</li> </ul>	1 Mbyte
<ul style="list-style-type: none"> <li>integrated (for data)</li> </ul>	5 Mbyte
<ul style="list-style-type: none"> <li>integrated (for CPU function library of CPU Runtime)</li> </ul>	10 Mbyte
<b>Load memory</b>	
<ul style="list-style-type: none"> <li>integrated (on PC mass storage)</li> </ul>	320 Mbyte
<b>Backup</b>	
<ul style="list-style-type: none"> <li>with UPS</li> </ul>	Yes; all memory areas declared retentive
<ul style="list-style-type: none"> <li>with non-volatile memory</li> </ul>	Yes
<b>Hardware configuration</b>	
Integrated power supply	Yes
<b>Number of DP masters</b>	
<ul style="list-style-type: none"> <li>Via CM</li> </ul>	1
<b>Rack</b>	
<ul style="list-style-type: none"> <li>Modules per rack, max.</li> </ul>	64; CPU 1515SP PC + 64 modules + server module
<ul style="list-style-type: none"> <li>Number of lines, max.</li> </ul>	1
<b>Time of day</b>	
<b>Clock</b>	
<ul style="list-style-type: none"> <li>Type</li> </ul>	Hardware clock
<ul style="list-style-type: none"> <li>Backup time</li> </ul>	6 wk; At 40 °C ambient temperature, typically
<ul style="list-style-type: none"> <li>Deviation per day, max.</li> </ul>	10 s; Typ.: 2 s
<b>Interfaces</b>	
Number of industrial Ethernet interfaces	2
Number of PROFINET interfaces	1
Number of PROFIBUS interfaces	1
Number of RS 485 interfaces	1; Via CM DP module
Number of USB interfaces	4; 2x USB 2.0, 2x USB 3.0 on front side
Number of SD card slots	1
<b>Video interfaces</b>	
<ul style="list-style-type: none"> <li>Graphics interface</li> </ul>	1x DisplayPort

<b>Article number</b>	<b>6ES7677-2DB42-0GB0</b>
<b>1. Interface</b>	
<b>Interface types</b>	
<ul style="list-style-type: none"> <li>• Number of ports</li> </ul>	2
<ul style="list-style-type: none"> <li>• integrated switch</li> </ul>	Yes
<ul style="list-style-type: none"> <li>• RJ 45 (Ethernet)                             <ul style="list-style-type: none"> <li>– Transmission rate, max.</li> <li>– Industrial Ethernet status LED</li> </ul> </li> </ul>	Yes; Via BusAdapter BA 2x RJ45 100 Mbit/s Yes
<b>2. Interface</b>	
<b>Interface types</b>	
<ul style="list-style-type: none"> <li>• Number of ports</li> </ul>	1
<ul style="list-style-type: none"> <li>• RJ 45 (Ethernet)                             <ul style="list-style-type: none"> <li>– Transmission rate, max.</li> <li>– Industrial Ethernet status LED</li> </ul> </li> </ul>	Yes; Integrated 1 000 Mbit/s No
<b>3. Interface</b>	
<b>Interface types</b>	
<ul style="list-style-type: none"> <li>• RS 485</li> </ul>	Yes
<b>RS 485</b>	
<ul style="list-style-type: none"> <li>• Transmission rate, max.</li> </ul>	12 Mbit/s
<b>Interrupts/diagnostics/status information</b>	
<b>Diagnostics indication LED</b>	
<ul style="list-style-type: none"> <li>• RUN/STOP LED</li> <li>• ERROR LED</li> <li>• MAINT LED</li> </ul>	Yes Yes Yes
<b>Ambient conditions</b>	
<b>Ambient temperature during operation</b>	
<ul style="list-style-type: none"> <li>• min.</li> <li>• max.</li> <li>• horizontal installation, min.</li> <li>• horizontal installation, max.</li> <li>• vertical installation, min.</li> <li>• vertical installation, max.</li> </ul>	0 °C Up to 60 °C with max. 32 ET 200SP modules and 3x 100 mA USB load; up to 55 °C with max. 64 ET 200SP modules and 2x max. 500 mA and 1x max. 100 mA USB load 0 °C 60 °C 0 °C 50 °C; With max. 32 ET 200SP modules and 3x 100 mA USB load

12.7 Module data

<b>Article number</b>	<b>6ES7677-2DB42-0GB0</b>
<b>Ambient temperature during storage/transportation</b>	
<ul style="list-style-type: none"> <li>• min.</li> <li>• max.</li> </ul>	<p>-40 °C</p> <p>70 °C</p>
<b>Operating systems</b>	
Operating systems	Windows 10 IoT Enterprise LTSB 2016 (64-bit) MUI
<b>Peripherals/Options</b>	
Peripherals	
<ul style="list-style-type: none"> <li>• SD card</li> </ul>	Optionally for additional mass storage
<b>Dimensions</b>	
Width	160 mm
Height	117 mm
Depth	75 mm
<b>Weights</b>	
Weight, approx.	0.83 kg

### 12.7.3 Technical specifications of CPU 1515SP PC2 + HMI 128PT

#### Technical specifications

The following table shows the technical specifications as of 08/2018. You will find a data sheet including daily updated technical specifications on the Internet (<https://support.industry.siemens.com/cs/ww/en/pv/6ES7677-2DB42-0GK0/td>).

<b>Article number</b>	<b>6ES7677-2DB42-0GK0</b>
<b>General information</b>	
Product type designation	CPU 1515SP PC2 + HMI 128
HW functional status	FS01
Firmware version	V2.5
<b>Engineering with</b>	
<ul style="list-style-type: none"> <li>STEP 7 TIA Portal configurable/integrated as of version</li> </ul>	V15 with HSP 269
<b>Installed software</b>	
<ul style="list-style-type: none"> <li>Visualization</li> </ul>	WinCC Runtime Advanced V15
<ul style="list-style-type: none"> <li>Control</li> </ul>	S7-1500 Software Controller CPU 1505SP
<b>Control elements</b>	
Mode selector switch	1
<b>Supply voltage</b>	
Type of supply voltage	24 V DC
permissible range, lower limit (DC)	19.2 V
permissible range, upper limit (DC)	28.8 V
Reverse polarity protection	Yes
<b>Mains buffering</b>	
<ul style="list-style-type: none"> <li>Mains/voltage failure stored energy time</li> </ul>	5 ms
<b>Input current</b>	
Current consumption (rated value)	1.8 A; Full processor load, incl. ET 200SP modules and using USB
Current consumption (in no-load operation), typ.	0.5 A
$I^2t$	0.426 A <sup>2</sup> -s; with starting current inrush
<b>Power</b>	
Active power input, max.	43 W; incl. ET 200SP modules and using USB
Infeed power to the backplane bus	8.75 W
<b>Power loss</b>	
Power loss, typ.	16 W
<b>Processor</b>	
Processor type	Intel Atom E3940, 1.6 GHz, 4 cores

<b>Article number</b>	<b>6ES7677-2DB42-0GK0</b>
<b>Memory</b>	
Type of memory	DDR3L
Main memory	8 GB RAM
CFast memory card	Yes; 30 GB flash memory
SIMATIC memory card required	No
Flash Disk	30 GB
<b>Work memory</b>	
<ul style="list-style-type: none"> <li>integrated (for program)</li> </ul>	1 Mbyte
<ul style="list-style-type: none"> <li>integrated (for data)</li> </ul>	5 Mbyte
<ul style="list-style-type: none"> <li>integrated (for CPU function library of CPU Runtime)</li> </ul>	10 Mbyte
<b>Load memory</b>	
<ul style="list-style-type: none"> <li>integrated (on PC mass storage)</li> </ul>	320 Mbyte
<b>Backup</b>	
<ul style="list-style-type: none"> <li>with UPS</li> </ul>	Yes; all memory areas declared retentive
<ul style="list-style-type: none"> <li>with non-volatile memory</li> </ul>	Yes
<b>Hardware configuration</b>	
Integrated power supply	Yes
<b>Number of DP masters</b>	
<ul style="list-style-type: none"> <li>Via CM</li> </ul>	1
<b>Rack</b>	
<ul style="list-style-type: none"> <li>Modules per rack, max.</li> </ul>	64; CPU 1515SP PC + 64 modules + server module
<ul style="list-style-type: none"> <li>Number of lines, max.</li> </ul>	1
<b>Time of day</b>	
<b>Clock</b>	
<ul style="list-style-type: none"> <li>Type</li> </ul>	Hardware clock
<ul style="list-style-type: none"> <li>Backup time</li> </ul>	6 wk; At 40 °C ambient temperature, typically
<ul style="list-style-type: none"> <li>Deviation per day, max.</li> </ul>	10 s; Typ.: 2 s
<b>Interfaces</b>	
Number of industrial Ethernet interfaces	2
Number of PROFINET interfaces	1
Number of PROFIBUS interfaces	1
Number of RS 485 interfaces	1; Via CM DP module
Number of USB interfaces	4; 2x USB 2.0, 2x USB 3.0 on front side
Number of SD card slots	1
<b>Video interfaces</b>	
<ul style="list-style-type: none"> <li>Graphics interface</li> </ul>	1x DisplayPort

<b>Article number</b>	<b>6ES7677-2DB42-0GK0</b>
<b>1. Interface</b>	
<b>Interface types</b>	
<ul style="list-style-type: none"> <li>• Number of ports</li> </ul>	2
<ul style="list-style-type: none"> <li>• integrated switch</li> </ul>	Yes
<ul style="list-style-type: none"> <li>• RJ 45 (Ethernet)</li> </ul>	Yes; Via BusAdapter BA 2x RJ45
<ul style="list-style-type: none"> <li>– Transmission rate, max.</li> </ul>	100 Mbit/s
<ul style="list-style-type: none"> <li>– Industrial Ethernet status LED</li> </ul>	Yes
<b>2. Interface</b>	
<b>Interface types</b>	
<ul style="list-style-type: none"> <li>• Number of ports</li> </ul>	1
<ul style="list-style-type: none"> <li>• RJ 45 (Ethernet)</li> </ul>	Yes; Integrated
<ul style="list-style-type: none"> <li>– Transmission rate, max.</li> </ul>	1 000 Mbit/s
<ul style="list-style-type: none"> <li>– Industrial Ethernet status LED</li> </ul>	No
<b>3. Interface</b>	
<b>Interface types</b>	
<ul style="list-style-type: none"> <li>• RS 485</li> </ul>	Yes
<b>RS 485</b>	
<ul style="list-style-type: none"> <li>• Transmission rate, max.</li> </ul>	12 Mbit/s
<b>Interrupts/diagnostics/status information</b>	
<b>Diagnostics indication LED</b>	
<ul style="list-style-type: none"> <li>• RUN/STOP LED</li> </ul>	Yes
<ul style="list-style-type: none"> <li>• ERROR LED</li> </ul>	Yes
<ul style="list-style-type: none"> <li>• MAINT LED</li> </ul>	Yes
<b>Ambient conditions</b>	
<b>Ambient temperature during operation</b>	
<ul style="list-style-type: none"> <li>• min.</li> </ul>	0 °C
<ul style="list-style-type: none"> <li>• max.</li> </ul>	Up to 60 °C with max. 32 ET 200SP modules and 3x 100 mA USB load; up to 55 °C with max. 64 ET 200SP modules and 2x max. 500 mA and 1x max. 100 mA USB load
<ul style="list-style-type: none"> <li>• horizontal installation, min.</li> </ul>	0 °C
<ul style="list-style-type: none"> <li>• horizontal installation, max.</li> </ul>	60 °C
<ul style="list-style-type: none"> <li>• vertical installation, min.</li> </ul>	0 °C
<ul style="list-style-type: none"> <li>• vertical installation, max.</li> </ul>	50 °C; With max. 32 ET 200SP modules and 3x 100 mA USB load
<b>Ambient temperature during storage/transportation</b>	
<ul style="list-style-type: none"> <li>• min.</li> </ul>	-40 °C
<ul style="list-style-type: none"> <li>• max.</li> </ul>	70 °C



12.7 Module data

<b>Article number</b>	<b>6ES7677-2DB42-0GK0</b>
<b>Operating systems</b>	
Operating systems	Windows 10 IoT Enterprise LTSB 2016 (64-bit) MUI
<b>Peripherals/Options</b>	
Peripherals	
• SD card	Optionally for additional mass storage
<b>Dimensions</b>	
Width	160 mm
Height	117 mm
Depth	75 mm
<b>Weights</b>	
Weight, approx.	0.83 kg

## 12.7.4 Technical specifications of CPU 1515SP PC2 + HMI 512PT

### Technical specifications

The following table shows the technical specifications as of 08/2018. You will find a data sheet including daily updated technical specifications on the Internet (<https://support.industry.siemens.com/cs/ww/en/pv/6ES7677-2DB42-0GL0/td>).

Article number	6ES7677-2DB42-0GL0
<b>General information</b>	
Product type designation	CPU 1515SP PC2 + HMI 512
HW functional status	FS01
Firmware version	V2.5
<b>Engineering with</b>	
<ul style="list-style-type: none"> <li>STEP 7 TIA Portal configurable/integrated as of version</li> </ul>	V15 with HSP 269
<b>Installed software</b>	
<ul style="list-style-type: none"> <li>Visualization</li> </ul>	WinCC Runtime Advanced V15
<ul style="list-style-type: none"> <li>Control</li> </ul>	S7-1500 Software Controller CPU 1505SP
<b>Control elements</b>	
Mode selector switch	1
<b>Supply voltage</b>	
Type of supply voltage	24 V DC
permissible range, lower limit (DC)	19.2 V
permissible range, upper limit (DC)	28.8 V
Reverse polarity protection	Yes
<b>Mains buffering</b>	
<ul style="list-style-type: none"> <li>Mains/voltage failure stored energy time</li> </ul>	5 ms
<b>Input current</b>	
Current consumption (rated value)	1.8 A; Full processor load, incl. ET 200SP modules and using USB
Current consumption (in no-load operation), typ.	0.5 A
$I^2t$	0.426 A <sup>2</sup> -s; with starting current inrush
<b>Power</b>	
Active power input, max.	43 W; incl. ET 200SP modules and using USB
Infeed power to the backplane bus	8.75 W
<b>Power loss</b>	
Power loss, typ.	16 W
<b>Processor</b>	
Processor type	Intel Atom E3940, 1.6 GHz, 4 cores

<b>Article number</b>	<b>6ES7677-2DB42-0GL0</b>
<b>Memory</b>	
Type of memory	DDR3L
Main memory	8 GB RAM
CFast memory card	Yes; 30 GB flash memory
SIMATIC memory card required	No
Flash Disk	30 GB
<b>Work memory</b>	
<ul style="list-style-type: none"> <li>integrated (for program)</li> </ul>	1 Mbyte
<ul style="list-style-type: none"> <li>integrated (for data)</li> </ul>	5 Mbyte
<ul style="list-style-type: none"> <li>integrated (for CPU function library of CPU Runtime)</li> </ul>	10 Mbyte
<b>Load memory</b>	
<ul style="list-style-type: none"> <li>integrated (on PC mass storage)</li> </ul>	320 Mbyte
<b>Backup</b>	
<ul style="list-style-type: none"> <li>with UPS</li> </ul>	Yes; all memory areas declared retentive
<ul style="list-style-type: none"> <li>with non-volatile memory</li> </ul>	Yes
<b>Hardware configuration</b>	
Integrated power supply	Yes
<b>Number of DP masters</b>	
<ul style="list-style-type: none"> <li>Via CM</li> </ul>	1
<b>Rack</b>	
<ul style="list-style-type: none"> <li>Modules per rack, max.</li> </ul>	64; CPU 1515SP PC + 64 modules + server module
<ul style="list-style-type: none"> <li>Number of lines, max.</li> </ul>	1
<b>Time of day</b>	
<b>Clock</b>	
<ul style="list-style-type: none"> <li>Type</li> </ul>	Hardware clock
<ul style="list-style-type: none"> <li>Backup time</li> </ul>	6 wk; At 40 °C ambient temperature, typically
<ul style="list-style-type: none"> <li>Deviation per day, max.</li> </ul>	10 s; Typ.: 2 s
<b>Interfaces</b>	
Number of industrial Ethernet interfaces	2
Number of PROFINET interfaces	1
Number of PROFIBUS interfaces	1
Number of RS 485 interfaces	1; Via CM DP module
Number of USB interfaces	4; 2x USB 2.0, 2x USB 3.0 on front side
Number of SD card slots	1
<b>Video interfaces</b>	
<ul style="list-style-type: none"> <li>Graphics interface</li> </ul>	1x DisplayPort

<b>Article number</b>	<b>6ES7677-2DB42-0GL0</b>
<b>1. Interface</b>	
<b>Interface types</b>	
<ul style="list-style-type: none"> <li>• Number of ports</li> </ul>	2
<ul style="list-style-type: none"> <li>• integrated switch</li> </ul>	Yes
<ul style="list-style-type: none"> <li>• RJ 45 (Ethernet)                             <ul style="list-style-type: none"> <li>– Transmission rate, max.</li> <li>– Industrial Ethernet status LED</li> </ul> </li> </ul>	Yes; Via BusAdapter BA 2x RJ45 100 Mbit/s Yes
<b>2. Interface</b>	
<b>Interface types</b>	
<ul style="list-style-type: none"> <li>• Number of ports</li> </ul>	1
<ul style="list-style-type: none"> <li>• RJ 45 (Ethernet)                             <ul style="list-style-type: none"> <li>– Transmission rate, max.</li> <li>– Industrial Ethernet status LED</li> </ul> </li> </ul>	Yes; Integrated 1 000 Mbit/s No
<b>3. Interface</b>	
<b>Interface types</b>	
<ul style="list-style-type: none"> <li>• RS 485</li> </ul>	Yes
<b>RS 485</b>	
<ul style="list-style-type: none"> <li>• Transmission rate, max.</li> </ul>	12 Mbit/s
<b>Interrupts/diagnostics/status information</b>	
<b>Diagnostics indication LED</b>	
<ul style="list-style-type: none"> <li>• RUN/STOP LED</li> <li>• ERROR LED</li> <li>• MAINT LED</li> </ul>	Yes Yes Yes
<b>Ambient conditions</b>	
<b>Ambient temperature during operation</b>	
<ul style="list-style-type: none"> <li>• min.</li> <li>• max.</li> <li>• horizontal installation, min.</li> <li>• horizontal installation, max.</li> <li>• vertical installation, min.</li> <li>• vertical installation, max.</li> </ul>	0 °C Up to 60 °C with max. 32 ET 200SP modules and 3x 100 mA USB load; up to 55 °C with max. 64 ET 200SP modules and 2x max. 500 mA and 1x max. 100 mA USB load 0 °C 60 °C 0 °C 50 °C; With max. 32 ET 200SP modules and 3x 100 mA USB load
<b>Ambient temperature during storage/transportation</b>	
<ul style="list-style-type: none"> <li>• min.</li> <li>• max.</li> </ul>	-40 °C 70 °C

Technical specifications

12.7 Module data

<b>Article number</b>	<b>6ES7677-2DB42-0GL0</b>
<b>Operating systems</b>	
Operating systems	Windows 10 IoT Enterprise LTSB 2016 (64-bit) MUI
<b>Peripherals/Options</b>	
Peripherals	
• SD card	Optionally for additional mass storage
<b>Dimensions</b>	
Width	160 mm
Height	117 mm
Depth	75 mm
<b>Weights</b>	
Weight, approx.	0.83 kg

## 12.7.5 Technical specifications of CPU 1515SP PC2 + HMI 2048PT

### Technical specifications

The following table shows the technical specifications as of 08/2018. You will find a data sheet including daily updated technical specifications on the Internet (<https://support.industry.siemens.com/cs/ww/en/pv/6ES7677-2DB42-0GM0/td>).

<b>Article number</b>	<b>6ES7677-2DB42-0GM0</b>
<b>General information</b>	
Product type designation	CPU 1515SP PC2 + HMI 2048
HW functional status	FS01
Firmware version	V2.5
<b>Engineering with</b>	
<ul style="list-style-type: none"> <li>STEP 7 TIA Portal configurable/integrated as of version</li> </ul>	V15 with HSP 269
<b>Installed software</b>	
<ul style="list-style-type: none"> <li>Visualization</li> </ul>	WinCC Runtime Advanced V15
<ul style="list-style-type: none"> <li>Control</li> </ul>	S7-1500 Software Controller CPU 1505SP
<b>Control elements</b>	
Mode selector switch	1
<b>Supply voltage</b>	
Type of supply voltage	24 V DC
permissible range, lower limit (DC)	19.2 V
permissible range, upper limit (DC)	28.8 V
Reverse polarity protection	Yes
<b>Mains buffering</b>	
<ul style="list-style-type: none"> <li>Mains/voltage failure stored energy time</li> </ul>	5 ms
<b>Input current</b>	
Current consumption (rated value)	1.8 A; Full processor load, incl. ET 200SP modules and using USB
Current consumption (in no-load operation), typ.	0.5 A
$I^2t$	0.426 A <sup>2</sup> -s; with starting current inrush
<b>Power</b>	
Active power input, max.	43 W; incl. ET 200SP modules and using USB
Infeed power to the backplane bus	8.75 W
<b>Power loss</b>	
Power loss, typ.	16 W
<b>Processor</b>	
Processor type	Intel Atom E3940, 1.6 GHz, 4 cores

<b>Article number</b>	<b>6ES7677-2DB42-0GM0</b>
<b>Memory</b>	
Type of memory	DDR3L
Main memory	8 GB RAM
CFast memory card	Yes; 30 GB flash memory
SIMATIC memory card required	No
Flash Disk	30 GB
<b>Work memory</b>	
<ul style="list-style-type: none"> <li>integrated (for program)</li> </ul>	1 Mbyte
<ul style="list-style-type: none"> <li>integrated (for data)</li> </ul>	5 Mbyte
<ul style="list-style-type: none"> <li>integrated (for CPU function library of CPU Runtime)</li> </ul>	10 Mbyte
<b>Load memory</b>	
<ul style="list-style-type: none"> <li>integrated (on PC mass storage)</li> </ul>	320 Mbyte
<b>Backup</b>	
<ul style="list-style-type: none"> <li>with UPS</li> </ul>	Yes; all memory areas declared retentive
<ul style="list-style-type: none"> <li>with non-volatile memory</li> </ul>	Yes
<b>Hardware configuration</b>	
Integrated power supply	Yes
<b>Number of DP masters</b>	
<ul style="list-style-type: none"> <li>Via CM</li> </ul>	1
<b>Rack</b>	
<ul style="list-style-type: none"> <li>Modules per rack, max.</li> </ul>	64; CPU 1515SP PC + 64 modules + server module
<ul style="list-style-type: none"> <li>Number of lines, max.</li> </ul>	1
<b>Time of day</b>	
<b>Clock</b>	
<ul style="list-style-type: none"> <li>Type</li> </ul>	Hardware clock
<ul style="list-style-type: none"> <li>Backup time</li> </ul>	6 wk; At 40 °C ambient temperature, typically
<ul style="list-style-type: none"> <li>Deviation per day, max.</li> </ul>	10 s; Typ.: 2 s
<b>Interfaces</b>	
Number of industrial Ethernet interfaces	2
Number of PROFINET interfaces	1
Number of PROFIBUS interfaces	1
Number of RS 485 interfaces	1; Via CM DP module
Number of USB interfaces	4; 2x USB 2.0, 2x USB 3.0 on front side
Number of SD card slots	1
<b>Video interfaces</b>	
<ul style="list-style-type: none"> <li>Graphics interface</li> </ul>	1x DisplayPort

<b>Article number</b>	<b>6ES7677-2DB42-0GM0</b>
<b>1. Interface</b>	
<b>Interface types</b>	
<ul style="list-style-type: none"> <li>• Number of ports</li> </ul>	2
<ul style="list-style-type: none"> <li>• integrated switch</li> </ul>	Yes
<ul style="list-style-type: none"> <li>• RJ 45 (Ethernet)</li> </ul>	Yes; Via BusAdapter BA 2x RJ45
<ul style="list-style-type: none"> <li>– Transmission rate, max.</li> </ul>	100 Mbit/s
<ul style="list-style-type: none"> <li>– Industrial Ethernet status LED</li> </ul>	Yes
<b>2. Interface</b>	
<b>Interface types</b>	
<ul style="list-style-type: none"> <li>• Number of ports</li> </ul>	1
<ul style="list-style-type: none"> <li>• RJ 45 (Ethernet)</li> </ul>	Yes; Integrated
<ul style="list-style-type: none"> <li>– Transmission rate, max.</li> </ul>	1 000 Mbit/s
<ul style="list-style-type: none"> <li>– Industrial Ethernet status LED</li> </ul>	No
<b>3. Interface</b>	
<b>Interface types</b>	
<ul style="list-style-type: none"> <li>• RS 485</li> </ul>	Yes
<b>RS 485</b>	
<ul style="list-style-type: none"> <li>• Transmission rate, max.</li> </ul>	12 Mbit/s
<b>Interrupts/diagnostics/status information</b>	
<b>Diagnostics indication LED</b>	
<ul style="list-style-type: none"> <li>• RUN/STOP LED</li> </ul>	Yes
<ul style="list-style-type: none"> <li>• ERROR LED</li> </ul>	Yes
<ul style="list-style-type: none"> <li>• MAINT LED</li> </ul>	Yes
<b>Ambient conditions</b>	
<b>Ambient temperature during operation</b>	
<ul style="list-style-type: none"> <li>• min.</li> </ul>	0 °C
<ul style="list-style-type: none"> <li>• max.</li> </ul>	Up to 60 °C with max. 32 ET 200SP modules and 3x 100 mA USB load; up to 55 °C with max. 64 ET 200SP modules and 2x max. 500 mA and 1x max. 100 mA USB load
<ul style="list-style-type: none"> <li>• horizontal installation, min.</li> </ul>	0 °C
<ul style="list-style-type: none"> <li>• horizontal installation, max.</li> </ul>	60 °C
<ul style="list-style-type: none"> <li>• vertical installation, min.</li> </ul>	0 °C
<ul style="list-style-type: none"> <li>• vertical installation, max.</li> </ul>	50 °C; With max. 32 ET 200SP modules and 3x 100 mA USB load
<b>Ambient temperature during storage/transportation</b>	
<ul style="list-style-type: none"> <li>• min.</li> </ul>	-40 °C
<ul style="list-style-type: none"> <li>• max.</li> </ul>	70 °C



*Technical specifications*

---

*12.7 Module data*

<b>Article number</b>	<b>6ES7677-2DB42-0GM0</b>
<b>Operating systems</b>	
Operating systems	Windows 10 IoT Enterprise LTSB 2016 (64-bit) MUI
<b>Peripherals/Options</b>	
Peripherals	
• SD card	Optionally for additional mass storage
<b>Dimensions</b>	
Width	160 mm
Height	117 mm
Depth	75 mm
<b>Weights</b>	
Weight, approx.	0.83 kg

## 12.7.6 Technical specifications of CPU 1515SP PC2 F

### Technical specifications

The following table shows the technical specifications as of 08/2018. You will find a data sheet including daily updated technical specifications on the Internet (<https://support.industry.siemens.com/cs/ww/en/pv/6ES7677-2SB42-0GB0/td>).

Article number	6ES7677-2SB42-0GB0
<b>General information</b>	
Product type designation	CPU 1515SP PC2 F
HW functional status	FS01
Firmware version	V2.5
<b>Engineering with</b>	
<ul style="list-style-type: none"> <li>STEP 7 TIA Portal configurable/integrated as of version</li> </ul>	V15 with HSP 269
<b>Installed software</b>	
<ul style="list-style-type: none"> <li>Visualization</li> </ul>	No
<ul style="list-style-type: none"> <li>Control</li> </ul>	S7-1500 Software Controller CPU 1505SP F
<b>Control elements</b>	
Mode selector switch	1
<b>Supply voltage</b>	
Type of supply voltage	24 V DC
permissible range, lower limit (DC)	19.2 V
permissible range, upper limit (DC)	28.8 V
Reverse polarity protection	Yes
<b>Mains buffering</b>	
<ul style="list-style-type: none"> <li>Mains/voltage failure stored energy time</li> </ul>	5 ms
<b>Input current</b>	
Current consumption (rated value)	1.8 A; Full processor load, incl. ET 200SP modules and using USB
Current consumption (in no-load operation), typ.	0.5 A
$I^2t$	0.426 A <sup>2</sup> ·s; with starting current inrush
<b>Power</b>	
Active power input, max.	43 W; incl. ET 200SP modules and using USB
Infeed power to the backplane bus	8.75 W
<b>Power loss</b>	
Power loss, typ.	16 W
<b>Processor</b>	
Processor type	Intel Atom E3940, 1.6 GHz, 4 cores

<b>Article number</b>	<b>6ES7677-2SB42-0GB0</b>
<b>Memory</b>	
Type of memory	DDR3L
Main memory	8 GB RAM
CFast memory card	Yes; 30 GB flash memory
SIMATIC memory card required	No
Flash Disk	30 GB
<b>Work memory</b>	
<ul style="list-style-type: none"> <li>integrated (for program)</li> </ul>	1.5 Mbyte
<ul style="list-style-type: none"> <li>integrated (for data)</li> </ul>	5 Mbyte
<ul style="list-style-type: none"> <li>integrated (for CPU function library of CPU Runtime)</li> </ul>	10 Mbyte
<b>Load memory</b>	
<ul style="list-style-type: none"> <li>integrated (on PC mass storage)</li> </ul>	320 Mbyte
<b>Backup</b>	
<ul style="list-style-type: none"> <li>with UPS</li> </ul>	Yes; all memory areas declared retentive
<ul style="list-style-type: none"> <li>with non-volatile memory</li> </ul>	Yes
<b>Hardware configuration</b>	
Integrated power supply	Yes
<b>Number of DP masters</b>	
<ul style="list-style-type: none"> <li>Via CM</li> </ul>	1
<b>Rack</b>	
<ul style="list-style-type: none"> <li>Modules per rack, max.</li> </ul>	64; CPU 1515SP PC + 64 modules + server module
<ul style="list-style-type: none"> <li>Number of lines, max.</li> </ul>	1
<b>Time of day</b>	
<b>Clock</b>	
<ul style="list-style-type: none"> <li>Type</li> </ul>	Hardware clock
<ul style="list-style-type: none"> <li>Backup time</li> </ul>	6 wk; At 40 °C ambient temperature, typically
<ul style="list-style-type: none"> <li>Deviation per day, max.</li> </ul>	10 s; Typ.: 2 s
<b>Interfaces</b>	
Number of industrial Ethernet interfaces	2
Number of PROFINET interfaces	1
Number of PROFIBUS interfaces	1
Number of RS 485 interfaces	1; Via CM DP module
Number of USB interfaces	4; 2x USB 2.0, 2x USB 3.0 on front side
Number of SD card slots	1
<b>Video interfaces</b>	
<ul style="list-style-type: none"> <li>Graphics interface</li> </ul>	1x DisplayPort

<b>Article number</b>	<b>6ES7677-2SB42-0GB0</b>
<b>1. Interface</b>	
<b>Interface types</b>	
<ul style="list-style-type: none"> <li>• Number of ports</li> </ul>	2
<ul style="list-style-type: none"> <li>• integrated switch</li> </ul>	Yes
<ul style="list-style-type: none"> <li>• RJ 45 (Ethernet)</li> </ul>	Yes; Via BusAdapter BA 2x RJ45
<ul style="list-style-type: none"> <li>– Transmission rate, max.</li> </ul>	100 Mbit/s
<ul style="list-style-type: none"> <li>– Industrial Ethernet status LED</li> </ul>	Yes
<b>2. Interface</b>	
<b>Interface types</b>	
<ul style="list-style-type: none"> <li>• Number of ports</li> </ul>	1
<ul style="list-style-type: none"> <li>• RJ 45 (Ethernet)</li> </ul>	Yes; Integrated
<ul style="list-style-type: none"> <li>– Transmission rate, max.</li> </ul>	1 000 Mbit/s
<ul style="list-style-type: none"> <li>– Industrial Ethernet status LED</li> </ul>	No
<b>3. Interface</b>	
<b>Interface types</b>	
<ul style="list-style-type: none"> <li>• RS 485</li> </ul>	Yes
<b>RS 485</b>	
<ul style="list-style-type: none"> <li>• Transmission rate, max.</li> </ul>	12 Mbit/s
<b>Interrupts/diagnostics/status information</b>	
<b>Diagnostics indication LED</b>	
<ul style="list-style-type: none"> <li>• RUN/STOP LED</li> </ul>	Yes
<ul style="list-style-type: none"> <li>• ERROR LED</li> </ul>	Yes
<ul style="list-style-type: none"> <li>• MAINT LED</li> </ul>	Yes
<b>Ambient conditions</b>	
<b>Ambient temperature during operation</b>	
<ul style="list-style-type: none"> <li>• min.</li> </ul>	0 °C
<ul style="list-style-type: none"> <li>• max.</li> </ul>	Up to 60 °C with max. 32 ET 200SP modules and 3x 100 mA USB load; up to 55 °C with max. 64 ET 200SP modules and 2x max. 500 mA and 1x max. 100 mA USB load
<ul style="list-style-type: none"> <li>• horizontal installation, min.</li> </ul>	0 °C
<ul style="list-style-type: none"> <li>• horizontal installation, max.</li> </ul>	60 °C
<ul style="list-style-type: none"> <li>• vertical installation, min.</li> </ul>	0 °C
<ul style="list-style-type: none"> <li>• vertical installation, max.</li> </ul>	50 °C; With max. 32 ET 200SP modules and 3x 100 mA USB load
<b>Ambient temperature during storage/transportation</b>	
<ul style="list-style-type: none"> <li>• min.</li> </ul>	-40 °C
<ul style="list-style-type: none"> <li>• max.</li> </ul>	70 °C

Technical specifications

12.7 Module data

<b>Article number</b>	<b>6ES7677-2SB42-0GB0</b>
<b>Operating systems</b>	
Operating systems	Windows 10 IoT Enterprise LTSB 2016 (64-bit) MUI
<b>Peripherals/Options</b>	
Peripherals	
• SD card	Optionally for additional mass storage
<b>Dimensions</b>	
Width	160 mm
Height	117 mm
Depth	75 mm
<b>Weights</b>	
Weight, approx.	0.83 kg

## 12.7.7 Technical specifications of CPU 1515SP PC2 F + HMI 128PT

### Technical specifications

The following table shows the technical specifications as of 08/2018. You will find a data sheet including daily updated technical specifications on the Internet (<https://support.industry.siemens.com/cs/ww/en/pv/6ES7677-2SB42-0GK0/td>).

Article number	6ES7677-2SB42-0GK0
<b>General information</b>	
Product type designation	CPU 1515SP PC2 F + HMI 128
HW functional status	FS01
Firmware version	V2.5
<b>Engineering with</b>	
<ul style="list-style-type: none"> <li>STEP 7 TIA Portal configurable/integrated as of version</li> </ul>	V15 with HSP 269
<b>Installed software</b>	
<ul style="list-style-type: none"> <li>Visualization</li> </ul>	WinCC Runtime Advanced V15
<ul style="list-style-type: none"> <li>Control</li> </ul>	S7-1500 Software Controller CPU 1505SP F
<b>Control elements</b>	
Mode selector switch	1
<b>Supply voltage</b>	
Type of supply voltage	24 V DC
permissible range, lower limit (DC)	19.2 V
permissible range, upper limit (DC)	28.8 V
Reverse polarity protection	Yes
<b>Mains buffering</b>	
<ul style="list-style-type: none"> <li>Mains/voltage failure stored energy time</li> </ul>	5 ms
<b>Input current</b>	
Current consumption (rated value)	1.8 A; Full processor load, incl. ET 200SP modules and using USB
Current consumption (in no-load operation), typ.	0.5 A
$I^2t$	0.426 A <sup>2</sup> ·s; with starting current inrush
<b>Power</b>	
Active power input, max.	43 W; incl. ET 200SP modules and using USB
Infeed power to the backplane bus	8.75 W
<b>Power loss</b>	
Power loss, typ.	16 W
<b>Processor</b>	
Processor type	Intel Atom E3940, 1.6 GHz, 4 cores

<b>Article number</b>	<b>6ES7677-2SB42-0GK0</b>
<b>Memory</b>	
Type of memory	DDR3L
Main memory	8 GB RAM
CFast memory card	Yes; 30 GB flash memory
SIMATIC memory card required	No
Flash Disk	30 GB
<b>Work memory</b>	
<ul style="list-style-type: none"> <li>integrated (for program)</li> </ul>	1.5 Mbyte
<ul style="list-style-type: none"> <li>integrated (for data)</li> </ul>	5 Mbyte
<ul style="list-style-type: none"> <li>integrated (for CPU function library of CPU Runtime)</li> </ul>	10 Mbyte
<b>Load memory</b>	
<ul style="list-style-type: none"> <li>integrated (on PC mass storage)</li> </ul>	320 Mbyte
<b>Backup</b>	
<ul style="list-style-type: none"> <li>with UPS</li> </ul>	Yes; all memory areas declared retentive
<ul style="list-style-type: none"> <li>with non-volatile memory</li> </ul>	Yes
<b>Hardware configuration</b>	
Integrated power supply	Yes
<b>Number of DP masters</b>	
<ul style="list-style-type: none"> <li>Via CM</li> </ul>	1
<b>Rack</b>	
<ul style="list-style-type: none"> <li>Modules per rack, max.</li> </ul>	64; CPU 1515SP PC + 64 modules + server module
<ul style="list-style-type: none"> <li>Number of lines, max.</li> </ul>	1
<b>Time of day</b>	
<b>Clock</b>	
<ul style="list-style-type: none"> <li>Type</li> </ul>	Hardware clock
<ul style="list-style-type: none"> <li>Backup time</li> </ul>	6 wk; At 40 °C ambient temperature, typically
<ul style="list-style-type: none"> <li>Deviation per day, max.</li> </ul>	10 s; Typ.: 2 s
<b>Interfaces</b>	
Number of industrial Ethernet interfaces	2
Number of PROFINET interfaces	1
Number of PROFIBUS interfaces	1
Number of RS 485 interfaces	1; Via CM DP module
Number of USB interfaces	4; 2x USB 2.0, 2x USB 3.0 on front side
Number of SD card slots	1
<b>Video interfaces</b>	
<ul style="list-style-type: none"> <li>Graphics interface</li> </ul>	1x DisplayPort

<b>Article number</b>	<b>6ES7677-2SB42-0GK0</b>
<b>1. Interface</b>	
<b>Interface types</b>	
<ul style="list-style-type: none"> <li>• Number of ports</li> </ul>	2
<ul style="list-style-type: none"> <li>• integrated switch</li> </ul>	Yes
<ul style="list-style-type: none"> <li>• RJ 45 (Ethernet)                             <ul style="list-style-type: none"> <li>– Transmission rate, max.</li> <li>– Industrial Ethernet status LED</li> </ul> </li> </ul>	Yes; Via BusAdapter BA 2x RJ45 100 Mbit/s Yes
<b>2. Interface</b>	
<b>Interface types</b>	
<ul style="list-style-type: none"> <li>• Number of ports</li> </ul>	1
<ul style="list-style-type: none"> <li>• RJ 45 (Ethernet)                             <ul style="list-style-type: none"> <li>– Transmission rate, max.</li> <li>– Industrial Ethernet status LED</li> </ul> </li> </ul>	Yes; Integrated 1 000 Mbit/s No
<b>3. Interface</b>	
<b>Interface types</b>	
<ul style="list-style-type: none"> <li>• RS 485</li> </ul>	Yes
<b>RS 485</b>	
<ul style="list-style-type: none"> <li>• Transmission rate, max.</li> </ul>	12 Mbit/s
<b>Interrupts/diagnostics/status information</b>	
<b>Diagnostics indication LED</b>	
<ul style="list-style-type: none"> <li>• RUN/STOP LED</li> <li>• ERROR LED</li> <li>• MAINT LED</li> </ul>	Yes Yes Yes
<b>Ambient conditions</b>	
<b>Ambient temperature during operation</b>	
<ul style="list-style-type: none"> <li>• min.</li> <li>• max.</li> <li>• horizontal installation, min.</li> <li>• horizontal installation, max.</li> <li>• vertical installation, min.</li> <li>• vertical installation, max.</li> </ul>	0 °C Up to 60 °C with max. 32 ET 200SP modules and 3x 100 mA USB load; up to 55 °C with max. 64 ET 200SP modules and 2x max. 500 mA and 1x max. 100 mA USB load 0 °C 60 °C 0 °C 50 °C; With max. 32 ET 200SP modules and 3x 100 mA USB load
<b>Ambient temperature during storage/transportation</b>	
<ul style="list-style-type: none"> <li>• min.</li> <li>• max.</li> </ul>	-40 °C 70 °C



12.7 Module data

<b>Article number</b>	<b>6ES7677-2SB42-0GK0</b>
<b>Operating systems</b>	
Operating systems	Windows 10 IoT Enterprise LTSB 2016 (64-bit) MUI
<b>Peripherals/Options</b>	
Peripherals	
• SD card	Optionally for additional mass storage
<b>Dimensions</b>	
Width	160 mm
Height	117 mm
Depth	75 mm
<b>Weights</b>	
Weight, approx.	0.83 kg

## 12.7.8 Technical specifications of CPU 1515SP PC2 F + HMI 512PT

### Technical specifications

The following table shows the technical specifications as of 08/2018. You will find a data sheet including daily updated technical specifications on the Internet (<https://support.industry.siemens.com/cs/ww/en/pv/6ES7677-2SB42-0GL0/td>).

<b>Article number</b>	<b>6ES7677-2SB42-0GL0</b>
<b>General information</b>	
Product type designation	CPU 1515SP PC2 F + HMI 512
HW functional status	FS01
Firmware version	V2.5
<b>Engineering with</b>	
<ul style="list-style-type: none"> <li>STEP 7 TIA Portal configurable/integrated as of version</li> </ul>	V15 with HSP 269
<b>Installed software</b>	
<ul style="list-style-type: none"> <li>Visualization</li> </ul>	WinCC Runtime Advanced V15
<ul style="list-style-type: none"> <li>Control</li> </ul>	S7-1500 Software Controller CPU 1505SP F
<b>Control elements</b>	
Mode selector switch	1
<b>Supply voltage</b>	
Type of supply voltage	24 V DC
permissible range, lower limit (DC)	19.2 V
permissible range, upper limit (DC)	28.8 V
Reverse polarity protection	Yes
<b>Mains buffering</b>	
<ul style="list-style-type: none"> <li>Mains/voltage failure stored energy time</li> </ul>	5 ms
<b>Input current</b>	
Current consumption (rated value)	1.8 A; Full processor load, incl. ET 200SP modules and using USB
Current consumption (in no-load operation), typ.	0.5 A
$I^2t$	0.426 A <sup>2</sup> -s; with starting current inrush
<b>Power</b>	
Active power input, max.	43 W; incl. ET 200SP modules and using USB
Infeed power to the backplane bus	8.75 W
<b>Power loss</b>	
Power loss, typ.	16 W
<b>Processor</b>	
Processor type	Intel Atom E3940, 1.6 GHz, 4 cores

<b>Article number</b>	<b>6ES7677-2SB42-0GL0</b>
<b>Memory</b>	
Type of memory	DDR3L
Main memory	8 GB RAM
CFast memory card	Yes; 30 GB flash memory
SIMATIC memory card required	No
Flash Disk	30 GB
<b>Work memory</b>	
<ul style="list-style-type: none"> <li>integrated (for program)</li> </ul>	1.5 Mbyte
<ul style="list-style-type: none"> <li>integrated (for data)</li> </ul>	5 Mbyte
<ul style="list-style-type: none"> <li>integrated (for CPU function library of CPU Runtime)</li> </ul>	10 Mbyte
<b>Load memory</b>	
<ul style="list-style-type: none"> <li>integrated (on PC mass storage)</li> </ul>	320 Mbyte
<b>Backup</b>	
<ul style="list-style-type: none"> <li>with UPS</li> </ul>	Yes; all memory areas declared retentive
<ul style="list-style-type: none"> <li>with non-volatile memory</li> </ul>	Yes
<b>Hardware configuration</b>	
Integrated power supply	Yes
<b>Number of DP masters</b>	
<ul style="list-style-type: none"> <li>Via CM</li> </ul>	1
<b>Rack</b>	
<ul style="list-style-type: none"> <li>Modules per rack, max.</li> </ul>	64; CPU 1515SP PC + 64 modules + server module
<ul style="list-style-type: none"> <li>Number of lines, max.</li> </ul>	1
<b>Time of day</b>	
<b>Clock</b>	
<ul style="list-style-type: none"> <li>Type</li> </ul>	Hardware clock
<ul style="list-style-type: none"> <li>Backup time</li> </ul>	6 wk; At 40 °C ambient temperature, typically
<ul style="list-style-type: none"> <li>Deviation per day, max.</li> </ul>	10 s; Typ.: 2 s
<b>Interfaces</b>	
Number of industrial Ethernet interfaces	2
Number of PROFINET interfaces	1
Number of PROFIBUS interfaces	1
Number of RS 485 interfaces	1; Via CM DP module
Number of USB interfaces	4; 2x USB 2.0, 2x USB 3.0 on front side
Number of SD card slots	1
<b>Video interfaces</b>	
<ul style="list-style-type: none"> <li>Graphics interface</li> </ul>	1x DisplayPort

<b>Article number</b>	<b>6ES7677-2SB42-0GL0</b>
<b>1. Interface</b>	
<b>Interface types</b>	
<ul style="list-style-type: none"> <li>• Number of ports</li> </ul>	2
<ul style="list-style-type: none"> <li>• integrated switch</li> </ul>	Yes
<ul style="list-style-type: none"> <li>• RJ 45 (Ethernet)</li> </ul>	Yes; Via BusAdapter BA 2x RJ45
<ul style="list-style-type: none"> <li>– Transmission rate, max.</li> </ul>	100 Mbit/s
<ul style="list-style-type: none"> <li>– Industrial Ethernet status LED</li> </ul>	Yes
<b>2. Interface</b>	
<b>Interface types</b>	
<ul style="list-style-type: none"> <li>• Number of ports</li> </ul>	1
<ul style="list-style-type: none"> <li>• RJ 45 (Ethernet)</li> </ul>	Yes; Integrated
<ul style="list-style-type: none"> <li>– Transmission rate, max.</li> </ul>	1 000 Mbit/s
<ul style="list-style-type: none"> <li>– Industrial Ethernet status LED</li> </ul>	No
<b>3. Interface</b>	
<b>Interface types</b>	
<ul style="list-style-type: none"> <li>• RS 485</li> </ul>	Yes
<b>RS 485</b>	
<ul style="list-style-type: none"> <li>• Transmission rate, max.</li> </ul>	12 Mbit/s
<b>Interrupts/diagnostics/status information</b>	
<b>Diagnostics indication LED</b>	
<ul style="list-style-type: none"> <li>• RUN/STOP LED</li> </ul>	Yes
<ul style="list-style-type: none"> <li>• ERROR LED</li> </ul>	Yes
<ul style="list-style-type: none"> <li>• MAINT LED</li> </ul>	Yes
<b>Ambient conditions</b>	
<b>Ambient temperature during operation</b>	
<ul style="list-style-type: none"> <li>• min.</li> </ul>	0 °C
<ul style="list-style-type: none"> <li>• max.</li> </ul>	Up to 60 °C with max. 32 ET 200SP modules and 3x 100 mA USB load; up to 55 °C with max. 64 ET 200SP modules and 2x max. 500 mA and 1x max. 100 mA USB load
<ul style="list-style-type: none"> <li>• horizontal installation, min.</li> </ul>	0 °C
<ul style="list-style-type: none"> <li>• horizontal installation, max.</li> </ul>	60 °C
<ul style="list-style-type: none"> <li>• vertical installation, min.</li> </ul>	0 °C
<ul style="list-style-type: none"> <li>• vertical installation, max.</li> </ul>	50 °C; With max. 32 ET 200SP modules and 3x 100 mA USB load
<b>Ambient temperature during storage/transportation</b>	
<ul style="list-style-type: none"> <li>• min.</li> </ul>	-40 °C
<ul style="list-style-type: none"> <li>• max.</li> </ul>	70 °C

Technical specifications

12.7 Module data

<b>Article number</b>	<b>6ES7677-2SB42-0GL0</b>
<b>Operating systems</b>	
Operating systems	Windows 10 IoT Enterprise LTSB 2016 (64-bit) MUI
<b>Peripherals/Options</b>	
Peripherals	
• SD card	Optionally for additional mass storage
<b>Dimensions</b>	
Width	160 mm
Height	117 mm
Depth	75 mm
<b>Weights</b>	
Weight, approx.	0.83 kg

## 12.7.9 Technical specifications of CPU 1515SP PC2 F + HMI 2018PT

### Technical specifications

The following table shows the technical specifications as of 08/2018. You will find a data sheet including daily updated technical specifications on the Internet (<https://support.industry.siemens.com/cs/ww/en/pv/6ES7677-2SB42-0GM0/td>).

Article number	6ES7677-2SB42-0GM0
<b>General information</b>	
Product type designation	CPU 1515SP PC2 F + HMI 2048
HW functional status	FS01
Firmware version	V2.5
<b>Engineering with</b>	
<ul style="list-style-type: none"> <li>STEP 7 TIA Portal configurable/integrated as of version</li> </ul>	V15 with HSP 269
<b>Installed software</b>	
<ul style="list-style-type: none"> <li>Visualization</li> </ul>	WinCC Runtime Advanced V15
<ul style="list-style-type: none"> <li>Control</li> </ul>	S7-1500 Software Controller CPU 1505SP F
<b>Control elements</b>	
Mode selector switch	1
<b>Supply voltage</b>	
Type of supply voltage	24 V DC
permissible range, lower limit (DC)	19.2 V
permissible range, upper limit (DC)	28.8 V
Reverse polarity protection	Yes
<b>Mains buffering</b>	
<ul style="list-style-type: none"> <li>Mains/voltage failure stored energy time</li> </ul>	5 ms
<b>Input current</b>	
Current consumption (rated value)	1.8 A; Full processor load, incl. ET 200SP modules and using USB
Current consumption (in no-load operation), typ.	0.5 A
$I^2t$	0.426 A <sup>2</sup> -s; with starting current inrush
<b>Power</b>	
Active power input, max.	43 W; incl. ET 200SP modules and using USB
Infeed power to the backplane bus	8.75 W
<b>Power loss</b>	
Power loss, typ.	16 W
<b>Processor</b>	
Processor type	Intel Atom E3940, 1.6 GHz, 4 cores

<b>Article number</b>	<b>6ES7677-2SB42-0GM0</b>
<b>Memory</b>	
Type of memory	DDR3L
Main memory	8 GB RAM
CFast memory card	Yes; 30 GB flash memory
SIMATIC memory card required	No
Flash Disk	30 GB
<b>Work memory</b>	
<ul style="list-style-type: none"> <li>integrated (for program)</li> </ul>	1.5 Mbyte
<ul style="list-style-type: none"> <li>integrated (for data)</li> </ul>	5 Mbyte
<ul style="list-style-type: none"> <li>integrated (for CPU function library of CPU Runtime)</li> </ul>	10 Mbyte
<b>Load memory</b>	
<ul style="list-style-type: none"> <li>integrated (on PC mass storage)</li> </ul>	320 Mbyte
<b>Backup</b>	
<ul style="list-style-type: none"> <li>with UPS</li> </ul>	Yes; all memory areas declared retentive
<ul style="list-style-type: none"> <li>with non-volatile memory</li> </ul>	Yes
<b>Hardware configuration</b>	
Integrated power supply	Yes
<b>Number of DP masters</b>	
<ul style="list-style-type: none"> <li>Via CM</li> </ul>	1
<b>Rack</b>	
<ul style="list-style-type: none"> <li>Modules per rack, max.</li> </ul>	64; CPU 1515SP PC + 64 modules + server module
<ul style="list-style-type: none"> <li>Number of lines, max.</li> </ul>	1
<b>Time of day</b>	
<b>Clock</b>	
<ul style="list-style-type: none"> <li>Type</li> </ul>	Hardware clock
<ul style="list-style-type: none"> <li>Backup time</li> </ul>	6 wk; At 40 °C ambient temperature, typically
<ul style="list-style-type: none"> <li>Deviation per day, max.</li> </ul>	10 s; Typ.: 2 s
<b>Interfaces</b>	
Number of industrial Ethernet interfaces	2
Number of PROFINET interfaces	1
Number of PROFIBUS interfaces	1
Number of RS 485 interfaces	1; Via CM DP module
Number of USB interfaces	4; 2x USB 2.0, 2x USB 3.0 on front side
Number of SD card slots	1
<b>Video interfaces</b>	
<ul style="list-style-type: none"> <li>Graphics interface</li> </ul>	1x DisplayPort

<b>Article number</b>	<b>6ES7677-2SB42-0GM0</b>
<b>1. Interface</b>	
<b>Interface types</b>	
<ul style="list-style-type: none"> <li>• Number of ports</li> </ul>	2
<ul style="list-style-type: none"> <li>• integrated switch</li> </ul>	Yes
<ul style="list-style-type: none"> <li>• RJ 45 (Ethernet)                             <ul style="list-style-type: none"> <li>– Transmission rate, max.</li> <li>– Industrial Ethernet status LED</li> </ul> </li> </ul>	Yes; Via BusAdapter BA 2x RJ45 100 Mbit/s Yes
<b>2. Interface</b>	
<b>Interface types</b>	
<ul style="list-style-type: none"> <li>• Number of ports</li> </ul>	1
<ul style="list-style-type: none"> <li>• RJ 45 (Ethernet)                             <ul style="list-style-type: none"> <li>– Transmission rate, max.</li> <li>– Industrial Ethernet status LED</li> </ul> </li> </ul>	Yes; Integrated 1 000 Mbit/s No
<b>3. Interface</b>	
<b>Interface types</b>	
<ul style="list-style-type: none"> <li>• RS 485</li> </ul>	Yes
<b>RS 485</b>	
<ul style="list-style-type: none"> <li>• Transmission rate, max.</li> </ul>	12 Mbit/s
<b>Interrupts/diagnostics/status information</b>	
<b>Diagnostics indication LED</b>	
<ul style="list-style-type: none"> <li>• RUN/STOP LED</li> <li>• ERROR LED</li> <li>• MAINT LED</li> </ul>	Yes Yes Yes
<b>Ambient conditions</b>	
<b>Ambient temperature during operation</b>	
<ul style="list-style-type: none"> <li>• min.</li> <li>• max.</li> <li>• horizontal installation, min.</li> <li>• horizontal installation, max.</li> <li>• vertical installation, min.</li> <li>• vertical installation, max.</li> </ul>	0 °C Up to 60 °C with max. 32 ET 200SP modules and 3x 100 mA USB load; up to 55 °C with max. 64 ET 200SP modules and 2x max. 500 mA and 1x max. 100 mA USB load 0 °C 60 °C 0 °C 50 °C; With max. 32 ET 200SP modules and 3x 100 mA USB load
<b>Ambient temperature during storage/transportation</b>	
<ul style="list-style-type: none"> <li>• min.</li> <li>• max.</li> </ul>	-40 °C 70 °C



Technical specifications

12.7 Module data

<b>Article number</b>	<b>6ES7677-2SB42-0GM0</b>
<b>Operating systems</b>	
Operating systems	Windows 10 IoT Enterprise LTSB 2016 (64-bit) MUI
<b>Peripherals/Options</b>	
Peripherals	
• SD card	Optionally for additional mass storage
<b>Dimensions</b>	
Width	160 mm
Height	117 mm
Depth	75 mm
<b>Weights</b>	
Weight, approx.	0.83 kg

## 12.7.10 Technical specifications of CPU 1515SP PC2 T

### Technical specifications

The following table shows the technical specifications as of 08/2018. You will find a data sheet including daily updated technical specifications on the Internet (<https://support.industry.siemens.com/cs/ww/en/pv/6ES7677-2VB42-0GB0/td>).

Article number	6ES7677-2VB42-0GB0
<b>General information</b>	
Product type designation	CPU 1515SP PC2 T
HW functional status	FS01
Firmware version	V2.5
<b>Engineering with</b>	
<ul style="list-style-type: none"> <li>STEP 7 TIA Portal configurable/integrated as of version</li> </ul>	V15 with HSP 269
<b>Installed software</b>	
<ul style="list-style-type: none"> <li>Visualization</li> </ul>	No
<ul style="list-style-type: none"> <li>Control</li> </ul>	S7-1500 Software Controller CPU 1505SP T
<b>Control elements</b>	
Mode selector switch	1
<b>Supply voltage</b>	
Type of supply voltage	24 V DC
permissible range, lower limit (DC)	19.2 V
permissible range, upper limit (DC)	28.8 V
Reverse polarity protection	Yes
<b>Mains buffering</b>	
<ul style="list-style-type: none"> <li>Mains/voltage failure stored energy time</li> </ul>	5 ms
<b>Input current</b>	
Current consumption (rated value)	1.8 A; Full processor load, incl. ET 200SP modules and using USB
Current consumption (in no-load operation), typ.	0.5 A
$I^2t$	0.426 A <sup>2</sup> -s; with starting current inrush
<b>Power</b>	
Active power input, max.	43 W; incl. ET 200SP modules and using USB
Infeed power to the backplane bus	8.75 W
<b>Power loss</b>	
Power loss, typ.	16 W
<b>Processor</b>	
Processor type	Intel Atom E3940, 1.6 GHz, 4 cores

<b>Article number</b>	<b>6ES7677-2VB42-0GB0</b>
<b>Memory</b>	
Type of memory	DDR3L
Main memory	8 GB RAM
CFast memory card	Yes; 30 GB flash memory
SIMATIC memory card required	No
Flash Disk	30 GB
<b>Work memory</b>	
<ul style="list-style-type: none"> <li>integrated (for program)</li> </ul>	1.5 Mbyte
<ul style="list-style-type: none"> <li>integrated (for data)</li> </ul>	5 Mbyte
<ul style="list-style-type: none"> <li>integrated (for CPU function library of CPU Runtime)</li> </ul>	10 Mbyte
<b>Load memory</b>	
<ul style="list-style-type: none"> <li>integrated (on PC mass storage)</li> </ul>	320 Mbyte
<b>Backup</b>	
<ul style="list-style-type: none"> <li>with UPS</li> </ul>	Yes; all memory areas declared retentive
<ul style="list-style-type: none"> <li>with non-volatile memory</li> </ul>	Yes
<b>Hardware configuration</b>	
Integrated power supply	Yes
<b>Number of DP masters</b>	
<ul style="list-style-type: none"> <li>Via CM</li> </ul>	1
<b>Rack</b>	
<ul style="list-style-type: none"> <li>Modules per rack, max.</li> </ul>	64; CPU 1515SP PC + 64 modules + server module
<ul style="list-style-type: none"> <li>Number of lines, max.</li> </ul>	1
<b>Time of day</b>	
<b>Clock</b>	
<ul style="list-style-type: none"> <li>Type</li> </ul>	Hardware clock
<ul style="list-style-type: none"> <li>Backup time</li> </ul>	6 wk; At 40 °C ambient temperature, typically
<ul style="list-style-type: none"> <li>Deviation per day, max.</li> </ul>	10 s; Typ.: 2 s
<b>Interfaces</b>	
Number of industrial Ethernet interfaces	2
Number of PROFINET interfaces	1
Number of PROFIBUS interfaces	1
Number of RS 485 interfaces	1; Via CM DP module
Number of USB interfaces	4; 2x USB 2.0, 2x USB 3.0 on front side
Number of SD card slots	1
<b>Video interfaces</b>	
<ul style="list-style-type: none"> <li>Graphics interface</li> </ul>	1x DisplayPort

<b>Article number</b>	<b>6ES7677-2VB42-0GB0</b>
<b>1. Interface</b>	
<b>Interface types</b>	
<ul style="list-style-type: none"> <li>Number of ports</li> </ul>	2
<ul style="list-style-type: none"> <li>integrated switch</li> </ul>	Yes
<ul style="list-style-type: none"> <li>RJ 45 (Ethernet)                             <ul style="list-style-type: none"> <li>Transmission rate, max.</li> <li>Industrial Ethernet status LED</li> </ul> </li> </ul>	Yes; Via BusAdapter BA 2x RJ45 100 Mbit/s Yes
<b>2. Interface</b>	
<b>Interface types</b>	
<ul style="list-style-type: none"> <li>Number of ports</li> <li>RJ 45 (Ethernet)                             <ul style="list-style-type: none"> <li>Transmission rate, max.</li> <li>Industrial Ethernet status LED</li> </ul> </li> </ul>	1 Yes; Integrated 1 000 Mbit/s No
<b>3. Interface</b>	
<b>Interface types</b>	
<ul style="list-style-type: none"> <li>RS 485</li> </ul>	Yes
<b>RS 485</b>	
<ul style="list-style-type: none"> <li>Transmission rate, max.</li> </ul>	12 Mbit/s
<b>Interrupts/diagnostics/status information</b>	
<b>Diagnostics indication LED</b>	
<ul style="list-style-type: none"> <li>RUN/STOP LED</li> <li>ERROR LED</li> <li>MAINT LED</li> </ul>	Yes Yes Yes
<b>Ambient conditions</b>	
<b>Ambient temperature during operation</b>	
<ul style="list-style-type: none"> <li>min.</li> <li>max.</li> <li>horizontal installation, min.</li> <li>horizontal installation, max.</li> <li>vertical installation, min.</li> <li>vertical installation, max.</li> </ul>	0 °C Up to 60 °C with max. 32 ET 200SP modules and 3x 100 mA USB load; up to 55 °C with max. 64 ET 200SP modules and 2x max. 500 mA and 1x max. 100 mA USB load 0 °C 60 °C 0 °C 50 °C; With max. 32 ET 200SP modules and 3x 100 mA USB load
<b>Ambient temperature during storage/transportation</b>	
<ul style="list-style-type: none"> <li>min.</li> <li>max.</li> </ul>	-40 °C 70 °C

12.7 Module data

<b>Article number</b>	<b>6ES7677-2VB42-0GB0</b>
<b>Operating systems</b>	
Operating systems	Windows 10 IoT Enterprise LTSB 2016 (64-bit) MUI
<b>Peripherals/Options</b>	
Peripherals	
• SD card	Optionally for additional mass storage
<b>Dimensions</b>	
Width	160 mm
Height	117 mm
Depth	75 mm
<b>Weights</b>	
Weight, approx.	0.83 kg

## 12.7.11 Technical specifications of CPU 1515SP PC2 TF

### Technical specifications

The following table shows the technical specifications as of 08/2018. You will find a data sheet including daily updated technical specifications on the Internet (<https://support.industry.siemens.com/cs/ww/en/pv/6ES7677-2WB42-0GB0/td>).

<b>Article number</b>	<b>6ES7677-2WB42-0GB0</b>
<b>General information</b>	
Product type designation	CPU 1515SP PC2 TF
HW functional status	FS01
Firmware version	V2.5
<b>Engineering with</b>	
<ul style="list-style-type: none"> <li>STEP 7 TIA Portal configurable/integrated as of version</li> </ul>	V15 with HSP 269
<b>Installed software</b>	
<ul style="list-style-type: none"> <li>Visualization</li> </ul>	No
<ul style="list-style-type: none"> <li>Control</li> </ul>	S7-1500 Software Controller CPU 1505SP TF
<b>Control elements</b>	
Mode selector switch	1
<b>Supply voltage</b>	
Type of supply voltage	24 V DC
permissible range, lower limit (DC)	19.2 V
permissible range, upper limit (DC)	28.8 V
Reverse polarity protection	Yes
<b>Mains buffering</b>	
<ul style="list-style-type: none"> <li>Mains/voltage failure stored energy time</li> </ul>	5 ms
<b>Input current</b>	
Current consumption (rated value)	1.8 A; Full processor load, incl. ET 200SP modules and using USB
Current consumption (in no-load operation), typ.	0.5 A
$I^2t$	0.426 A <sup>2</sup> -s; with starting current inrush
<b>Power</b>	
Active power input, max.	43 W; incl. ET 200SP modules and using USB
Infeed power to the backplane bus	8.75 W
<b>Power loss</b>	
Power loss, typ.	16 W
<b>Processor</b>	
Processor type	Intel Atom E3940, 1.6 GHz, 4 cores

<b>Article number</b>	<b>6ES7677-2WB42-0GB0</b>
<b>Memory</b>	
Type of memory	DDR3L
Main memory	8 GB RAM
CFast memory card	Yes; 30 GB flash memory
SIMATIC memory card required	No
Flash Disk	30 GB
<b>Work memory</b>	
<ul style="list-style-type: none"> <li>integrated (for program)</li> </ul>	1.5 Mbyte
<ul style="list-style-type: none"> <li>integrated (for data)</li> </ul>	5 Mbyte
<ul style="list-style-type: none"> <li>integrated (for CPU function library of CPU Runtime)</li> </ul>	10 Mbyte
<b>Load memory</b>	
<ul style="list-style-type: none"> <li>integrated (on PC mass storage)</li> </ul>	320 Mbyte
<b>Backup</b>	
<ul style="list-style-type: none"> <li>with UPS</li> </ul>	Yes; all memory areas declared retentive
<ul style="list-style-type: none"> <li>with non-volatile memory</li> </ul>	Yes
<b>Hardware configuration</b>	
Integrated power supply	Yes
<b>Number of DP masters</b>	
<ul style="list-style-type: none"> <li>Via CM</li> </ul>	1
<b>Rack</b>	
<ul style="list-style-type: none"> <li>Modules per rack, max.</li> </ul>	64; CPU 1515SP PC + 64 modules + server module
<ul style="list-style-type: none"> <li>Number of lines, max.</li> </ul>	1
<b>Time of day</b>	
<b>Clock</b>	
<ul style="list-style-type: none"> <li>Type</li> </ul>	Hardware clock
<ul style="list-style-type: none"> <li>Backup time</li> </ul>	6 wk; At 40 °C ambient temperature, typically
<ul style="list-style-type: none"> <li>Deviation per day, max.</li> </ul>	10 s; Typ.: 2 s
<b>Interfaces</b>	
Number of industrial Ethernet interfaces	2
Number of PROFINET interfaces	1
Number of PROFIBUS interfaces	1
Number of RS 485 interfaces	1; Via CM DP module
Number of USB interfaces	4; 2x USB 2.0, 2x USB 3.0 on front side
Number of SD card slots	1
<b>Video interfaces</b>	
<ul style="list-style-type: none"> <li>Graphics interface</li> </ul>	1x DisplayPort

<b>Article number</b>	<b>6ES7677-2WB42-0GB0</b>
<b>1. Interface</b>	
<b>Interface types</b>	
<ul style="list-style-type: none"> <li>Number of ports</li> </ul>	2
<ul style="list-style-type: none"> <li>integrated switch</li> </ul>	Yes
<ul style="list-style-type: none"> <li>RJ 45 (Ethernet)                             <ul style="list-style-type: none"> <li>Transmission rate, max.</li> <li>Industrial Ethernet status LED</li> </ul> </li> </ul>	Yes; Via BusAdapter BA 2x RJ45 100 Mbit/s Yes
<b>2. Interface</b>	
<b>Interface types</b>	
<ul style="list-style-type: none"> <li>Number of ports</li> </ul>	1
<ul style="list-style-type: none"> <li>RJ 45 (Ethernet)                             <ul style="list-style-type: none"> <li>Transmission rate, max.</li> <li>Industrial Ethernet status LED</li> </ul> </li> </ul>	Yes; Integrated 1 000 Mbit/s No
<b>3. Interface</b>	
<b>Interface types</b>	
<ul style="list-style-type: none"> <li>RS 485</li> </ul>	Yes
<b>RS 485</b>	
<ul style="list-style-type: none"> <li>Transmission rate, max.</li> </ul>	12 Mbit/s
<b>Interrupts/diagnostics/status information</b>	
<b>Diagnostics indication LED</b>	
<ul style="list-style-type: none"> <li>RUN/STOP LED</li> <li>ERROR LED</li> <li>MAINT LED</li> </ul>	Yes Yes Yes
<b>Ambient conditions</b>	
<b>Ambient temperature during operation</b>	
<ul style="list-style-type: none"> <li>min.</li> <li>max.</li> <li>horizontal installation, min.</li> <li>horizontal installation, max.</li> <li>vertical installation, min.</li> <li>vertical installation, max.</li> </ul>	0 °C Up to 60 °C with max. 32 ET 200SP modules and 3x 100 mA USB load; up to 55 °C with max. 64 ET 200SP modules and 2x max. 500 mA and 1x max. 100 mA USB load 0 °C 60 °C 0 °C 50 °C; With max. 32 ET 200SP modules and 3x 100 mA USB load



<b>Article number</b>	<b>6ES7677-2WB42-0GB0</b>
<b>Ambient temperature during storage/transportation</b>	
<ul style="list-style-type: none"> <li>• min.</li> </ul>	-40 °C
<ul style="list-style-type: none"> <li>• max.</li> </ul>	70 °C
<b>Operating systems</b>	
Operating systems	Windows 10 IoT Enterprise LTSB 2016 (64-bit) MUI
<b>Peripherals/Options</b>	
Peripherals	
<ul style="list-style-type: none"> <li>• SD card</li> </ul>	Optionally for additional mass storage
<b>Dimensions</b>	
Width	160 mm
Height	117 mm
Depth	75 mm
<b>Weights</b>	
Weight, approx.	0.83 kg

### 12.7.12 S7-1500 Software Controller CPU 1505SP (F/T/TF)

The CPU 1505SP (F/T/TF) is a PC-based controller of the SIMATIC S7-1500 Software Controller family. You can find additional information about the CPU 1505SP (F/T/TF) in the relevant manual (<https://support.industry.siemens.com/cs/ww/en/view/109740725>). For the CPU 1505SP (F/T/TF), please also note the information in the F product information (<https://support.industry.siemens.com/cs/ww/en/view/109478599>).

#### Technical specifications

You can find technical specifications of CPU 1505SP with the article number 6ES7672-5DC11-0YA0 on the Internet under the following link (<https://support.industry.siemens.com/cs/ww/en/pv/6ES7672-5DC11-0YA0/td>).

You can find technical specifications of CPU 1505SP F with the article number 6ES7672-5SC11-0YA0 on the Internet under the following link (<https://support.industry.siemens.com/cs/ww/en/pv/6ES7672-5SC11-0YA0/td>).

You can find technical specifications of CPU 1505SP T with the article number 6ES7672-5VC11-0YA0 on the Internet under the following link (<https://support.industry.siemens.com/cs/ww/en/pv/6ES7672-5VC11-0YA0/td>).

You can find all technical specifications of CPU 1505SP TF with the article number 6ES7672-5W11-0YA0 on the Internet under the following link (<https://support.industry.siemens.com/cs/ww/en/pv/6ES7672-5WC11-0YA0/td>).

## Dimension drawings

### 13.1 CPU 1515SP PC2

This section contains a dimension drawing of the module mounted on a mounting rail. Always observe the specified dimensions for installation in cabinets.

#### Dimension drawings of the CPU 1515SP PC2

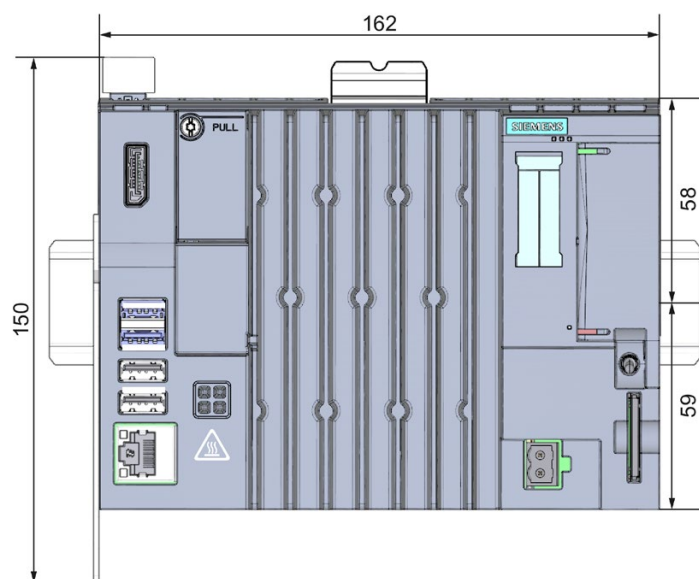


Figure 13-1 Dimension drawing CPU 1515SP PC2, front view

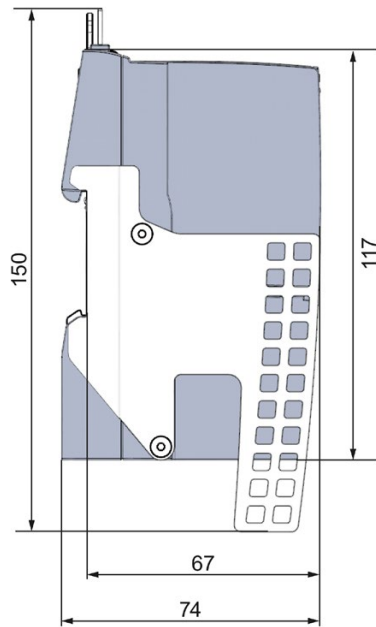


Figure 13-2 Dimension drawing CPU 1515SP PC2, side view

## Spare parts/accessories

### 14.1 Accessories/spare parts

#### Accessories for CPU 1515SP PC2

Table 14- 1 Accessories for CPU 1515SP PC2

Description	Article number
BusAdapter/media converter; 1 unit	
<ul style="list-style-type: none"> <li>BA 2×FC (PROFINET BusAdapter with FastConnect Ethernet connection)</li> </ul>	6ES7193-6AF00-0AA0
<ul style="list-style-type: none"> <li>BA 2xLC (BusAdapter 2x LC glass fiber-optic connectors, for PROFINET)</li> </ul>	6ES7193-6AG00-0AA0
<ul style="list-style-type: none"> <li>BA LC/RJ45 (media converter glass fiber-optic/CU 1x LC FO connector 1x RJ45 connector for PROFINET)</li> </ul>	6ES7193-6AG20-0AA0
<ul style="list-style-type: none"> <li>BA LC/FC (media converter glass fiber-optic/CU 1x LC FO connector and 1x FastConnect (FC) connector for PROFINET)</li> </ul>	6ES7193-6AG40-0AA0
<ul style="list-style-type: none"> <li>BA 2xSCRJ (BusAdapter 2 SCRJ FO connectors, for PROFINET)</li> </ul>	6ES7193-6AP00-0AA0
<ul style="list-style-type: none"> <li>BA SCRJ/RJ45 (media converter fiber-optic CU 1x SCRJ FO connector and 1x RJ45 connector for PROFINET)</li> </ul>	6ES7193-6AP20-0AA0
<ul style="list-style-type: none"> <li>BA SCRJ/FC (media converter fiber-optic CU 1x SCRJ FO connector and 1x FastConnect (FC) connector for PROFINET)</li> </ul>	6ES7193-6AP40-0AA0
<ul style="list-style-type: none"> <li>BA 2×RJ45 (PROFINET BusAdapter with standard Ethernet socket)</li> </ul>	6ES7193-6AR00-0AA0
<ul style="list-style-type: none"> <li>BA-Send 1xFC (1x FastConnect connector for ET-Connection)</li> </ul>	6ES7193-6AS00-0AA0
Server module; 1 unit	6ES7193-6PA00-0AA0
Strain relief for CPU 1515SP PC2	A5E32291462
SIMATIC IPC Service USB flash drive 8 GB (SLC), pre-installed BIOS-MANAGER V3.3, Image/Partition Creator V3.3 and installation CD	6AV7672-8JD01-0AA0
SIMATIC IPC Service USB flash drive 16 GB, USB3.0, pre-installed BIOS-MANAGER V3.3, Image/Partition Creator V3.4 and installation CD	6AV7672-8JD02-0AA0
SIMATIC IPC DiagMonitor software	6ES7648-6CA05-0YX0
SIMATIC PC, DisplayPort according to DVI-I for onboard graphics	6ES7648-3AF00-0XA0
Reference identification label, sheet with 16 labels, 10 units	6ES7193-6LF30-0AW0
Mounting rails, tin-plated steel strip	
<ul style="list-style-type: none"> <li>Length: 483 mm</li> </ul>	6ES5710-8MA11
<ul style="list-style-type: none"> <li>Length: 430 mm</li> </ul>	6ES5710-8MA21
<ul style="list-style-type: none"> <li>Length: 830 mm</li> </ul>	6ES5710-8MA31
<ul style="list-style-type: none"> <li>Length: 2000 mm</li> </ul>	6ES5710-8MA41

#### Online catalog

Additional article numbers can be found on the Internet in the online catalog and online ordering system (<http://www.siemens.com/automation/mall>).

## A.1 Siemens Industry Online Support

You can find current information on the following topics quickly and easily here:

- **Product support**

All the information and extensive know-how on your product, technical specifications, FAQs, certificates, downloads, and manuals.

- **Application examples**

Tools and examples to solve your automation tasks – as well as function blocks, performance information and videos.

- **Services**

Information about Industry Services, Field Services, Technical Support, spare parts and training offers.

- **Forums**

For answers and solutions concerning automation technology.

- **mySupport**

Your personal working area in Industry Online Support for messages, support queries, and configurable documents.

This information is provided by the Siemens Industry Online Support in the Internet (<http://www.siemens.com/automation/service&support>).

## A.2 Industry Mall

The Industry Mall is the catalog and order system of Siemens AG for automation and drive solutions on the basis of Totally Integrated Automation (TIA) and Totally Integrated Power (TIP).

You can find catalogs for all automation and drive products on the Internet.

### See also

Industry Mall (<https://mall.industry.siemens.com>)

## A.3 Troubleshooting

<b>Problem</b>	<b>Possible cause</b>	<b>Remedy</b>
CPU 1515SP PC2 does not work.	CPU 1515SP PC2 is not supplied with power.	Check the power supply.
Time and/or date of the CPU 1515SP PC2 not correct.	CPU 1515SP PC2 was not connected for more than 6 weeks.	Check the settings in Windows.
USB device is not working.	USB power supply is overloaded.	Use an external power supply for the USB device (see section Application planning (Page 33)).

## List of abbreviations

### B.1 Abbreviations

Abbreviation	Term	Meaning
AC	Alternating current	Alternating current
ALM	Automation License Manager	Tool for managing license keys in STEP 7
BIOS	Basic Input Output System	Basic Input Output System. A set of important software routines used after the startup of the CPU to load the operating system and to provide the routines for data exchange between hardware components.
CE	Communauté Européenne	CE label
CFast	CompactFlash ATA Serial Transfer	Memory card
CoA	Certificate of Authenticity	Certificate of Authenticity, label with Microsoft Windows "Product Key"
CoL	Certificate of License	Certificate of License for the SIMATIC software loaded
DC	Direct current	DC current
DPP	Dual-mode DisplayPort	Interface for transfer of image and video data for monitors
ESD	Components sensitive to electrostatic charge	
EN	European standard	
GbE	Gigabit Ethernet	
GRUB / GRUB2DOS	GRand Unified Bootloader	Boot Manager
HMI	Human Machine Interface	User interface
IEC	International Electrotechnical Commission	
IM	Interface module	The interface module connects the ET 200SP distributed I/O system with the IO controller and exchanges data with the I/O modules via the backplane bus.
LAN	Local Area Network	Computer network that is limited to a local area.
LED	Light Emitting Diode	Light emitting diode
LLDP	Link Layer Discovery Protocol	Protocol that enables the exchange of information between adjacent devices.
MMC	Multi Media Card	Memory card
NTFS	New Technology File System	File system that offers targeted access protection at the file level.
NVRAM	Non-Volatile Random-Access Memory	Non-volatile data memory that is RAM-based, the data content of which is retained without external power supply.
PC	Personal computer	
PELV	Protective Extra Low Voltage	PELV, previously called "extra low voltage with safe isolation", is a protective measure against electrical shock. See EN 50178.
PN	PROFINET	

Abbreviation	Term	Meaning
PG	Programming device	Compact programming device which meets the special requirements of industry. The PG is fully equipped for programming SIMATIC PLCs.
PS	Power supply	Power supply
PT	Power Tags	Process tags; tags enable data exchange between the components of an automation process, for example, between the HMI device and the controller.
RAM	Random Access Memory	Main or work memory of a computer with direct access, allowing read access to data and editing.
RT	Runtime	
SD	Secure Digital card	Memory card
SELV	Safety Extra Low Voltage	Safety Extra Low Voltage; electrical circuit in which the voltage cannot exceed 30 V AC (RMS), 42.4 V AC peak or 60 V DC under NORMAL CONDITIONS and CONDITIONS OF A SINGLE FAULT, including ground faults in other circuits.
UL	Underwriters Laboratories Inc.	
UWF	Unified Write Filter	Configurable write protection under Windows 10, for protection of data carriers (for example, CFast card, internal USB drives, etc.)"Unified Write Filter (UWF)" write filter (Page 57)
USB	Universal Serial Bus	Serial bus system for connecting a computer to external devices.



# Glossary

## Cold restart

A startup procedure commencing when the CPU is switched on. Upon a cold restart, the system typically performs some basic hardware checks and then loads the operating system from the hard disk into the work memory.

## Controller

Integrated hardware and software controlling the operation of a specific internal or I/O device (e.g. keyboard controller).

## Device configuration

The device configuration of a PC/programming device includes information on the features and options of the PC/programming device such as memory configuration, drive types, monitor, network address etc. The data is stored in a configuration file and is used by the operating system to load the corresponding device drivers or assign device parameters.

## Drivers

Program sections of the operating system. They convert data from the user programs to the specific formats required by the I/O devices (e.g. hard disks, monitors, printers).

## Ethernet

Local network (bus structure) for text and data communication with a data transmission rate of 10/100/1000 Mbps.

## Image

An image is a copy of hard-disk partitions, for example, which is stored as backup in a file so that it can be restored if necessary.

## Interface

- Connection between individual hardware elements such as PCs, programming device, printer or screen by means of physical plug-in connections (cables).
- Connection between different programs to allow them to be used together.

## LAN

Local Area Network: LAN refers to a local network consisting of a group of computers and other devices which are distributed over a relatively restricted area and connected through communication lines. The devices connected to a LAN are referred to as nodes. The purpose of networks is the shared use of files, printers or other resources.

## License key

The license key is the electronic license stamp of a license. Siemens AG provides a license key for software that is protected by licensing laws.

## Operating system

Generic term which describes all functions for controlling and monitoring user program execution and distribution of system resources to the user programs as well as maintenance of the operating mode in cooperation with the hardware.

## Power options

The power options can be used to reduce the power consumption of the computer while still keeping it ready for immediate use. In Windows via **Start > Control Panel > Hardware and Sound > Power Options**.

## Restart

The restart of the computer that is already in operation using, for example, the <Ctrl+Alt+Del> shortcut without switching off the power supply.

## Restore USB stick

You use the Restore USB stick to reset your system partition or the entire hard disk to the delivery state in the event of an error. The USB stick contains all the necessary image files and is bootable.

## ROM

Read Only Memory. ROM refers to a read-only memory where each memory location can be addressed individually. The stored programs or data are hard-coded and are preserved even in the event of a power failure.

## S.M.A.R.T

Self-Monitoring, Analysis and Reporting Technology (SMART or S.M.A.R.T.) is an industry standard for storage media. It provides for permanent monitoring of relevant parameters and thus early recognition of pending defects.

## **SATA**

Serial ATA. An interface for hard disk drives and optical drives with serial data transfer.

## **SETUP (BIOS setup)**

A program used to determine information on the device configuration. The device configuration of the CPU 1515SP PC2 is preset. Changes must be made whenever a memory expansion, new modules or drives are to be activated.

# Index

## A

- AC
  - Alternating current, 126
- Accessories, 123
- Address space, 33
- ALM
  - Automation License Manager, 126
- Alternating current
  - AC, 126
- Ambient conditions
  - Climatic, 75
  - Mechanical, 74
- Approvals, 66
- Areas of application, 17
  - Fail-safe CPUs, 17
  - Technology CPUs, 17
- Automation License Manager, 48
  - ALM, 126

## B

- Basic Input Output System
  - BIOS, 126
- Basic knowledge, 6
- BIOS
  - Basic Input Output System, 126
- BIOS setup, 56
  - changing the device configuration, 56
- Boot Manager, 50

## C

- CE
  - Communauté Européenne, 126
- Certificate of Authenticity
  - CoA, 126
- Certificate of License
  - Col, 126
- CFast
  - CompactFlash ATA Serial Transfer, 126
- CFast card
  - insert, 64
  - Partitioning, 59
  - remove, 64

- Characteristics
  - Control cabinet, 19
  - Degree of protection, 19
  - General, 19
  - Interfaces, 19
  - Power supply, 19
  - Pre-installations, 19
- Climatic ambient conditions, 75
- CoA
  - Certificate of Authenticity, 126
- Col
  - Certificate of License, 126
- Commissioning
  - Commissioning procedure, 43
  - Creating the configuration, 46
  - Notes, 42
  - Operator user, 44
  - Procedure, 44
  - Requirements, 43
  - Setting the IP address, 46
- Communauté Européenne
  - CE, 126
- CompactFlash ATA Serial Transfer
  - CFast, 126
- Components
  - BusAdapter, 23
  - Mounting rail, 22
  - Overview of CPU 1515SP PC2, 22
  - Server module, 23
- Components sensitive to electrostatic charge
  - ESD, 126
- Configuration
  - Commissioning, 46
  - Non-isolated configuration, 38
  - Reference potential of the load voltage, 38
  - TN-S grid, 38
- Conventions, 7
- CPU
  - Damage, 29
  - LED displays, 51
  - Switching on, 50
  - Unpacking, 29
- CPU
  - Switching off, 50
- CPU 1515SP PC2
  - Components, 22
  - Dimension drawing, 121

## D

- Data
  - Backup, 58
  - Restoring, 58
- Data backup, 58
  - SIMATIC IPC Image & Partition Creator, 58, 58
- DC
  - Direct current, 126
- Degree of protection, 76
- Dimension drawing
  - CPU 1515SP PC2, 121
- Direct current
  - DC, 126
- Disposal
  - Recycling, 65
- Downloading a project
  - Target system, 47
- DPP
  - Dual-mode DisplayPort, 126
- Dual-mode DisplayPort
  - DPP, 126

## E

- Electromagnetic compatibility (EMC), 71
- EMC (Electromagnetic compatibility), 71
- EN
  - European standard, 126
- ESD
  - Components sensitive to electrostatic charge, 126
- European standard
  - EN, 126

## F

- Functions, 55, 55
  - BIOS setup, 56
  - Monitoring drives, 55
  - Monitoring functions, 54
  - Operating hours counter, 55
  - Power options, 56
  - Retentive memory NVRAM, 55
  - SIMATIC IPC DiagBase, 54
  - SIMATIC IPC DiagMonitor, 54
  - Temperature monitoring, 55

## G

- GbE
  - Gigabit Ethernet, 126

- Gigabit Ethernet
  - GbE, 126
- GRand Unified Bootloader
  - GRUB/GRUB2DOS, 126
- GRUB/GRUB2DOS
  - GRand Unified Bootloader, 126

## H

- HMI
  - Human Machine Interface, 126
- HMI connection
  - establish, 47
- HMI devices
  - Updating software, 62
- Human Machine Interface
  - HMI, 126

## I

- Identification data
  - Repairs, 30
- IEC
  - International Electrotechnical Commission, 126
- IM
  - Interface module, 126
- Installation rules, 32
- Insulation, 76
- Interface module
  - IM, 126
- International Electrotechnical Commission
  - IEC, 126
- IP address
  - Commissioning, 46
  - Setting, 46

## L

- LAN
  - Local Area Network, 126
- Language packs
  - for installing Windows, 62
  - Windows, 62
- LED
  - Light Emitting Diode, 126
- LED displays
  - CPU, 51
  - ERROR, 52
  - MAINT, 52
  - Meaning, 52

- Power, 52
- RUN/STOP, 52
- License
  - Certificate of License, 49
  - Software, 48
- License key
  - Backup, 49
  - Restore, 49
  - transfer, 48
- Light Emitting Diode
  - LED, 126
- Link Layer Discovery Protocol
  - LLDP, 126
- LLDP
  - Link Layer Discovery Protocol, 126
- Local Area Network
  - LAN, 126

**M**

- MAC addresses
  - Assignment, 25
- Maximum configuration, 28
  - Address space, 33
  - Electrical, 33
  - Mechanical, 33
  - Rules, 33
  - USB load, 33
- mechanical ambient conditions, 74
- Minimum clearances
  - Mounting, 32
- MMC
  - Multi Media Card, 126
- Mode selector
  - Positions, 26
- Monitoring functions, 54
- Mounting
  - Ambient temperatures, 28, 33
  - Fixing strain relief, 34
  - Installation location, 28
  - Installation position, 28
  - Installing the CPU, 34
  - Maximum configuration, 28
  - Minimum clearances, 32
  - Mounting rail, 31
  - Required tool, 34
  - Rules, 32
  - Strain relief, 41
  - Uninstalling the CPU, 35
  - USB load, 33
- Mounting rail
  - Mounting, 31

- Multi Media Card
  - MMC, 126

**N**

- Network connection
  - HMI, 47
- Networks
  - Ethernet, 40
  - PROFIBUS, 40
  - PROFINET, 40
- New Technology File System
  - NTFS, 126
- Non-Volatile Random-Access Memory
  - NVRAM, 126
- Notes on use, 16
  - Ambient conditions, 16
  - Hazards at an unprotected machine or plant, 16
- NTFS
  - New Technology File System, 126
- NVRAM
  - Non-Volatile Random-Access Memory, 126
  - Retentive memory, 55

**O**

- Operator controls and display elements, 24
  - CFast card, 25
  - Interfaces, 24
  - MAC addresses, 25
  - Mode selector, 26
  - Power supply, 26
  - SD/MMC card, 25
  - USB connections, 25
- Operator user
  - Commissioning, 44

**P**

- Packaging
  - CPU, 29
  - Damage, 29
- Partitioning
  - CFast card, 59
- PC
  - Personal computer, 126
- PELV
  - Protective Extra Low Voltage, 126
- Personal computer
  - PC, 126

PG  
 Programming device, 127

PN  
 PROFINET, 126

Power options  
 Functions, 56

Power supply  
 PS, 127

Power Tags  
 PT, 127

Procedure  
 Commissioning, 44

PROFINET  
 PN, 126

Programming device  
 PG, 127

Proof of license, 27  
 Certificate of Authenticity, 30  
 Certificate of License, 30

Protection class, 76, 76

Protective Extra Low Voltage  
 PELV, 126

PS  
 Power supply, 127

PT  
 Power Tags, 127

**R**

Radio interference, 70, 72

RAM  
 Random Access Memory, 127

Random Access Memory  
 RAM, 127

Rated voltage, 77

Recycling  
 Disposal, 65

Repair, 63

Restoring the delivery state, 60  
 Requirements, 60  
 with restore USB stick, 61

Retentive memory NVRAM  
 Functions, 55

RT  
 Runtime, 127

Runtime  
 RT, 127

**S**

Safety Extra Low Voltage  
 SELV, 127

Safety information, 14  
 ESD guidelines, 15  
 Repairs, 14  
 Safe operation of a plant, 14

Sample configuration, 20  
 Configuration, 20

Scope, 7  
 Documentation, 7

Scope of delivery, 27  
 CPU 1515SP PC2, 27  
 CPU 1515SP PC2 F, 27  
 CPU 1515SP PC2 T, 27  
 CPU 1515SP PC2 TF, 27  
 Proof of license, 27

SD  
 Secure Digital card, 127

Secure Digital card  
 SD, 127

SELV  
 Safety Extra Low Voltage, 127

Sending in the device, 63

Shipping conditions, 73

SIMATIC IPC DiagBase, 54

SIMATIC IPC DiagMonitor, 54

SIMATIC IPC Image&Partition Creator  
 Data backup, 58

SIMATIC IPC Service USB flash drive  
 Data backup, 58

Software  
 update for HMI devices, 62

Spare parts, 123

Standards, 66

Storage conditions, 73

Strain relief  
 mounting, 41

**T**

Technical specifications  
 Climatic ambient conditions, 75  
 Electromagnetic compatibility (EMC), 71  
 mechanical ambient conditions, 74  
 Shipping and storage conditions, 73  
 Standards and approvals, 66

Temperature monitoring, 55

Test voltage, 76

Transfer  
 License key, 48

## U

### UL

Underwriters Laboratories Inc., 127

Underwriters Laboratories Inc.

UL, 127

Unified Write Filter

UWF, 127

Universal Serial Bus

USB, 127

Updates

for installing Windows, 63

USB

Universal Serial Bus, 127

Use

in industrial environments, 70

in mixed areas, 70

in residential areas, 70

UWF

Unified Write Filter, 127

## W

Windows

Installing updates, 63

Language packs, 62

Wiring, 37

Block diagram, 37

Pin assignment, 37

Rules and regulations, 36

## Z

zone 2 explosion-proof atmosphere, 77